

The
CERAMIC INFRARED COOKTOP
by MegaChef

**PORTABLE DUAL VITRO-CERAMIC
INFRARED COOKTOP**

MC-6206A



USER MANUAL

Thank you for purchasing our product!

Make sure you have read the manual before using this product.

Please use the appliance in accordance with the instructions.

Please save these instructions.

This item is intended for household use only.

IMPORTANT SAFEGUARDS

1. **READ ALL INSTRUCTIONS.**
2. After unpacking, make sure that the appliance is intact with no signs of damage caused by transport. If in doubt, do not use the appliance and contact us immediately at 1-800-788-7618.
3. If the cooktop is cracked, immediately stop usage, cut off the power supply and contact us directly at 1-800-788-7618.
4. Ensure that the appliance is securely grounded to the appropriate voltage wall outlet.
5. The surface of the cooktop will get extremely hot during operation. **Do not touch the surface or hotplate when the appliance is operating or cooling down after use.**
6. Do not allow the cord to touch the hotplate during operation or cooling down after use.
7. Do not leave the appliance unattended whilst in operation.
8. Do not leave the appliance without supervision when oil and/or fat is being heated.
9. To protect against fire, electric shock, and injuries, **DO NOT IMMERSE THE CORD OR PLUG IN WATER OR OTHER LIQUIDS.**
10. **CLOSE SUPERVISION IS REQUIRED WHEN USING THE UNIT NEAR OR BY CHILDREN.**
11. Unplug from outlet when not in use and before cleaning. Allow at least 30 minutes for the unit to cool down before cleaning and storing.
12. Do not operate the appliance if it has a damaged cord or plug, or after it has malfunctioned or has been damaged in any manner.
13. Do not operate the appliance outdoors without taking the adequate precautions .
14. Do not let the power cord hang over the edge of tables or counters, or touch hot surfaces.
15. Do not place on or near hot gas or electric burner, or in a heated oven.
16. Keep clear of any flammable materials such as curtains, clothes, etc.

CARING AND MAINTENANCE

1. Always ensure the appliance is unplugged from the power outlet and has thoroughly cooled down before cleaning or storing. Please allow at least 30 minutes for the appliance to cool down.
2. Wipe clean with a slightly damp soapy cloth and dry with a paper towel immediately. Do not use any abrasive cleaning agents nor allow water to spill or seep into the unit. Never immerse the cooktop, cord or plug in water or any other liquid.
3. Ensure that there is no standing water left after cleaning and store in a cool, dry place.

DISPOSING OF YOUR UNIT



This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. Please visit www.epa.gov/recycle/electronics-donation-and-recycling for access to information about the recycling of electrical items. Please arrange to take this appliance to your local Civic Amenity site for recycling once it has reached the end of its life.

BEFORE USE

1. Insert the four (4) non-slip rubber feet into the feet holes located at the bottom of the appliance.
2. Before using your unit for the first time, turn the temperature knob to the highest setting (position 5) and let the hot plate heat up for 3 to 5 minutes. This will allow the coating designed to protect the hot plates prior to first use to fully evaporate. A presence of light smoke and smell is normal and will disappear. Please ensure that nothing is sitting on the hot plate during this process.

OPERATING INSTRUCTIONS

1. Turn the temperature knob to the desired setting. The power indicator will turn on to indicate that the hot plate is warming up to the set setting.
2. Once the set temperature has been reached, the power indicator will turn off to indicate that the hot plate is now ready for cooking.
3. To turn the hot plate or the appliance off, simply turn the temperature knob to the 0 position.
4. After use, unplug the appliance from the wall outlet and allow to cool thoroughly before cleaning and storing.

NOTE:

- *Position 1 is the lowest setting and can be used for keeping the food warm. For cooking, choose between any settings between 2 and 5.*
- *To preserve the life of the glass ceramic cooktop, use only stainless steel, aluminum and ceramic cookware. DO NOT USE GLASS as it will scratch the surface of the cooktop and may severely damage it.*
- *Cooking pots and pans used with this appliance should have a flat and smooth base. Do not use with cookware that have concave or uneven base.*
- *Ensure that the diameter of the cookware used is smaller than the diameter of the heating plates.*

17. Do not place metallic objects such as cutlery or utensils directly on the heating plates as they will get extremely hot and may result in serious injuries.
18. Unplug the unit when it is not in use.
19. Do not use appliance for other than intended use. Improper use may result in risk of fire, electric shock and/or serious injuries.
20. Ensure the appliance is used on a stable and heat resistance surface.
21. This appliance is not intended for use by children, or any person with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given authorization or instruction concerning the use of the appliance by a person responsible for their safety.
22. Do not attempt to repair, disassemble or modify the appliance. Any servicing should be performed by an authorized service representative. For more information, contact us directly at 1-800-788-7618.

CONTENTS

IMPORTANT SAFEGUARDS	2
COMPONENTS	5
BEFORE USE	6
OPERATING INSTRUCTIONS	6
CARING AND MAINTENANCE	7
DISPOSING OF YOUR UNIT	7

COMPONENTS

