 


VISSANI™

Item # 1009025762
Model # VXWC180BSSL

USE AND CARE GUIDE

17.5 IN. FREESTANDING WINE COOLER IN STAINLESS STEEL

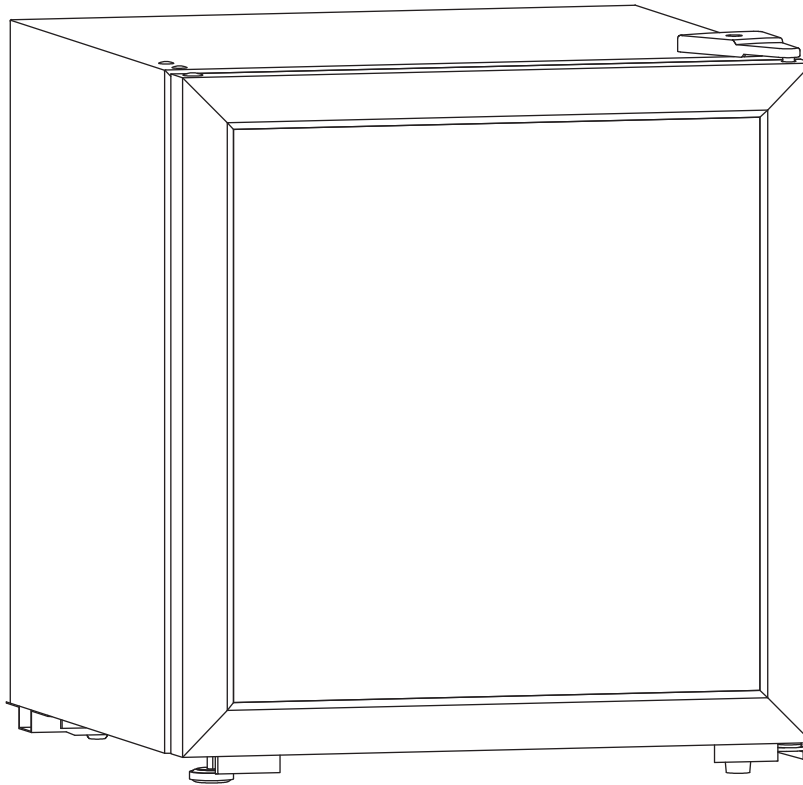

Questions, problems, missing parts? Before returning to the store,
call Vissani Customer Service
8 a.m. – 7 p.m., EST, Monday-Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-847-7264

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Vissani through the purchase of this wine cooler. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Vissani!

Table of Contents

Table of Contents.....	2
Safety Information.....	2
Warranty.....	3
What is Covered.....	3
What is Not Covered.....	3
Pre-operation.....	4
Before You Begin.....	4
Setting Up The Appliance.....	4

Tools required.....	4
Package Contents.....	5
Door Reversal Instructions.....	6
Operation.....	7-8
Maintenance.....	9
Care and Cleaning.....	9
Troubleshooting.....	10

Safety Information

- This appliance is not intended for use by persons (including children) whose physical, sensory or mental capabilities may be different or reduced, or who lack experience or knowledge, unless such persons receive supervision or training to operate the appliance by a person responsible for their safety.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farmhouses and by clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments;
 - Catering and similar non-retail applications.
- This appliance must be grounded. Grounding reduces the risk of electrical shock by providing an escape wire for the electrical current. This appliance has a cord that has a grounding wire with a 3-prong plug. The power cord must be plugged into an outlet that is properly grounded. If the outlet is a 2-prong wall outlet, it must be replaced with a properly grounded 3-prong wall outlet. The serial rating plate indicates the voltage and frequency the appliance is designed for.

WARNING:

- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service agent if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.



DANGER:

- Risk of fire or explosion. Flammable refrigerant used. Do not puncture refrigerant tubing.
- Do not use mechanical devices to defrost refrigerator.
- Ensure that servicing is done by factory authorized service personnel, to minimize product damage or safety issues.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified person in order to avoid hazard.
- Consult repair manual or owner's guide before attempting to service this product. All safety precautions must be followed.
- Dispose of properly in accordance with federal or local regulations.
- Follow handling instructions carefully.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Risk of child entrapment. Before throwing away an old appliance:
 - Remove the door or lid.
 - Leave shelves in place so that children may not easily climb inside.
 - Do not add a lock to the door or lid. This can cause child entrapment and harm.



CAUTION: Children should be supervised to ensure that they do not play with the appliance.



NOTE: Do not connect your appliance to extension cords or together with another appliance in the same wall outlet. Do not splice the power cord. Do not under any circumstances cut or remove the third ground prong from the power cord. Do not use extension cords or ungrounded (two prongs) adapters.

Warranty

WHAT IS COVERED

This quality product is warranted to be free from manufacturer's defects in material and workmanship, provided that the unit is used under the normal operating conditions intended by the manufacturer. This warranty is available only to the person to whom the unit was originally sold by The Home Depot and is non-transferable.

- Plastic parts are warranted for thirty (30) days from the date of purchase, with no extensions provided.
- During the first twelve (12) months, any functional parts of this product found to be defective, will be repaired or replaced, at warrantor's option, at no charge to the original purchaser.
- To obtain service, contact The Home Depot where the unit was purchased. If service is performed on the unit by anyone other than an authorized service depot, all obligations of The Home Depot under this warranty shall be void.
- It is the responsibility of the purchaser to transport the appliance to the nearest authorized service depot.
- Transportation charges to and from the service location are not protected by this warranty and are the responsibility of the purchaser.
- Nothing within this warranty shall imply that The Home Depot will be responsible or liable for any spoilage or damage to food or other contents of this appliance, where due to any defect of the appliance, or its use, whether proper or improper.

WHAT IS NOT COVERED

No warranty or insurance herein contained or set out shall apply when damage or repair is caused by any of the following:

- 1) Power failure.
- 2) Damage in transit or when moving the appliance.
- 3) Improper power supply such as low voltage, defective house wiring or inadequate fuses.
- 4) Accident, alteration, abuse or misuse of the appliance such as inadequate air circulation in the room or abnormal operating conditions (ie. extremely high or low room temperature).
- 5) Use for commercial or industrial purposes (ie. If the appliance is not installed in a domestic residence).
- 6) Fire, water damage, theft, war, riot, hostility, acts of God such as hurricanes, floods etc.
- 7) Service calls resulting in customer education.
- 8) Improper installation (ie. building-in of a free standing appliance or using an appliance outdoors that is not approved for outdoor application, including but not limited to: garages, patios, porches or anywhere that is not properly insulated or climate controlled).

Proof of purchase date will be required for warranty claims; retain bills of sale. In the event that warranty service is required, present the proof of purchase to our authorized service depot.

Contact the Customer Service Team at 1-855-847-7264 or visit www.homedepot.com.

Pre-operation

BEFORE YOU BEGIN



IMPORTANT: If the appliance is placed on its back or side for any length of time during this process, it must be allowed to remain upright for 6 hours before plugging it in to avoid damage to the internal components.

Read instructions carefully before operating.

SETTING UP THE APPLIANCE

- Two people should be used when moving the appliance.
- Remove interior and exterior packaging prior to installation. Wipe the outside of the appliance with a soft, dry cloth and the inside with a lukewarm wet cloth.
- Place the appliance on a floor that is strong enough to support it when it is fully loaded.
- Do not place the appliance in direct sunlight or near sources of heat, such as a stove or heater, as this can increase electrical consumption. Extreme cold ambient temperatures may also cause the appliance to perform improperly.
- Do not use the appliance near water, for example in a wet basement or near a sink.
- This appliance is intended for household use only. It is not designed for outside installation, including anywhere that is not temperature controlled (garages, porches, vehicles, etc.).
- Before connecting the appliance to a power source, let it stand upright for approximately six hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- This appliance is 44.5 cm (17.5 inches) wide by 51 cm (20 inches) high by 50.5 cm (19.9 inches) deep. Do not cover any of the ventilation openings with any material as the appliance needs adequate space to breathe.
- Allow 12.7 cm (5 inches) of space between the back, sides and top of the appliance and all adjacent walls.
- This appliance is intended for free-standing installation only and is not intended to be built into a cabinet or counter. Building in this appliance can cause it to malfunction.



CAUTION: Ensure that the door is fully closed when the appliance is in operation. Failure to fully close the door can lead to excessive condensation and potential water damage to flooring under the appliance. Vissani will not be responsible for damages from misuse.

 
TOOLS REQUIRED



Flat head screwdriver

Pre-operation (continued)

PACKAGE CONTENTS

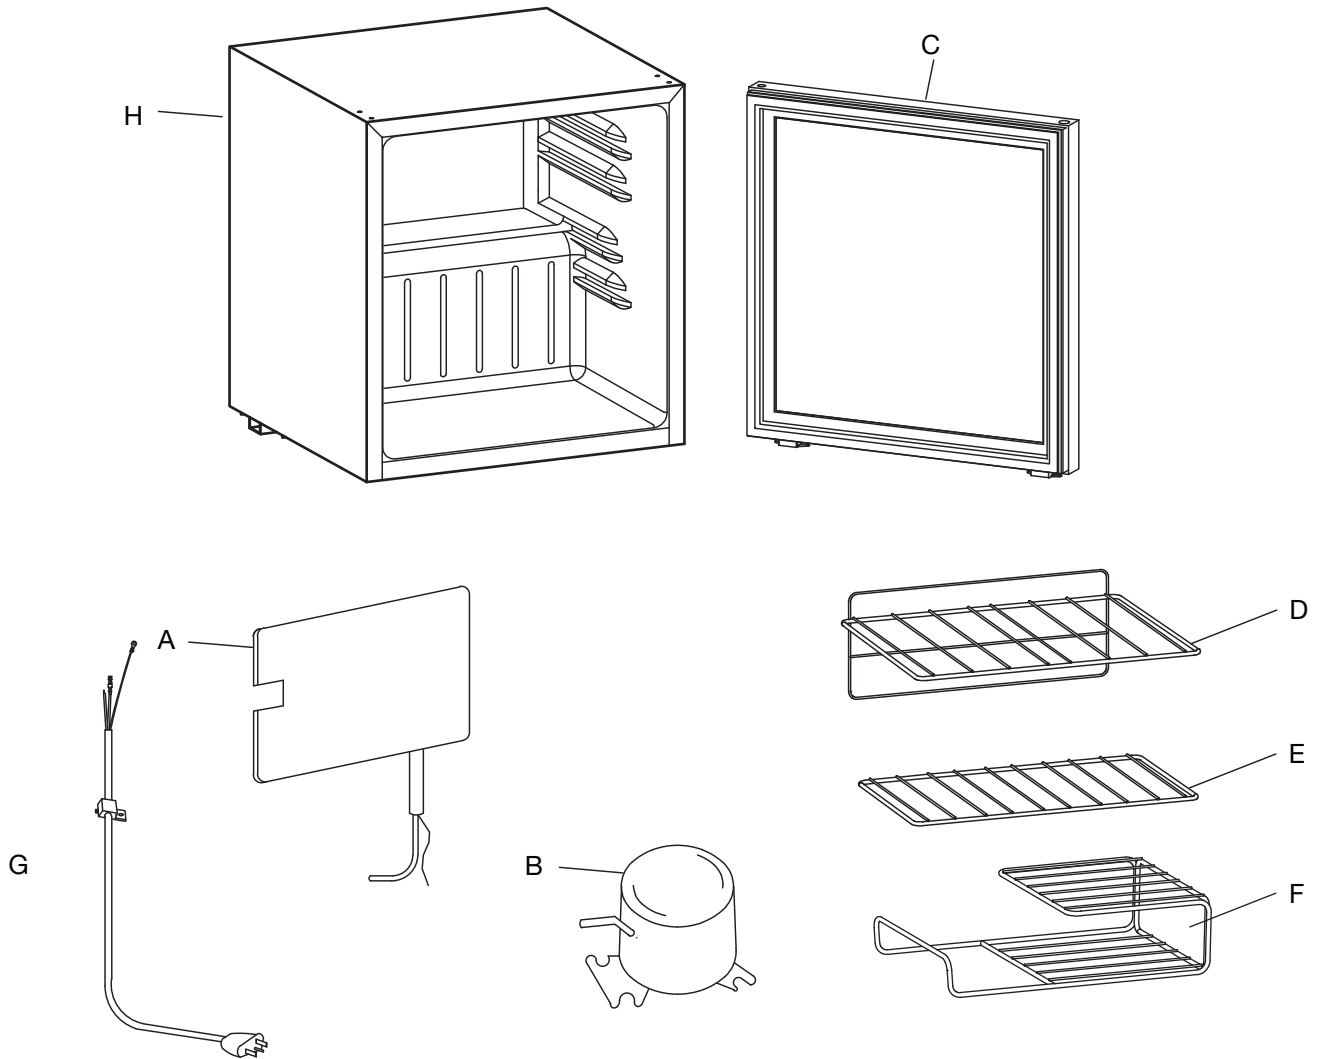


Part	Description
A	Evaporator
B	Compressor
C	Door
D	Upper shelf
E	Middle shelf
F	Bottom shelf
G	Power plug
H	Cabinet

Pre-operation (continued)

DOOR REVERSAL INSTRUCTIONS


1 Removing Hinge Assembly

 - Remove the cabinet hole covers (1) from the top left side of the cabinet (H).
- Remove the screws (2), hinge cover (3), screws (4), upper door hinge (5) and upper hinge gasket (6) from the top right side of the cabinet (H).

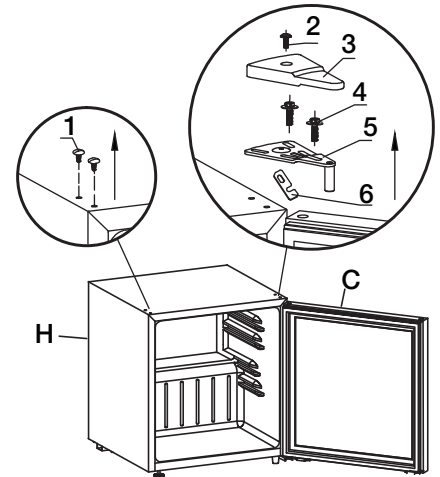


2 Switching The Feet

 - Remove the fixing foot (10), screw (9), screw (4), bottom hinge (8) and thick hinge gasket (7) from the lower right side of the cabinet (H).
- Remove the adjustable feet (11) and screws (4) from the lower left corner of the cabinet (H).
- Install the bottom hinge (8) and all accessories on the bottom left side of the cabinet (H).
- Exchange adjustable foot (11) and fixed foot (10) location and install.

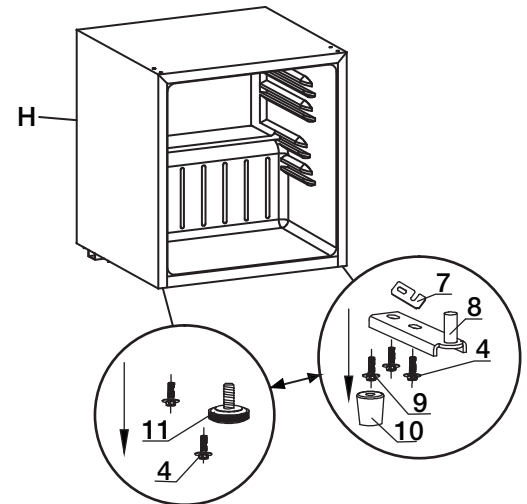

3 Installing The Door Hole Covers

 
- Install the door (C) to the cabinet (H).
- Install the upper thin hinge gasket (6) and upper hinge (5), and secure them with screws (4).
- Install the upper hinge cover (3) and secure with the screws (2).
- Install the cabinet hole cover (1).

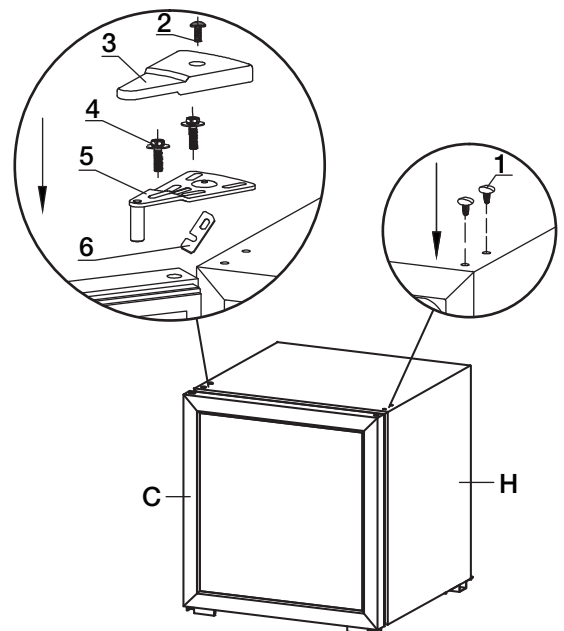

Operation


1 Learning the Appliance Features

 - The thermostat dial (1) (not shown) is mounted on the rear wall. It is for controlling the temperature inside the wine cooler. The compressor activates as soon as the temperature rises above the desired level.
- The tempered glass door (2) is tinted for UV protection while still allowing for easy interior viewing.
- The magnetic door gaskets (3) are tight fitting seals that retain all the cooling power and humidity levels.
- The plastic coated shelves (4) are corrosion resistant, rustproof, and removable for easy cleaning.
- The leveling leg (5) adjusts to level the appliance.

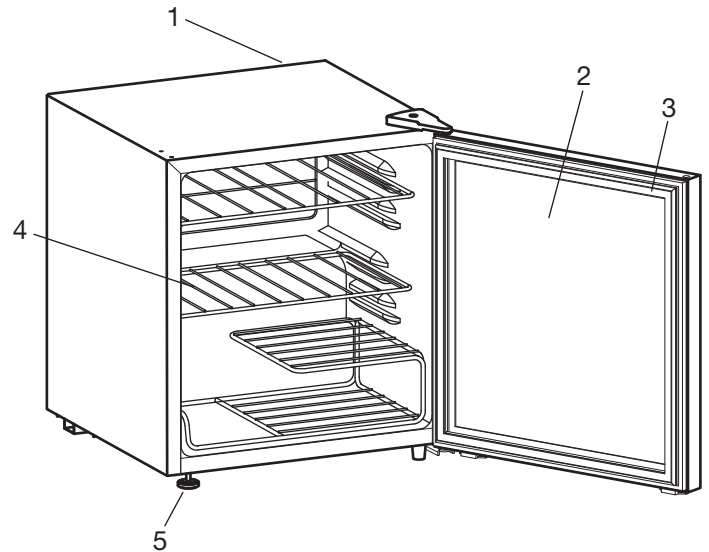


2 Adjusting The Temperature

 - The temperature is controlled by the temperature knob on the back of the appliance.
- On the graduated blue dial, the thicker, darker blue indicates colder temperatures and the thinner, lighter blue indicates warmer temperatures.
- The internal temperature will vary depending on the ambient room temperature, the quantity of wine stored, and the frequency that the door is opened.
- Setting the control knob to just past the middle point of the graduated blue line should provide adequate cooling.
- To turn the appliance off, turn the control knob to the "0" position.

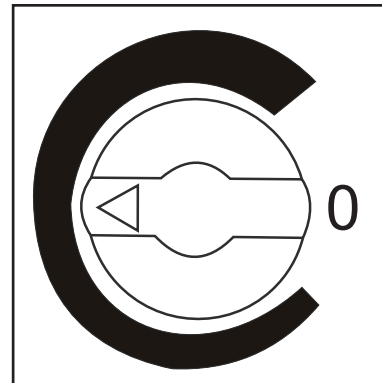

3 Leveling Instructions

 
- There is an adjustable leg on the bottom of the appliance that can be turned up or down to ensure that the appliance is level.
 - Turn the leveling leg counterclockwise as far as it will go, until the top of the foot is touching the bottom of the cabinet.
 - Slowly turn the leveling leg clockwise until the appliance is level.

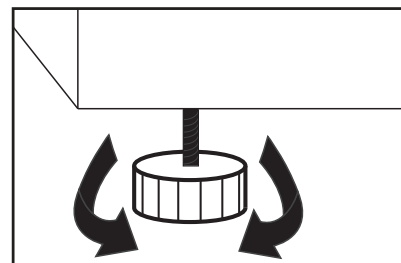

Operation (continued)

4 Loading Beverages in the Appliance

 - This appliance can hold up to 17 wine bottles of 750 ml size.
- Place four bottles on the two top shelves (D, E).
- Place three bottles on top of the four bottles on the second shelf (E).
- Place three bottles on each layer of the bottom shelf (F).

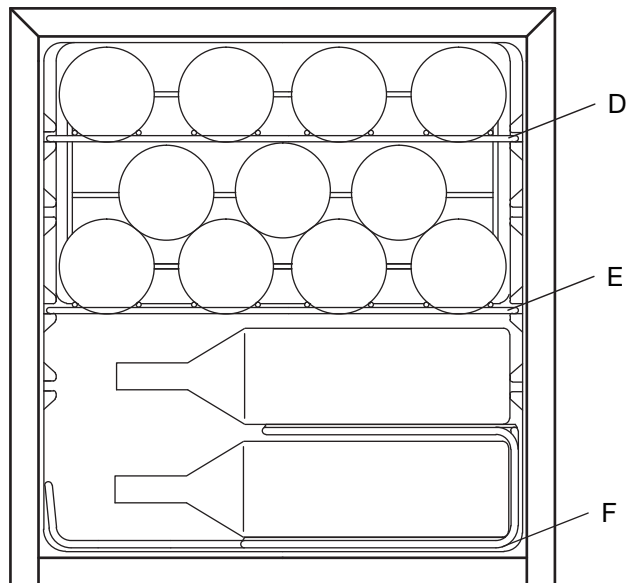


5 Moving/Removing Shelves

- The partition can be directly pulled out when replacing the shelf.
- To install the shelf, make sure it is firmly seated on the bracket and then push inward until it cannot be pushed.



 NOTE: Do not cover shelves with aluminum foil or any other material that will prevent air circulation within the appliance as this can adversely affect internal temperature.

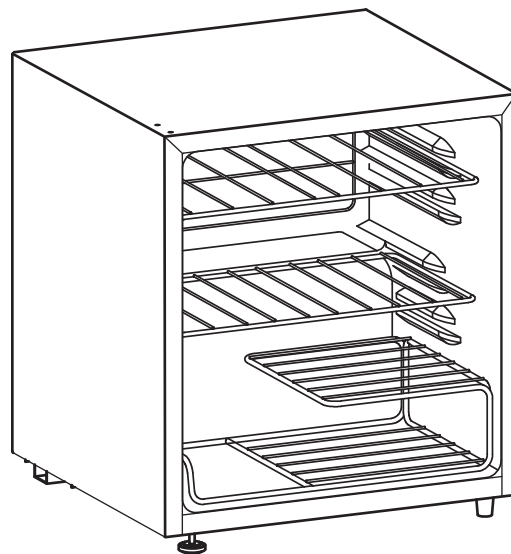

Maintenance

VACATION

- Short vacations: Leave the appliance operating during vacations of less than three weeks.
 - Turn the adjustable foot up to the base to avoid damage.
 - Protect the outside of the appliance with a blanket or similar item.
 - Be sure the appliance stays in the upright position during transportation.
- Long vacations:
 - If the appliance will not be used for several months, remove all items and turn off the appliance.
 - Clean and dry the interior thoroughly.
 - To prevent odor and mold growth, leave the door open slightly, blocking it open if necessary.

MOVING

- Make sure the appliance is empty.
- Secure the shelves with tape.
- If the appliance is placed on its back or side during transportation, upon reaching the destination, allow it to remain upright for 6 hours before plugging in to avoid damage to internal components.

DISPOSAL

- This appliance may not be treated as regular household waste; it should be taken to the appropriate waste collection point for recycling of electrical components.
- For information on local waste collection points, contact your local waste removal agency or government office.

Care and Cleaning

CLEANING

Ensure the appliance is unplugged before cleaning.

- To clean the inside of the appliance, use a soft cloth and a solution of a tablespoon of baking soda to one quart of water, or a mild soap solution, or some mild detergent.
- Wash removable shelves in a mild detergent solution, then dry and wipe with a soft cloth.
- Clean the outside with a soft, damp cloth and some mild detergent.
- It is important to keep the area clean where the door seals against the cabinet. Clean this area with a soapy cloth. Rinse with a damp cloth and let dry.



NOTE: Do not use cleaners containing ammonia or alcohol on the appliance. Ammonia or alcohol can damage the appearance of the appliance. Never use any commercial or abrasive cleaners or sharp objects on any part of the appliance.

POWER FAILURE

Most power failures are corrected within a few hours and should not affect the temperature of your appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, take the proper steps to protect your contents.



NOTE: Wait 3 to 5 minutes before attempting to restart the refrigerator if operation has been interrupted.

DEFROST

This appliance is equipped with an automatic defrost function and does not require manual defrosting. Defrost water from the appliance is channeled into a drip tray located above the compressor. Heat transfer from the compressor causes the defrost water to evaporate.

Troubleshooting

Problems	Possible Causes	Solutions
No power.	<ul style="list-style-type: none"> <input type="checkbox"/> A fuse may be blown or the circuit breaker tripped. <input type="checkbox"/> The plug is not fully inserted into the wall outlet. 	Check both causes and plug in again.
Internal temperature not cold enough.	<ul style="list-style-type: none"> <input type="checkbox"/> Temperature setting is too warm. <input type="checkbox"/> The door is not shut properly or opened excessively. <input type="checkbox"/> Recently added a large quantity of warm food to the cabinet. <input type="checkbox"/> Close proximity to heat source or direct sunlight. <input type="checkbox"/> Ambient temperature or humidity is very high. 	Check all causes and improve accordingly.
Refrigerator runs continuously.	<ul style="list-style-type: none"> <input type="checkbox"/> Temperature setting is too cold. <input type="checkbox"/> The door is not shut properly or opened excessively. <input type="checkbox"/> Recently added a large quantity of warm food to the cabinet. <input type="checkbox"/> Close proximity to heat source or direct sunlight. <input type="checkbox"/> Ambient temperature or humidity is very high. 	Check all causes and improve accordingly.
Refrigerator makes a gurgling noise when operating.	<ul style="list-style-type: none"> <input type="checkbox"/> This noise is completely normal. The refrigerant inside the appliance will make a gurgling noise as it changes from a liquid to a gas and back again. 	/
What are the standard wattage and amps used?	/	This information can be found on the rating plate located on the back of the cabinet.
Can I use an extension cord?	/	No, an extension cord may not be used.
I had my fridge on its side to bring it home. Do I have to let it sit? And for how long?	/	Yes, please allow it to sit upright for six hours before plugging it in.
How do I set the temperature?	/	The thinner, lighter blue on the temperature dial indicates warmer temperatures, and the thicker, darker blue indicates colder temperatures

VISSANI™

Questions, problems, missing parts? Before returning to the store,
call Vissani Customer Service
8 a.m. – 7 p.m., EST, Monday-Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-847-7264

HOMEDEPOT.COM

Retain this manual for future use.