



Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

b) This product is for indoor use only. The electrical rating 0.64 A 120 V 60 Hz.

c) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.

d) This seasonal use product is not intended for permanent installation or use.

e) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.

f) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.

g) Do not let lamps rest on the supply cord or on any wire.

h) Unplug the product when leaving the house, when retiring for the night, or if left unattended.

i) This is an electric product – not a toy! To avoid risk of fire, burns personal injury and electric shock it should not be played with or placed where small children can reach it.

j) Do not use this product for other than its intended use.

k) Do not hang ornaments or other objects from cord, wire, or light string.

l) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.

m) Do not cover the product with cloth, paper or any material not part of the product when in use.

n) Do not move the tree by pulling the tree tips or tree branches.

o) Read and follow all instructions that are on the product or provided with the product.

p) **SAVE THESE INSTRUCTIONS.**

CAUTION! – ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ASSEMBLING OR DISASSEMBLING.

CAUTION

1. The product consists of non-replaceable LED lamps. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify string.
2. This product can only be used with the original adapter, not other brands of adapter.


12' Jackson Fir Micro Dot Tree

SKU# 1005232498



Pre-Assembly

Package Contents
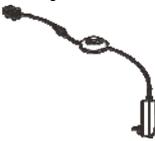
<p>A. Top Section Qty: 1</p> 	<p>B. Upper Middle Section Qty: 1</p> 	<p>C. Middle Section Qty: 1</p> 	
<p>D. Lower Middle Section Qty: 1</p> 	<p>E. Tree Bottom Qty: 1</p> 	<p>F. Tree Stand Qty: 1</p> 	
<p>G. Eye bolts Qty: 3</p> 	<p>I. Remote control Qty: 1</p> 	<p>J. Latch Qty: 2</p> 	<p>K. Threaded iron latch Qty: 2</p> 
<p>H. Power Cord Qty: 1</p> 			<p>L. Retainer washers Qty: 4</p> 

Assembly

Assembling the tree stand

Step 1. Choose a location near a wall outlet.

Step 2. Open the stand to a 90 degree angle until the hole lines up with the hole on the tube.

Step 3. Screw three eye bolts into the corresponding holes.




Assembling the tree

Please remove protective covers from the base of the pole for each tree section before assembling.

- Step 1. Insert tree bottom (E) into the tree stand and tighten the screws. (See Fig. 1)
- Step 2. Insert lower middle section (D) into the tree bottom (E). (See Fig. 2)
- Step 3. Insert the middle section (C) into the lower middle section (D). (See Fig. 3)
- Step 4. Insert upper middle section (B) into the middle section (C). (See Fig. 4)
- Step 5. Insert tree top (A) into the upper middle section (B). (See Fig. 5)
- Step 6. Allow branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges. (See Fig. 6)
- Step 7. Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one at the center of the main stem. Repeat pattern for each branch. (See Fig. 7)
- Step 8. Plug the power cord into a proper outlet. This tree comes with a foot pedal switch and a remote control for easy illumination and changing functions. This tree is Color Changing, the 8 lighting options available are:
 1. Steady Warm White
 2. Flashing Warm White
 3. Fade In and Fade Out Warm White
 4. Steady Multicolor
 5. Flashing Multicolor
 6. Fade In and Fade Out Multicolor
 7. Sequential Multicolor & Warm White
 8. Color Changing

These functions can be changed by using foot pedal switch or remote control.

Please see **Instructions of remote control** as below.

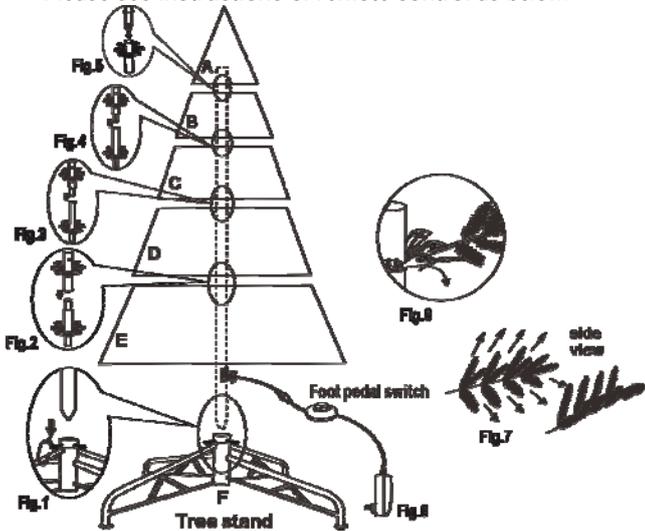

Operation

Turning on the tree

- Step 1. Connect each tree section well and plug the well-connected power cord into a wall outlet.


Instruction of remote control

Please note this tree has a remote control.

Please pull out the insulation tape from the remote control, before starting to use it.



1. Press Fn button. Select from the following lighting functions:
 - Function 1: Steady Warm White
 - Function 2: Flashing Warm White
 - Function 3: Fade In and Fade Out Warm White
 - Function 4: Steady Multicolor
 - Function 5: Flashing Multicolor
 - Function 6: Fade In and Fade Out Multicolor
 - Function 7: Sequential Multicolor & Warm White
 - Function 8: Color Changing

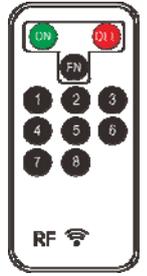


There is memory mode on function adjustment.

If the remote control does not work, check whether the battery of the remote control is out of power.

To replace the remote control battery:

1. Replace with a new button cell "CR2025" (3 volt) into the compartment.

CAUTION: DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

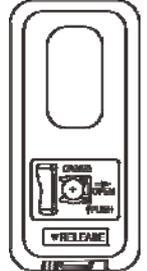

Use and Care Instructions

- a) Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- b) When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires.
- c) When not in use, store neatly in a cool, dry location protected from sunlight.

Care and Cleaning


- Step 1. Remove all ornaments and decorations.
- Step 2. Unplug the power cord from the wall outlet.
- Step 3. Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
- Step 4. Repeat this step for the center and bottom tree sections.
- Step 5. Carefully place all tree sections into a shipping box and tape it shut.
- Step 6. Store your tree in a cool, dry place away from sunlight.

Troubleshooting

Problem	Solution
The tree does not light	Ensure that all tree sections are connected into each other well by pressing each section down and rotating. Make sure power cord plug is securely inserted into a working electrical outlet.
	If you are still experiencing problems with the tree please call 1-877-527-0313 for instructions.

Loose branches


1. If a branch of the tree in section A, B or C falls off, follow the steps below to reinstall it with a spare latch (J).
 - 1) Place the branch into the slot of the bracket.
 - 2) Insert a spare latch through the hole and use diagonal pliers (not included) to crimp the latch. (See Fig. A)

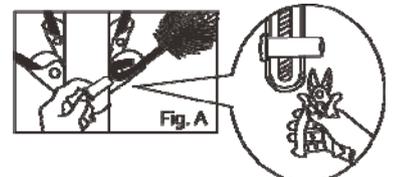

2. If a branch of the tree in section D or E falls off, follow the steps below to reinstall it with a spare threaded iron latch (K) and two retainer washers (L).

1) Place the branch into the slot of the bracket.

2) Insert a spare threaded iron latch (K) through the hole and secure using two retainer washers (L). (See Fig. B)

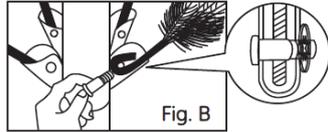

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Importer: Home Depot
Address: 2455 PACES FERRY ROAD ATLANTA, GA 30339
Tel: 1-877-527-0313

Adapter Model No. TS-36W12V