

**ANOVA PRO**

## GET STARTED

- 1 **FILL** a pot or container with at least 2.5" (63mm) of water, or above the Minimum Water Level Line on your Anova Precision®Cooker Pro, and place it on a heat-safe surface or trivet, away from counter edges
- 2 **ATTACH** your Anova Precision®Cooker Pro to the pot by adjusting the rear screw *(do not overtighten screws)*
- 3 **ADJUST** the height of Anova Precision®Cooker Pro by adjusting the side screw *(do not overtighten screws)*
- 4 **PLUG IN** your Anova Precision®Cooker Pro, then start cooking by following the steps on the next page





#### LED INDICATOR MODES

The LED light on the front of the device indicates the status of the cooker with different colors:

- *White: idle*
- *Pulsing Blue: preheating*
- *Solid Blue: cooking*
- *Red: low water or error*

## USING THE DISPLAY

#### STARTING YOUR COOK AND SETTING THE TIMER

- Set or change desired temperature by pressing the Target Temperature button followed by the +/- buttons on your Anova Precision® Cooker Pro
- Set or change cooking time by pressing the Timer button followed by the +/- buttons
- Press the Start button to begin cooking. Cooking can begin with or without setting a Timer

#### CHANGE BETWEEN FAHRENHEIT AND CELSIUS

- Press and hold the Current Temperature button for 3 seconds to change the unit of temperature

When you are ready to cook, place your food in a re-sealable bag, lower the bag into your pot, and clip the bag to the side of the pot.

## CARE + CLEANING

Unplug your Anova Precision® Cooker Pro before disassembling or cleaning the device.

### HOW TO DISASSEMBLE

- 1 REMOVE THE CLAMP** by loosening the side knob and sliding the clamp down off of the stainless steel skirt.
- 2 REMOVE THE SKIRT** by grasping the stainless steel skirt, and gently twisting it clockwise to unlock it from the upper body. Then carefully pull the skirt downward off the device.



### HOW TO CLEAN

- **WASH** the skirt with mild dish soap or place it in the dishwasher.
- **GENTLY SCRUB** the exposed metal and plastic components with a tooth brush and mild dish soap. When cleaning the unit, do not bend or displace any of the exposed components. Gently wipe clean with a dry cloth.
- **REASSEMBLE** by sliding the stainless steel skirt over the exposed components, aligning the dots on the skirt with the grooves in the upper body. Gently twist the skirt counter-clockwise to lock it in place.
- **GENTLY WIPE** the display with a lightly damp microfiber cloth, then gently wipe dry with a dry microfiber cloth.

## CONNECT TO WI-FI

---

- 1 **DOWNLOAD** the Anova Culinary App on your smartphone or tablet
- 2 **CONNECT** to your preferred Wi-Fi network
- 3 **OPEN** the app and follow the on-screen instructions to connect to your Anova Precision® Cooker Pro



## FCC/IC COMPLIANCE

---

This device complies with Part 15 of the FCC Rules / Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does

cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## SAFETY

---

### TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

1. Do not use with damaged cord or plug.
2. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, do not attempt to use the device again. Contact Anova Support at [support@anovaculinary.com](mailto:support@anovaculinary.com) for assistance.
3. Do not use outdoors.
4. Unplug the electrical cord when not in use and before servicing.
5. Do not allow to be used as a toy. Close attention is necessary when used by or near children.
6. Use only as described in this manual. Use only manufacturer's recommended attachments.
7. Do not pull or carry by cord or use cord as a handle.
8. Do not use extension cords or outlets with inadequate current carrying capacity.
9. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
10. Do not handle plug or appliance with wet hands.
11. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce water flow.
12. Do not use appliance in flammable or combustible liquids such as gasoline, or use in areas where they may be present.
13. Store your appliance indoors in a cool, dry area.
14. Do not use a voltage converter or adapter, or plug a device into an outlet with unmatched voltage.

### ALWAYS EXERCISE BASIC SAFETY PRECAUTIONS WHEN OPERATING ELECTRICAL APPLIANCES, INCLUDING THE FOLLOWING:

1. Read all instructions, including the instructions you're reading now.
2. Do not touch hot surfaces.
3. To protect against electrical shock, do not immerse cord, plugs, or the device's electrical components in water or other liquid.
4. Close supervision is necessary when appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow device to cool before assembling or disassembling.
6. Do not operate any appliance with a damaged cord or plug. Do not operate the appliance if it has malfunctioned or been damaged in any manner. For assistance contact Anova Support at [support@anovaculinary.com](mailto:support@anovaculinary.com).
7. The use of accessory attachments is not recommended by the appliance manufacturer and may cause injuries.
8. Do not let cord hang over the edge of the table or counter. Do not let the cord come in contact with hot surfaces.
9. Do not place the device on or near hot gas or electric burner, or in a heated oven.
10. Use extreme caution when moving an appliance containing hot liquids.
11. Do not unplug while device is running.
12. Do not use appliance for anything other than its intended use.
13. Do not open bottom enclosure while device is plugged in or operating as there are heating elements and moving parts.
14. Do not use directly on a granite or marble surface. Always place an insulating surface between the hot pot and granite or marble surface.

**ANOVA CULINARY**



**ANOVACULINARY.COM**

Limited warranty. Full details available at [anovaculinary.com/warranty](https://anovaculinary.com/warranty)

Anova® and Precision® are registered trademarks of Anova Applied Electronics, Inc. ©2019 Anova Applied Electronics, Inc. San Francisco, CA, US | Stockholm, SE. All Rights Reserved.

Apple, the Apple logo and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Android, Google Play, and the Google Play logo are trademarks of Google Inc. All other trademarks and trade names are properties of their respective owners.