 


- Thank you for purchasing our air cooler.
- · Each unit has been manufactured to ensure safety and reliability.
- Refore first use, read the instructions carefully and keen it for further refer DIAGRAM



PERFORMANCE PARAMETERS

Model	Rating Power	Fan power	Max Water Injection Rate	Specification
EP23665	110-120V-60Hz	75W	8L	16.14*12.99*28.54in

- Principle of cool humidify: take cool water from the water tank by pump or syncl after reaching the top, the cool water will flow through the wetted pad, then blow off humid cool ir rounding the wetted pad by rotational wind wheel. Use the water evaporation principle
- Electronics control: safe and durable, attractive appearance.
- Adjustable speed and mode: have three speeds and modes, blow at wide angle.
- Cool/humidify: adopt ice crystal refrigeration and air humidifying technology, can cut down the
 - temperature from air vent and raise relative humidity, prevent air drying.

 Anion: purify and sterilize air by generating negative ion.
- Deliver wind at wide angle: swing the blades automatically deliver wind at horizontal wide
- angle. Also can swing the blades transversely manually, select the direction discretionarily.

 Far-range remote control: 236in far-range remote control, receive at 60 degree wide angle.
- Buzzer: vocalize when operating the effective keypad, use conveniently.

- 1. Assemble castors: put the appliance on a flat surface, take out the wrench from foam box, then Attention: the back castors are with brake, but the front ones are without. (map 1)
- 2. Watering: push the key on the door, open it and draw out the water tank, then add water.(map 2)

- a. Pay attention to the level of water tank when add water (man 3)
- b. The level of water tank should not over "MAX" scale at any time, when humidifying, the total level of water tank should not below "MIN" scale.
- c. Put ice or frozen ice crystal box to the water tank if you want to strengthen the efficience cooling. But the total level of water tank should not over "MAX" scale







OPERATION

- ON: the appliance is plugged in and on the standby model, at the same time the buzzer ren "Bi". Press the key, start it.

 OFF: press the key, close it.
- ow → Mid → High Speed: press the key start the air cooler. The corresponding function changes as follows when

- Mode: press the key, choose the normal wind, natural wind and sleeping wind circularly. Under
- the situation of normal wind it has no corresponding indicator light shining, but others have.

 Swing: press the key, the wind swings horizontal automatically and the swing indicator light is on. Cancel this function when press again. Swing the blades transversely manually, select the
- Anion: press the key, the anion generator works and releases anion, at the same time the anion indicator light is on. Cancel this function when you press again.

 Timer: 7.5 hours timer design, each press adds 0.5 hour.
- Cool/humidify: press the key, if add frozen ice crystal box, the temperature from air yent can lower about 37°F after a few minutes. Cancel this function when press again.

THE USE OF REMOTE CONTROL

Fit on two batteries. Should aim at the reception window of remote control when you use, the effective distance must be 236in. When the remote control is not in use, please put away it for using Attention:

- a. Do not mix old battery with the new one in use.

THE USE OF ICE CRYSTAL BOX

The ice crystal box has a particular feature of keeping cool, it can absorb heat and let the water

a. Add water to the ice crystal box (not full) and put it into the refrigerator to make sure that it iced

h. Onen the door nut the frozen ice crystal box into the water tank

- 2. Do not repair or remake the appliance by yourself, it should be repaired by the repairmen.
- Do not operate the appliance with wet hands, in order to avoid damage.

 If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or
- similarly qualified persons in order to avoid a harzard.

 5. When the appliance is not in use, switch off and unplug it.
- Do not insert foreign things to air outlets and inlets, in order to avoid damage.
 Do not use the appliance near explosive and combustible gas. Avoid long-term direct solar
- 8. Use the appliance only on a flat surface.
- 10. The level of water tank should not over "MAX" scale at any time, when humidifying, the total level of water tank should not below "MIN" scale.
- 11. After adding water to the water tank, do not title or knock over it when you put or move. If you want to move, please push slowly from the side, in order to avoid spilling.
- Do not turn over the appliance. If it is toppled over and there is some water in the body, should unplug the power supply first. Then send it to repair department or after-sales service and overhaul the appliance.
- 13. Do not cover the air vent.
- Clean the appearance with a lightly damp cloth. Do not use any type of detergents or solutions. Do not rinse the appliance.
- Do not make air outlets and inlets near the wall or curtain.

 Do not knock or shake the body when using, otherwise it may cause stop automatically.
- 17. The water in tank will easily metamorphose and has odor in summer, please renew the water
- 18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their
- Children should be supervised to ensure that they do not play with the appliance 20. To avoid the risk caused by instability of unit, you must fix the unit firmly according to manual
- 21. Fan for temperate climates only. 22. Should it be necessary to move the unit after the water has been added, roll gently to the
- Position and activate the bracket the castors

ELECTRIC PRINCIPLE DIAGRAM

main motor Brown Det M M swing motor M M humidification motor **P** anion generator

CLEANING AND MAINTENANCE









WARNING: Ensure that the fan is switched off from the supply mains before removing the

- 1. Clean the air filter screen (map 1) Cut off the power supply, pull the handle of air filter screen, remove it from appliance. Clean the air filter screen with neutral detergent and banister brush, then clean it with clear
- water. Finally, reinstall to the appliance. Clean the wetted pad (map2, map3)
- Cut off the power supply take down the air filter screen, then draw the wetted pad from support. Clean the wetted pad with neutral detergent and banister brush, then clean it with clear water. Finally, reinstall to the appliance.
- Attention: the wetted pad must be installed horizontally, in order to avoid leaking.

 3. Clean the water tank (map 4)
- Cut off the power supply, open the door, take out the water tank, clean it with neutral detergent, and wash it with clear water, then reinstall to the appliance. 4. Clean the shell
- Clean with neutral detergent and soft cloth.
- Attention: cut off the power supply when clean the appliance, as there have a high pressure in the body. Do not leave any water on the surface of control panel.

MALFUNCTION AND MAINTENANCE

Malfunction	Causes	Solution	
No action	Power off or poor connection. Not press the "ON/OFF" key on the control panel.	Plug the power cord and make sure it connects well. Press the "ON/OFF" key on the control panel.	
Poor effect of dedusting	Block the air filter screen with dust. Block the air inlet with corpus alienum.	Purify the air filter screen. Remove corpus alienum from the air inlet.	

Repair the appliance under the situation as follows:

Abnormal action caused by ingress of water or corpus alienum.

Abnormal action or no action. it is invalid by the above approach.