

WARRANTY & SUPPORT

Equity provides a 2-year limited warranty on this product from the date of consumer purchase against defects for material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence.

ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OR FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from State to State.

If your product is not working properly, please send:

Your product

A letter explaining the problem and \$5.00 for postage and handling to:

Equity by La Crosse

Warranty Department

2830 26th St S.

La Crosse, WI 54601

For more information and support visit:

www.lacrossetechnology.com/support

! **WARNING:** This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov

Made in China - Printed in China

Page | 4

Equity® by La Crosse™

ANALOG KEY WIND ALARM CLOCK



Model: 13012

DC: 112318

Page | 1

TIME

Set Time:


1. Turn the Time Set Knob to the correct time.
2. Turn the Time Wind Key left to wind fully.

IMPORTANT: Over winding may cause damage to your Key Wind Clock.

Adjust Time Accuracy: The clock has been regulated at the factory. However, the regulator may have shifted during shipping.

- If your clock is running fast - move Regulator towards the MINUS (-) sign. This will slow it down.
- If your clock is running slow - move Regulator towards the PLUS (+) sign. This will speed it up.

Note: Move the Regulator in small increments, then watch the results. Generally little adjustment is needed.

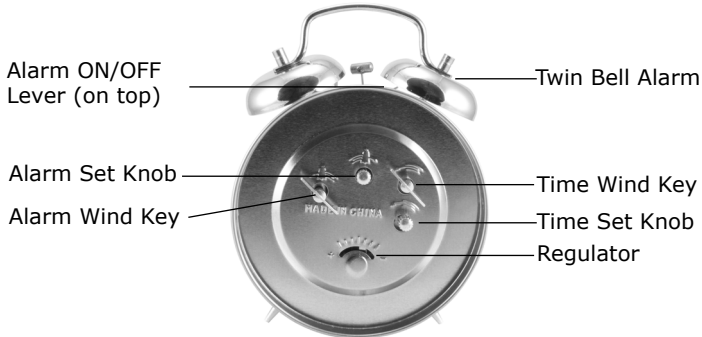

ALARM

Set Alarm:

1. Turn the Alarm Set Knob to your desired wakeup time.
2. Turn the Alarm Wind Key to the left to wind fully.

IMPORTANT: Over winding may cause damage to your Key Wind Clock.

Activate / Deactivate Alarm:

On top of the clock, between the Twin Bells is the Alarm ON/OFF Lever.

- Turn the lever to the Right to activate the alarm.
- Turn the lever to the Left to deactivate the alarm.

Note: The ALARM ON/OFF Lever movement is slight.

FEATURES

- Luminous Hands and Hour dots
- Loud Twin Bell Alarm
- Quartz Movement
- Key Wound