




Fairbanks Baker's Rack

Item# L-BR108PCO

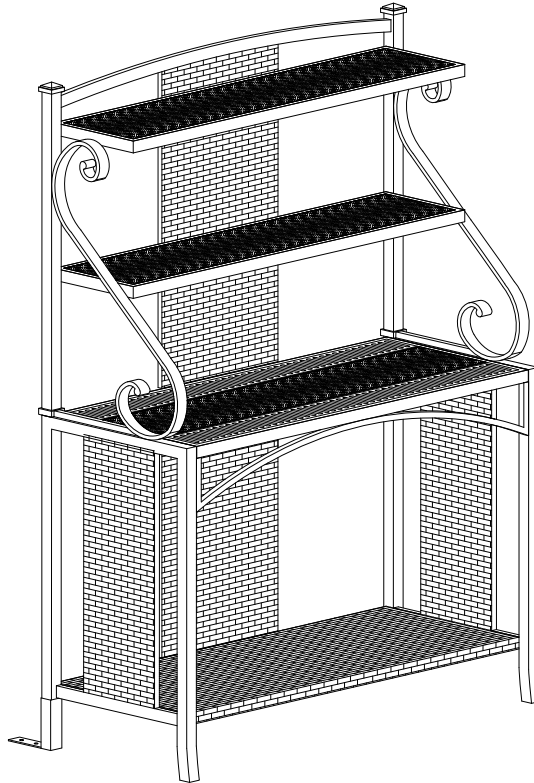

Congratulations on your purchase of Fairbanks Baker's Rack. Our clear, easy to follow, step-by-step instructions will guide you through the assembly process from start to finish.

WARNING:

- Keep all children and pets away from assembly area. Children and pets should be supervised when they are in the area of the Baker's Rack construction.
- Keep assembly area at least 6 feet from any obstruction such as a fence, garage, house, overhanging branches, laundry line or electrical wires.
- Some parts may contain sharp edges. When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to the product. Please read all instructions before assembly and use.
- Check all bolts for tightness before use and periodically check and tighten bolts as necessary.
- Assemble on level ground.
- For outdoor use only.



IMPORTANT

Please take time to read these instructions thoroughly and follow each step carefully for safe and easy operation. Keep this manual for future reference.


We would like to hear from you with any comments or suggestions. In the continental U.S., you can call us toll-free at 1-888-301-0332 from 8 a.m. to 5 p.m. CST Monday – Friday. You can also send us an email using the feedback icon at SamsClub.com.

Parts List


No.	Description	Qty
A	Arc Tube	1
B1	Decoration Board 1	1
B2	Decoration Board 2	1
C1	Side Board 1	1
C2	Side Board 2	1
D1	Shelf 1	1
D2	Shelf 2	1
E	Big Shelf	1
F	Support Frame	1
G	Upper Back Board	1
H	Bottom Back Board	1
I	Bottom Shelf	1
J	Foot Support	2
AA	Bolt M6x15	31
BB	Nut M6	2
CC	Screw M6x15	6
DD	Washer M6	33
EE	Wrench M6	1
FF	Stake	2

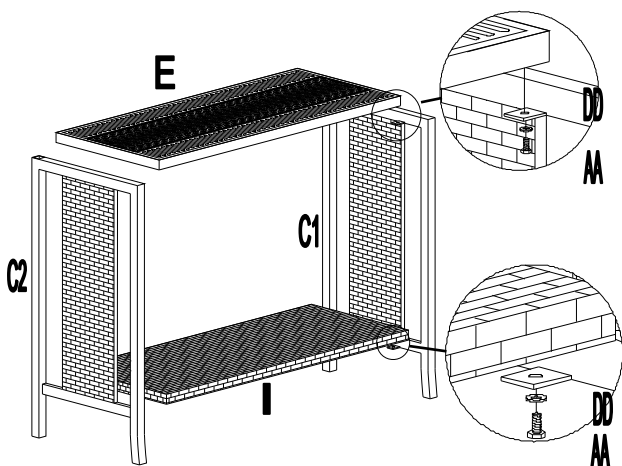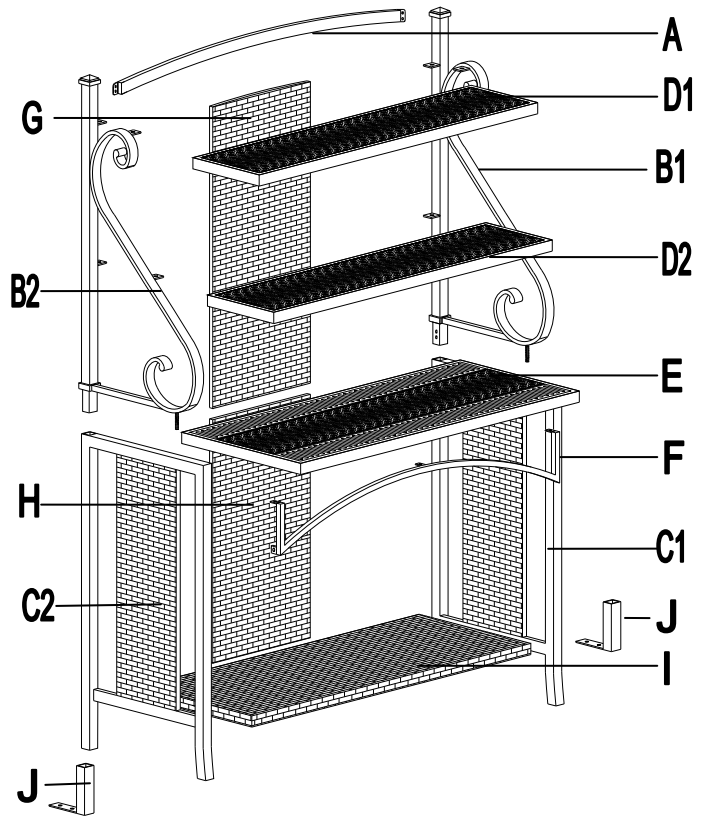


Step 1: Attach Big Shelf (E), Bottom Shelf (I) to Side Board 1&2 (C1&C2) by Bolt (AA) and Washer (DD). Do not lock tightly.

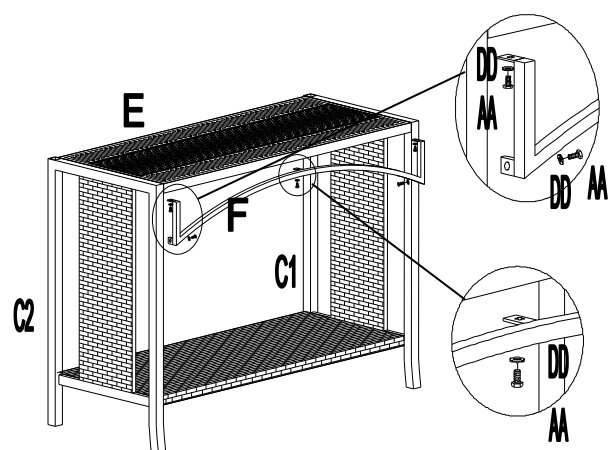


Step 2: Attach Support Frame (F) to Big Shelf (E) and Side Board 1&2 (C1&C2) by Bolt (AA) and Washer (DD). Lock all the bolts tightly.

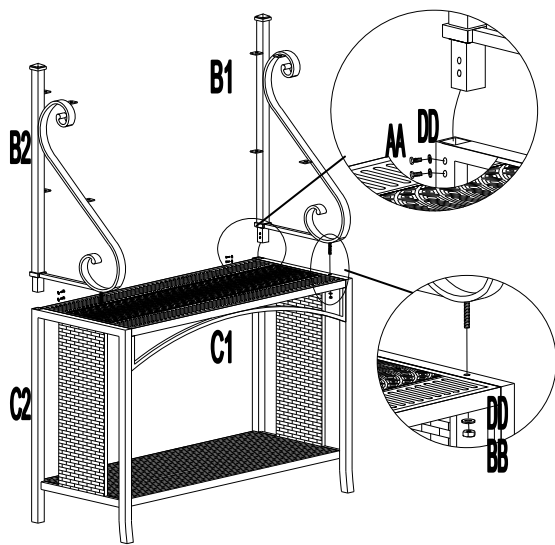


Step 3: Attach Decoration Board 1 (B1) to Side Board 1 (C1) by Bolt (AA) and Washer (DD). Then attach Decoration Board 2 (B2) to Side Board 2 (C2) in the same way. Do not lock the bolts tightly.

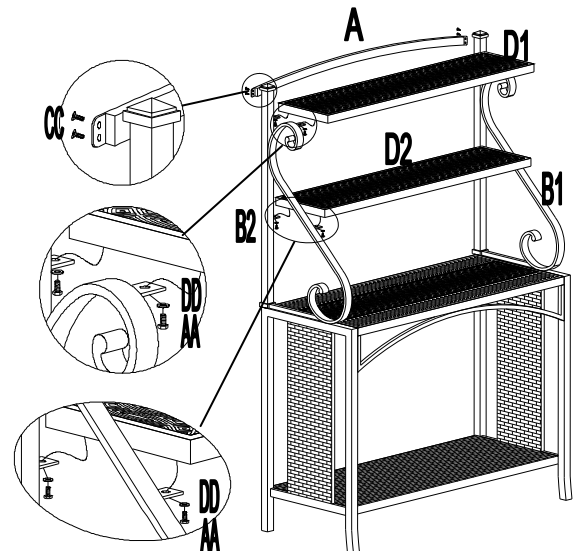

Step 4: Attach Arc Tube (A) to Decoration Board 1&2 (B1&B2) by Screw (CC). Fix Shelf 1&2 (D1&2) by Bolt (AA) and Washer (DD). Lock all the bolts tightly.

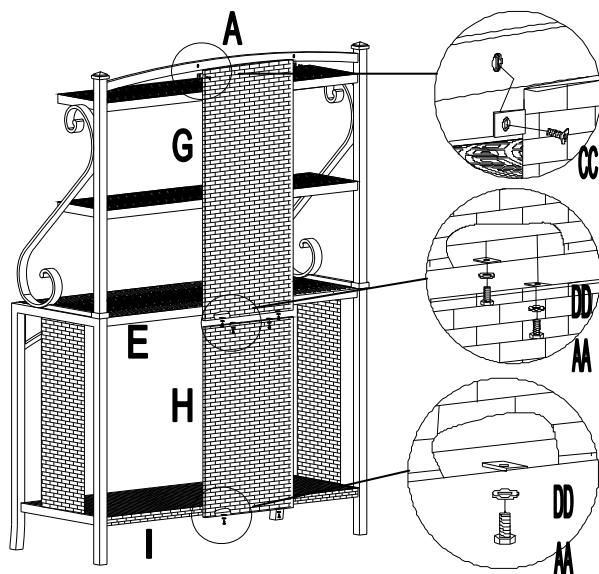

Step 5: Attach Upper Back Board (G) to Arc Tube (A) by Screw (CC) and connect with Big Shelf (E) and Bottom Back Board (H) by Bolt (AA) and Washer (DD). Fix Bottom Back Board (H) to Bottom Shelf (I) by Bolt (AA) and Washer (DD).

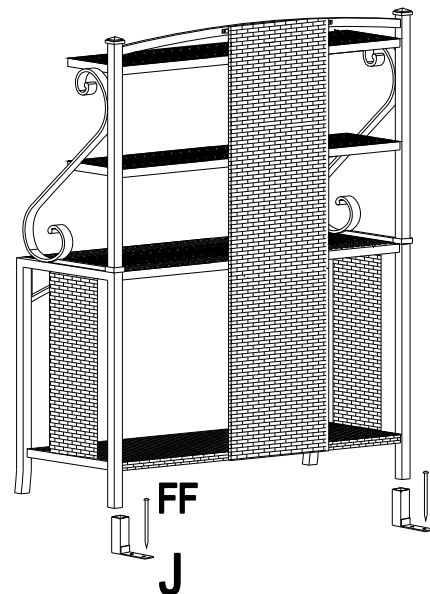

Step 6: Insert Foot Support (J) to Side Board 1&2 (C1&C2) and insert Stake (FF) to the floor for better standing if available.

If this item is stand against the wall, then no need to use Foot Support (J) and Stake (FF).

Care & Maintenance

Before using, clean the baker's rack completely with a soft dry towel. When not in use, wipe free of any dirt or loose objects, wash with a mild solution of soap and water; rinse thoroughly and dry completely. Do not use strong detergent or abrasive cleaners.

Steel components of garden accessories and furniture are treated with rust inhibiting paint. However, due to the nature of steel, surface oxidation (rusting) will occur if this protective coating is scratched.

To minimize this condition, it is recommended that care be taken when assembling and handling the product, in order to prevent the paint from being scratched.

Limited Manufacturer's Warranty:

This product carries a 1 year warranty against defects in workmanship and materials. We agree to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear or breakage due to misuse and/or abuse.

Exclusions:

Items used for commercial, contract, or other non-residential purposes, or items damaged due to acts of nature, vandalism, misuse, or improper assembly are not covered. Corrosion or rusting of hardware is not covered. Proof of purchase (dated register receipt) is required for warranty claims. Warranty is to the original purchaser and is non-transferable. Any replacement of warranted items will be in the original style and color, or a similar style and color if the original is unavailable or has been discontinued. As some states do not allow exclusions or limitations on an implied warranty, the above exclusions and limitations may not apply. This warranty gives you specific rights, and you may also have other rights, which vary from state to state.