 
 


 
 
 
 
 

 

USER MANUAL

Electric Smart Sofa




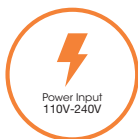


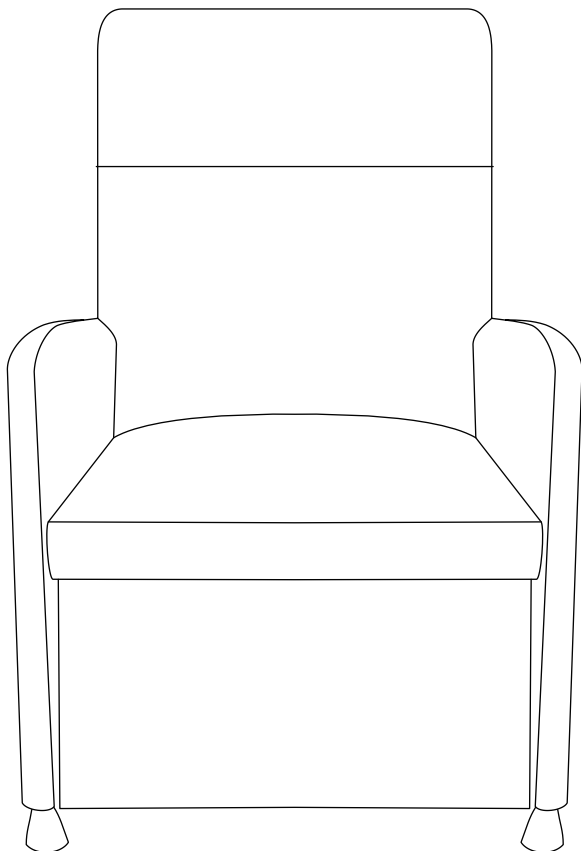

Caution: Do Not Exceed Maximum Listed Weight Capacity.
Serious Injury Or Property Damage May Occur!

PARTS LIST

<p>①</p>  <p>Right-(x1)</p>	<p>②</p>  <p>Left-(x1)</p>	<p>③</p>  <p>(x1)</p>	<p>④</p>  <p>(x1)</p>
<p>⑤</p>  <p>(x1)</p>	<p>⑥</p>  <p>(x1)</p>	<p>⑦</p>  <p>(x1)</p>	<p>⑧</p>  <p>(x1)</p>

    HARDWARE


<div>A</div> <div></div> <div>Adjustable feet (x4)</div>	<div>B</div> <div></div> <div>Screws M8×16mm (x10)</div>	<div>C</div> <div></div> <div>Screws M6×15mm (x4)</div>
<div>D</div> <div></div> <div>10x40 (x2)</div>	<div>E</div> <div></div> <div>2x40 (x2)</div>	<div>F</div> <div></div> <div>Allen Key S=5mm (x1)</div>

SPARE PARTS



<div></div> <div>B</div> <div>M8×16mm (x2)</div>	<div></div> <div>C</div> <div>M6×15mm (x1)</div>
---	---

STEP 1

 Adjustable feet




AX4

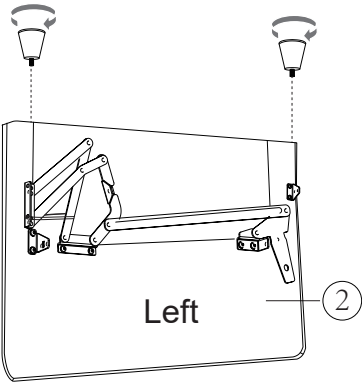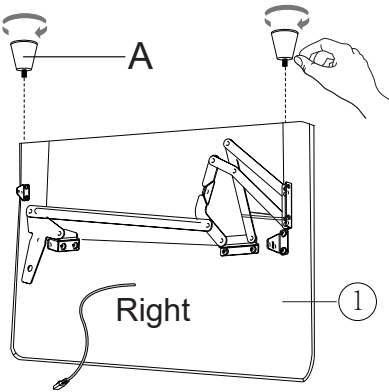  


STEP 2

 M8x16mm




BX4



S=5mm



 
FX1

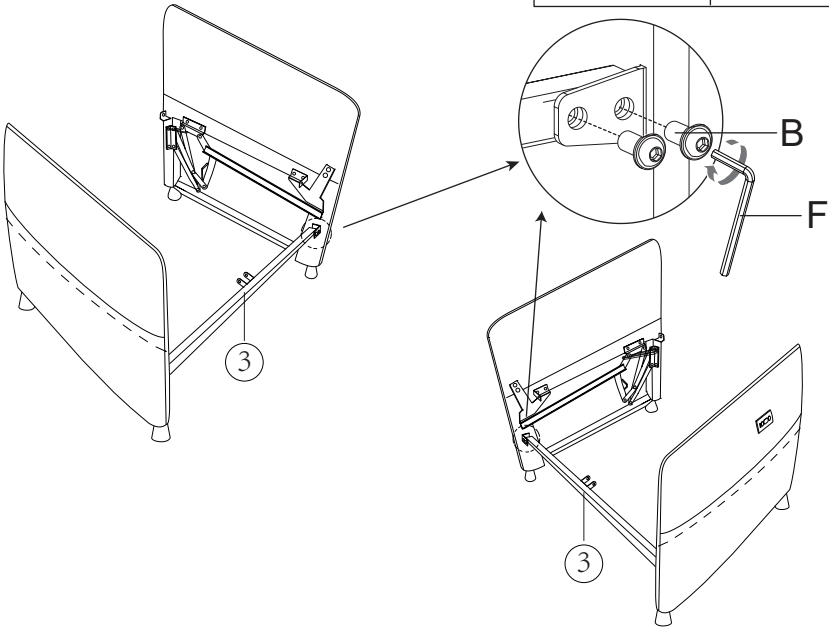

  

STEP 3

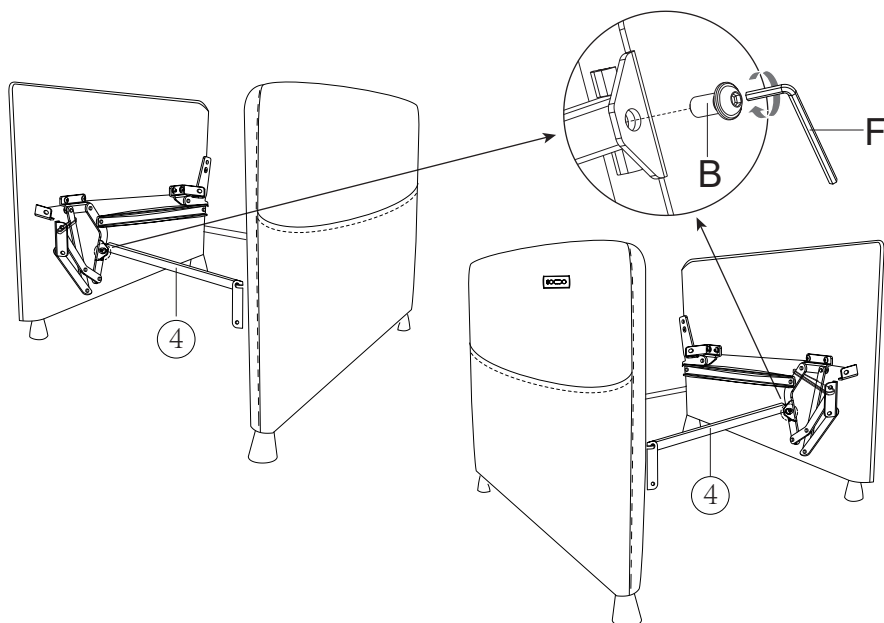


  STEP 4

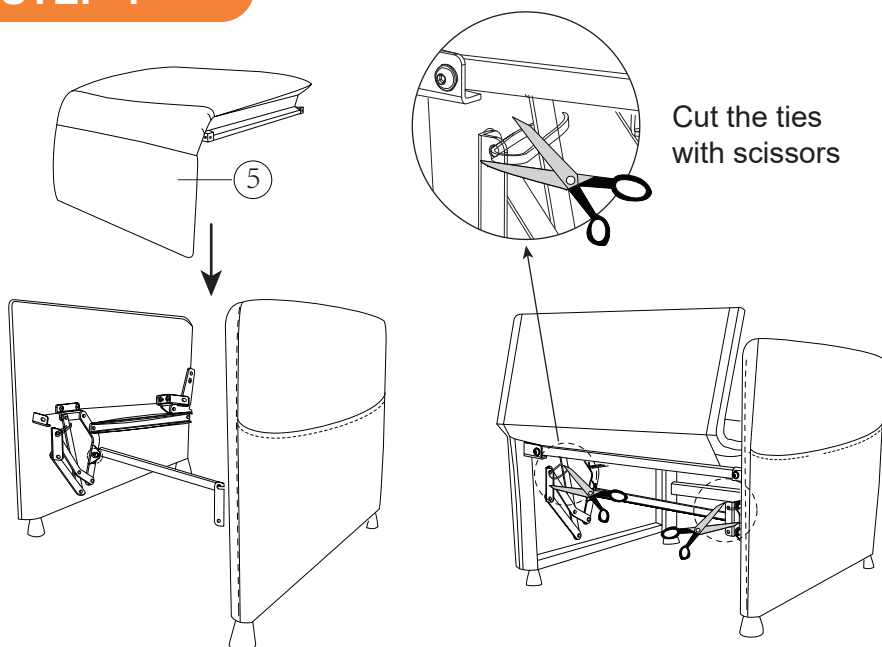



 
STEP 5

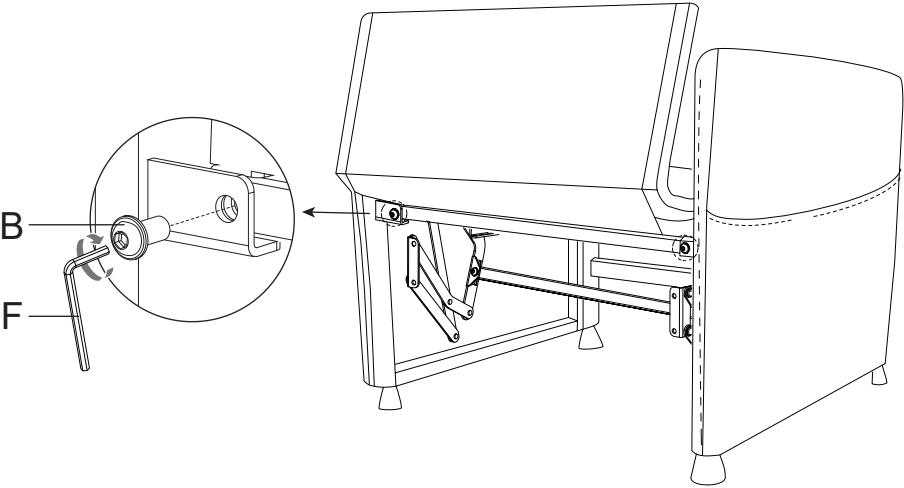M8x16mm	S=5mm
	
BX2	FX1




STEP 6

M8x16mm	S=5mm
	
BX2	FX1

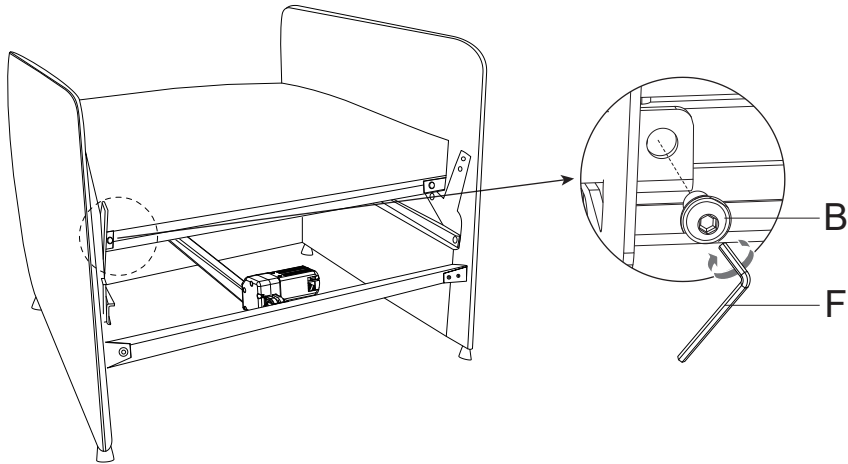 



STEP 7

M6x15mm  CX4	S=5mm  FX1
---	---

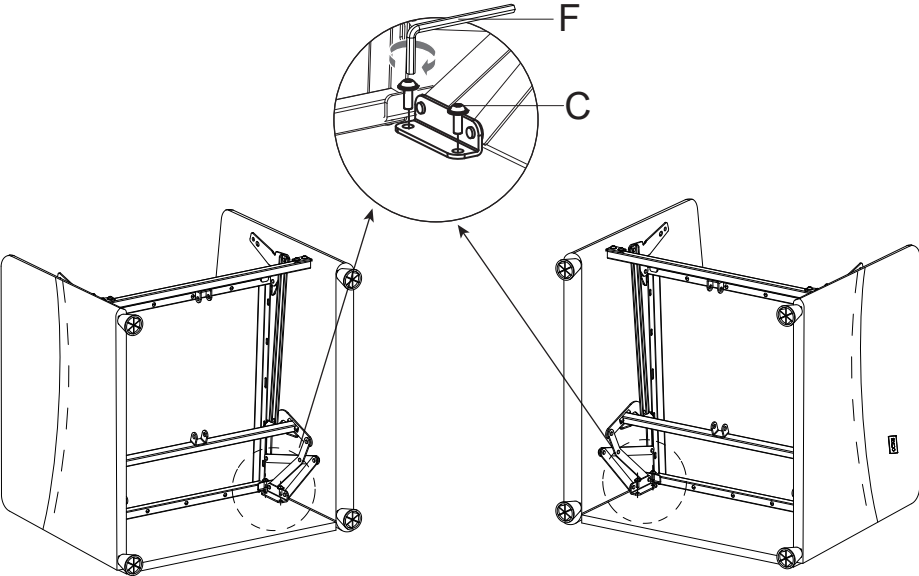 

 STEP 8

10x40mm  DX2




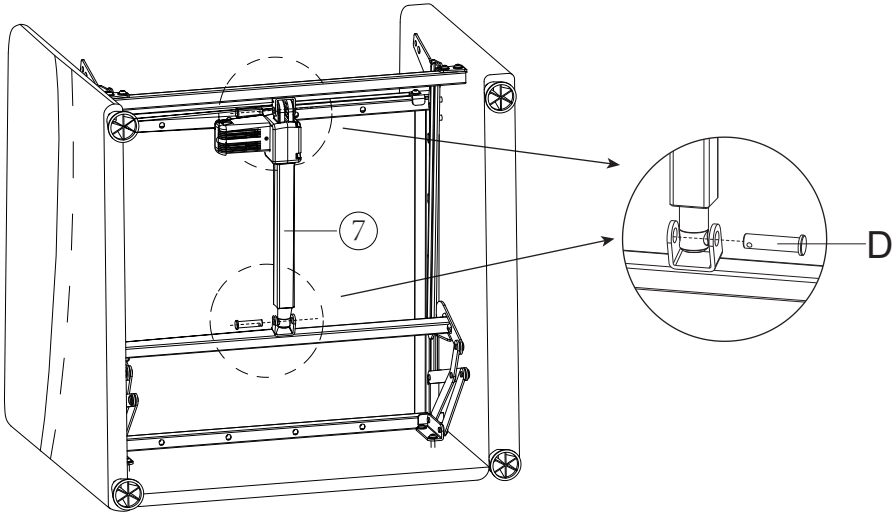 


STEP 9

2x40mm





    EX2

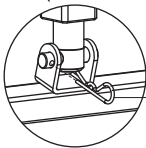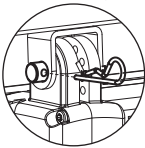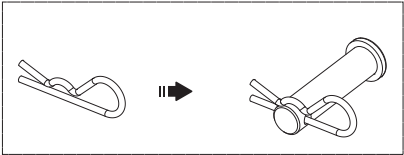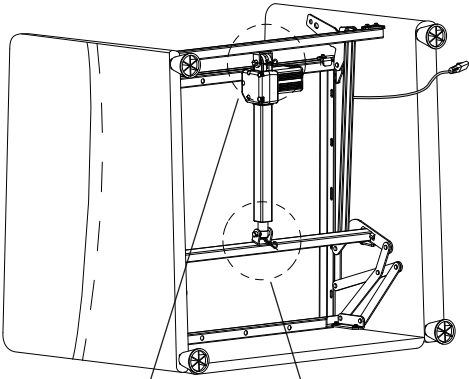


E

  STEP 10

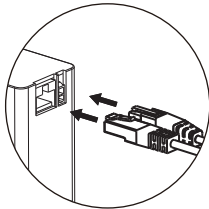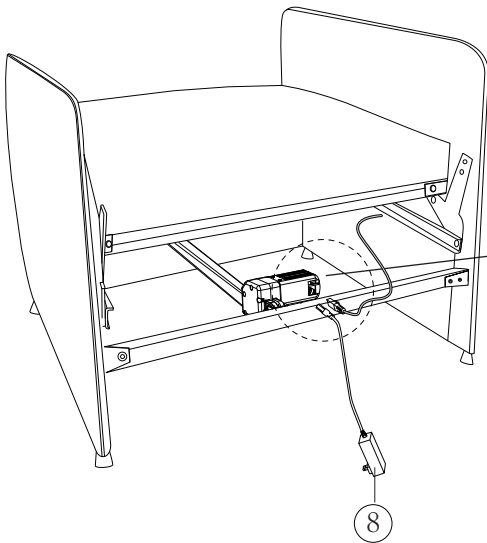


8

 
STEP 11

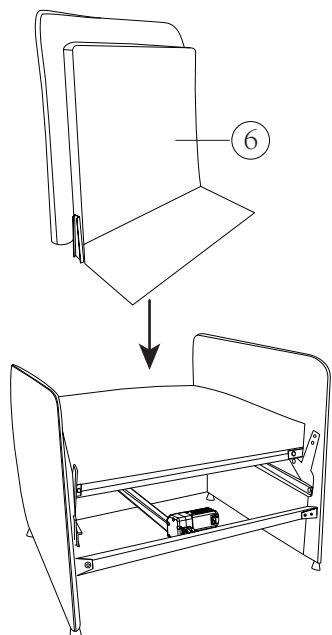

 STEP 12

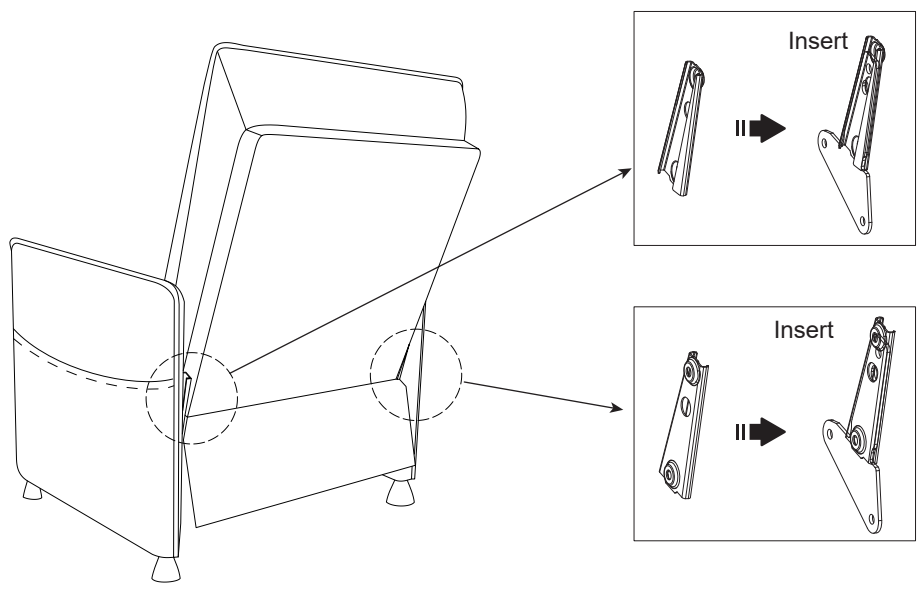

Manual controller instructions

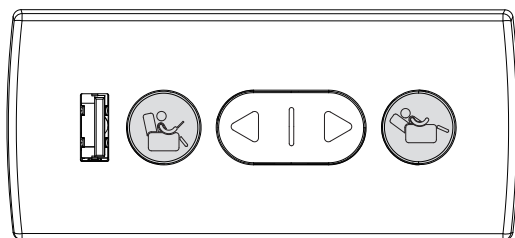 

1. Press and hold the  button.

The footrest will slowly rise, while the backrest synchronously lowers.

The movement will automatically stop when it reaches the maximum position.



2. Press and hold the  button.



The footrest will slowly lower, while the backrest synchronously rises.

The movement will automatically stop when it reaches the maximum position.

3. Memory setting:

Adjust the sofa to your desired position, then press and hold the memory

button  or  for more than 3 seconds. The position will be successfully memorized.

4. Reset setting: Press and hold the  button until the sofa reaches the lowest limit position and release the button. Then press and hold the  button again until the footrest slightly retract and bounce back. This indicates a successful reset.

ELECTRIC SMART SOFA