

Empstorm

COFFEE MAKER

INSTRUCTION MANUAL

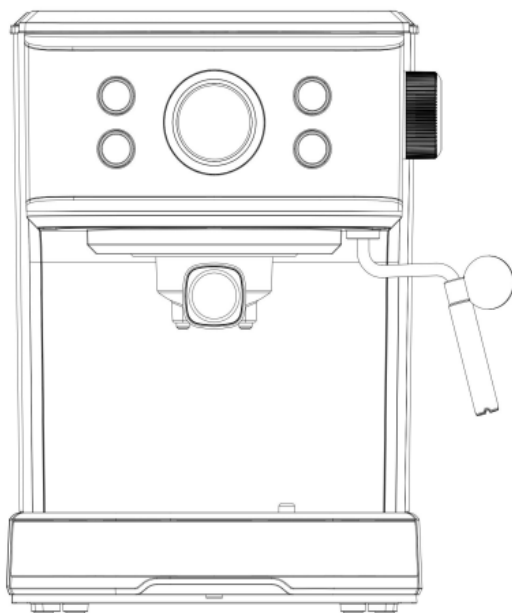

Model: EM-04E

Read this manual thoroughly before using and save it for future reference

shenzhenshiyouchuangdapindianzikejiyouxiangongsi

ADDRESS:ShenzhenshiLuohuqu JiabinluNo.4028TaipingyangShangmaodashaBArea1711

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before using check that the voltage of wall outlet corresponds to rated voltage marked on the rating plate.
3. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
4. To protect against fire, electric shock and injury to persons do not immerse cord, plug in water or other liquid.
5. Remove plug from wall outlet before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or before cleaning.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner, return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
8. Place appliance on flat surface or table, do not hang power cord over the edge of table or counter.
9. Ensure power cord do not touch hot surface of appliance.
10. Do not place the coffee maker on hot surface or beside fire in order to avoid being damaged.
11. To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
12. Do not use appliance for other than intended use and place it in a dry environment.
13. Close supervision is necessary when your appliance is being used near children.
14. Be careful not to get burned by the steam.
15. Do not touch the hot surface of appliance. Use handle or knobs.
16. Do not let the coffee maker operate without water.
17. Do not remove the metal funnel when appliance is brewing coffee or when releasing steam.
18. Connect plug to wall outlet before using and turn any switch off before plug is removed from wall outlet.
19. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
20. Children should be supervised to ensure that they do not play with the appliance.
21. Operating or storing environment temperature shall be more than 0°C.
22. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

23. Do not use outdoors.


24. SAVE THESE INSTRUCTIONS.

25. If you do not use the product for a long time, you need to turn on the power and then release for 3 minutes before leaving this product.

26.If you cut off power during steam release, residual heat will make product continue to release steam. for a length of time, the product will stop releasing steam immediately once you turn off steam knobsteam.

KNOW YOUR COFFEE MAKER

- | | | |
|------------------------|----------------------|----------------------|
| A. Drip tray | B.Removable shelf | C.Base |
| D. Funnel handle | E.Metal funnel | F.1 Cup steel mesh |
| G.2 Cup steel mesh | H. Steam button | I. Power buttone |
| J. 2-cup coffee button | K.1-cup coffe button | L.Top cover |
| M.Water handle | N.Water tank cover | O.Water tank |
| P. Main body | Q.Coffee spoon | R.Steam control knob |
| S. Steam wand | T.Froth devic | U.Capsule filter |
| V.Capsule funnel | | |

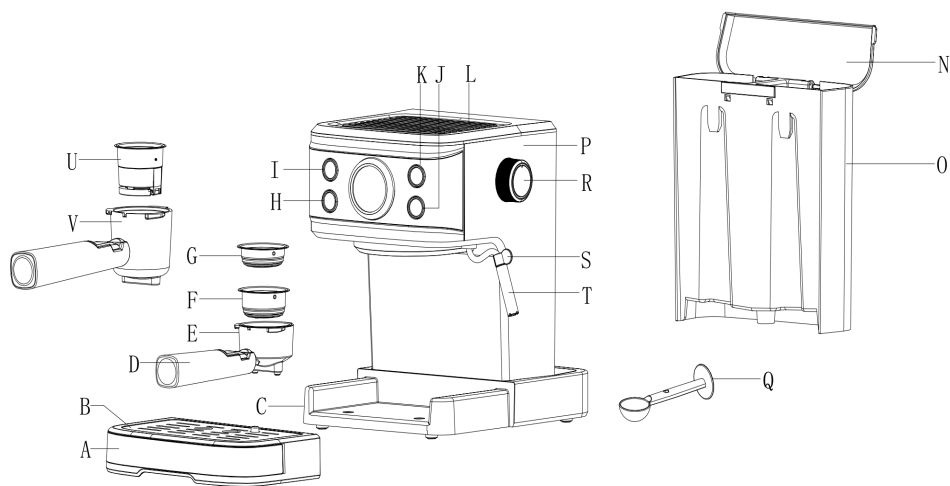

BEFORE THE FIRST USE

To ensure the first cup of coffee tastes excellent, you should rinse the coffee maker with warm water as follows:

1. Open water tank cover, fill water into water tank, water level should not exceed the “MAX” mark in water tank. Then replace the water tank cover.

Note: the appliance is supplied with a detachable water tank for easy cleaning, you can fill water tank with water first, and then attach water tank into the appliance.

2. Set steel mesh into metal funnel (no coffee in steel mesh), make sure the tube on the funnel aligns

with groove in the appliance, then insert the funnel into the appliance from the “” position, and

fix them into coffee maker firmly by turning it anticlockwise until it is at the “” position.

3. Place an jug on removable cup shelf. Make sure steam control knob is on the OFF position.
4. Connect into power source, press power button, power indicator flashes, the machine begins preheating, after power indicator is solidly on, the preheating is completed
5. Press 2-cup coffee button, the unit will pump water for about 25s, pour out water in the cup then clean them thoroughly, now the appliance is ready for making coffee.

Note: There may be noise when pumping water for the first time, it is normal that the appliance is releasing the air inside. After about 20s, the noise will disappear.

PREHEATING

To make a cup of good hot Espresso coffee,

we recommend you should preheat the appliance beforemaking coffee, including metal funnel,

steel mesh and cup, so that the coffee flavour can not beinfluenced by cold parts.

1. Remove detachable water tank and open water tank cover to fill it with desired water, the water level should not exceed the “MAX” mark in the tank. Then replace water tank
2. Set steel mesh into metal funnel, make sure the tube on the funnel aligns with groove in the appliance, then insert the funnel into the appliance from the “” position, and fix them into coffee maker firmly by turning it anticlockwise until it is at the “” position.
3. Place an espresso cup on removable cup shelf.
4. Then connect appliance to power supply. Make sure steam control knob is on the OFF position.
5. Press power button, power indicator flashes, the machine begins preheating, after power indicator is solidly on, it means that preheating is completed, press 2-cup coffee button, the machine pumps water, when there is water flowing out, press this coffee button again to stop pumping water immediately. The purpose of this step is to pump the water of water tank into boiler.
6. When power indicator is solidly on, it indicates the preheating is finished

MAKE ESPRESSO

1. Remove funnel by turning it clockwise. Add ground coffee into steel mesh with measuring spoon, a spoon of ground coffee powder can make about a cup of top-grade coffee, then press ground coffee powder tightly with the tamper.
2. Set steel mesh into metal funnel, make sure the tube on the funnel aligns with groove in the appliance, then insert the funnel into the appliance from the “” position, and fix them into coffee maker firmly by turning it anticlockwise until it is at the “” position.
3. Place a cup on removable cup shelf.
4. After preheating is completed, press 1-cup or 2-cup coffee button, the product will start brewing, working time for 1-cup coffee is 15 seconds and 25 seconds for 2-cup coffee .
5. At the time corresponding coffee button indicator is to be illuminated, when the time up ,

coffee maker stops working automatically, and the corresponding coffee button indicator will off.

6. Press and hold 1-cup button for 3 seconds, 1-cup button flashes, entering setting mode, press 1-cup button again to start dispensing coffee, when the specified time is reached, press 1 cup button to complete setting which can be memorized by the unit. Working duration for 1-cup coffee can be set up to 45s. Press and hold 2-cup button for 3 seconds, 2-cup button flashes, entering setting mode, press 2-cup button again to start dispensing coffee, when the specified time is reached, press 2 cup button to complete setting which can be memorized by the unit. Working duration for 1-cup coffee can be set up to 90s.


WARNING: Do not leave the coffee maker unattended during making coffee, as you need operate manually sometimes!

7. After finish making coffee, take metal funnel out by turning it clockwise, then pour coffee residue out with steel mesh pressed by press bar.
8. Let them cool down completely, then rinse under running water.

USING THE PORTA-FILTER FOR OriginalLine NESPRESSO® CAPSULES

Note: The filter only matches Nespresso® capsules.

1. Lift the lid of the OriginalLine Nespresso® capsule filter. Place the OriginalLine Nespresso® capsule inside the filter and then close the lid.

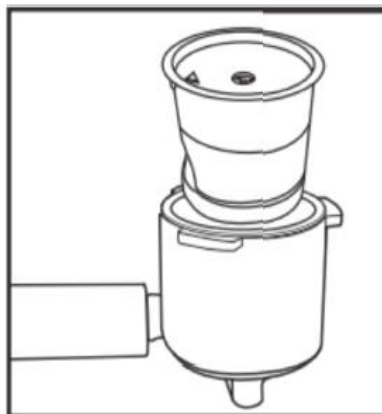

2. Set the OriginalLine Nespresso® capsule filter into capsule funnel, then put the capsule funnel under the metal funnel holder, then insert the funnel into the appliance from the “” position, and fix them into coffee maker firmly by turning it anticlockwise until it is at the “” position.
3. place the hot cup (yourself cup) on removable cup shelf.
4. After preheating is completed, you should press 1-cup or 2-cup coffee button, wait for a moment, there will be coffee flowing out. working time for 1-cup coffee is 15 seconds and 25 seconds for 2-cup

coffee . working time is Max 60s, unit will automatically stop working if no any operation within 60s.

5. After finishing making coffee, press power button, and all the indicator r go out and the coffee maker stops working, your coffee is ready now.
6. You can take the metal funnel out by turning clockwise, then pour the capsule filter.
7. Let them cool down completely, then rinse under running water.

MAKE CAPPUCCINO/FROTHED MILK

You get a cup of cappuccino when you top up a cup of espresso with frothed milk.

Method:

1. Prepare espresso first with container big enough according to the part “**MAKE ESPRESSO**”, make sure that steam control knob is at the OFF position.
2. Press Steam button, Coffee button indicator will be extinguished, wait until Steam button indicator is illuminated.

Note: During operation, Steam button indicator will cycle on and off to maintain desired temperature.

3. Fill a jug with about 100 ml of milk for each cappuccino to be prepared, you are recommended to use whole milk at refrigerator temperature (not hot!).

Note: In choosing the size of jug, it is recommended the diameter is not less than 70 ± 5 mm, and bear in mind that the milk increases in volume by 2 times, make sure the height of jug is enough.

4. Turn steam control knob slowly anti-clockwise, steam will come out from frothing nozzle

Note: Never turn steam control button rapidly, as the steam will accumulate rapidly within short time which may increase a potential risk of explosion.

5. Insert frothing nozzle into the milk about two centimetre, froth milk in the way of moving vessel round up and down.
6. When the required result is reached, turn steam control knob to OFF position.

Note: Clean steam outlet with wet sponge immediately after steam stops producing, but care not to hurt!

7. Pour the frothed milk into the espresso prepared, now the cappuccino is ready. Sweeten to taste and if desired, sprinkle the froth with a little cocoa powder.
8. Press Power button to cut off power. All indicators will be extinguished.

Note: If you want to make coffee immediately after making steam, coffee indicator will flash for alarming upon pressing coffee button, at this time you should turn steam control knob to the ON position to pump hot water in order to let unit cool down.

AUTOMATIC POWER OFF FUNCTION

If there is no any operation within 25 minutes, the unit will power off automatically.

CLEANING AND MAINTENANCE:

1. Turn off coffee maker and let the coffee maker cool down completely before cleaning.
2. Clean housing of coffee maker with moisture-proof sponge often and clean water tank, drip tray and removable cup shelf regularly then dry them.

Note: Do not clean with alcohol or solvent cleanser. Never immerse the housing in water for cleaning.

3. Detach metal funnel by turning it clockwise, get rid of coffee residue inside, then clean it with cleanser, but at last rinse with clear water.
4. Clean all the attachments in the water and dry them thoroughly.

5. After the machine works for 500 cycles (including coffee, steam and other functions), all the indicators quickly flash 5 times at the same time once preheating is completed, reminding you of descaling, if you do not descale, this will happen every time when you use the machine; in standby state, at the same time press and hold Manual coffee button and 2-cup coffee button for 3s, and the two indicators quickly flash 3 times, reminding you of cancelling descaling, and the number of working cycles returns to zero.

CLEANING MINERAL DEPOSITS

1. To make sure your coffee maker operates efficiently, internal piping is clean and the flavor of coffee is optimal, you should clean away the mineral deposits left every 2-3 months.
2. Fill water tank with water and descaler to the MAX level (the proportion of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use “household descaler”, you can use the citric acid (obtainable from chemist’s or drug stores) instead of the descaler (the one hundred parts of water and three parts of citric acid).
3. According to the preheating program, put the metal funnel (without coffee powder in it) and jug in place. Brew water as per “**PREHEATING**”
4. Press Power button, power indicator will be flashes, press Coffee button, make sure steam control knob is in the Off position, when there is water flowing out, press Coffee button to stop pumping, and wait for a moment, the coffee maker begins to preheat
5. When Power button indicator is solidly on, it shows preheating is finished. Press Coffee button and make two cups of coffee (about 20oz). press Coffee button to stop pumping.
6. Press Steam button, Coffee button indicator will be extinguished, wait until Steam button indicator is illuminated. Make steam for 2min by turning steam control knob, then turn steam control knob to the OFF position to stop making steam. Press Power button to turn off the unit immediately, make the descaler deposit inside the unit at least 15 minutes.
7. Press Power button to restart unit, wait until Power button indicator is solidly on,, then press Coffee


button to brew until no descaler is left.

8. Brew with tap water in the MAX level, repeat steps 4-6 for 3 times, then brew until no water is left in water tank.

TROUBLE SHOOTING

Symptom	Cause	Corrections
The metal parts in the tank have rust.	Descaler is not recommended type. It may corrode the metal parts in the tank.	Use the descaler recommended by manufacturer.
Water leaks from the bottom of coffee maker.	There is much water in the drip tray.	Please clean the drip tray.
	The coffee maker is malfunction.	Please contact with the authorized service facility for repairing.
Water leaks out of outer side of filter.	There is some coffee powder on filter edge.	Get rid of them.
Acid (vinegar) taste exists in Espresso coffee.	No clean correctly after cleaning mineral deposits.	Clean coffee maker per the content in “before the first use” for several times.
	Coffee powder is stored in a hot, wet place for a long time. The coffee powder turns bad.	Please use fresh coffee powder, or store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
Coffee maker cannot work any more.	Power outlet is not plugged well.	Plug the power cord into a wall outlet correctly, if the appliance still does not work, please contact with the authorized service facility for repairing.
Steam cannot froth.	The steam indicator is not illuminated.	Only after the steam indicator is illuminated, the steam can be used to froth.
	The container is too big or the shape not fits.	Use high and narrow container.
	You have used skimmed milk	Use whole milk or half-skimmed milk

Do not take apart the appliance by yourself if the cause of failure is not found, you had better contact the qualified servicing center.

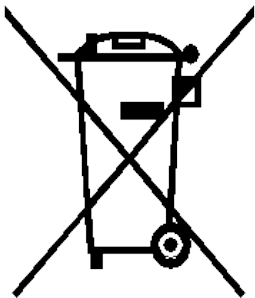


Environment friendly disposal

You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center.





咖啡機使用說明書

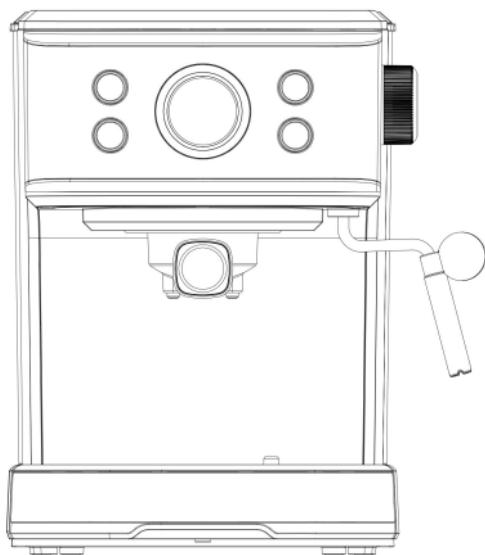

型號 EM-04E

使用前請仔細閱讀本手冊，並保存以備將來參考

深圳市優創達品電子科技有限公司

地址：中國廣東省深圳市羅湖區嘉賓路 4028 號太平洋商貿大廈 B 座 1711

重要保障措施

在使用電器之前，應始終遵守以下基本預防措施，包括

1. 閱讀所有說明。
2. 使用前檢查牆上插座的電壓是否與銘牌上標注的額定電壓壹致。
3. 本設備配有接地插頭。請確保您家中的牆壁插座接地良好。
4. 為防止火災、觸電和人身傷害，請勿將電線、插頭浸入水中或其他液體中。
5. 清潔前和不使用時，請將插頭從牆上插座拔下。在拆卸、安裝部件或清潔之前，請讓設備完全冷卻。
6. 請勿在電線或插頭損壞的情況下操作任何設備，或在設備發生故障、跌落或以任何方式損壞後，將設備送回最近的授權服務機構進行檢查、維修或電氣或機械調整。
7. 使用非設備制造商推薦的附件可能會導致火災、觸電或人身傷害。
8. 將設備放在平坦的表面或桌子上，不要將電源線懸挂在桌子或台面邊緣。
9. 確保電源線不接觸設備的熱表面。
10. 請勿將咖啡機放在高溫表面或火旁，以免損壞。
11. 要斷開連接，請從牆上插座拔下插頭。始終握住插頭。但切勿拉扯電線。
12. 請勿將設備用于其他用途，並將其放置在乾燥的環境中。
13. 在兒童附近使用設備時，必須密切監護。
14. 小心不要被蒸汽燙傷。
15. 請勿觸摸設備的熱表面。請使用把手或旋鈕。
16. 不要讓咖啡機在沒有水的情況下工作。
17. 在沖煮咖啡或釋放蒸汽時，請勿取下金屬漏鬥。
18. 使用前請將插頭連接到牆上插座，並在將插頭從牆上插座拔出前關閉任何開關。
19. 8 岁及以上儿童和身体、感官或智力不健全或缺乏经验和知识的人可以使用本设备，但他们必须接受过有关以安全方式使用本设备的监督或指导，并了解所涉及的危險。儿童不得玩弄设备。除非儿童年满 8 岁并有人监护，否则不得进行清洁和用户维护。
20. 儿童应受到监护，以确保他们不会玩弄设备。
21. 操作或储存环境温度应高于 0℃。
22. 本设备用于家庭和类似用途，例如：
- 商店、办公室和其他工作环境中的员工厨房；
- 商店、办公室和其他工作环境中的员工厨房；
- 农舍；
- 酒店、汽车旅馆和其他住宅类型环境中的客户；
- 住宿和早餐类环境。
23. 请勿在室外使用。
24. 保存这些说明。
25. 如果长时间不使用本产品，需要打开电源并释放蒸汽 3 分钟后再离开本产品。
26. 如果在蒸汽释放过程中切断电源，余热会使产品继续释放蒸汽一段时间，一旦关闭蒸汽旋钮，产品将立即停止释放蒸汽。

了解您的咖啡機

A. 滴水盤


B. 可拆卸擱板

C. 底座

D. 漏斗手柄
G. 2 杯鋼網
J. 2 杯咖啡按鈕
M. 水把手
P. 主體
S. 蒸汽管
V. 膠囊漏斗

E. 金屬漏門
H. 蒸汽按鈕
K. 1 杯咖啡按鈕
N. 水箱蓋
Q. 咖啡勺
T. 泡沫裝置

F. 1 杯鋼網
I. 1 杯鋼網
L. 頂蓋
O. 水箱
R. 蒸汽控制旋鈕
U. 膠囊過濾器

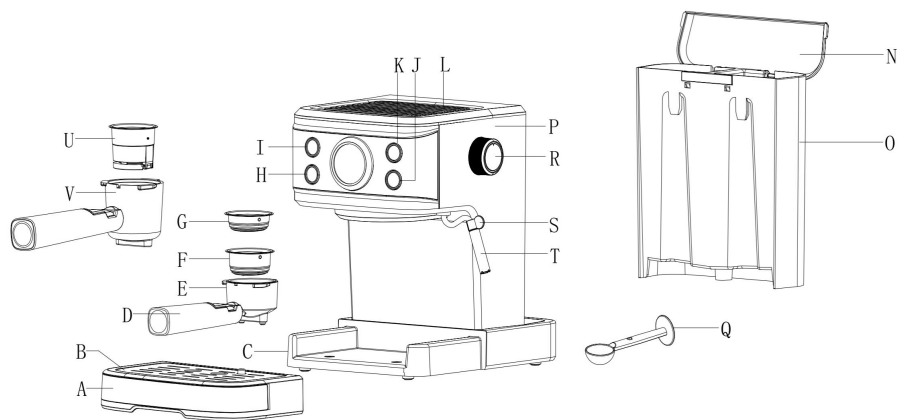

首次使用前

為確保第壹杯咖啡的口感極佳，應按如下步驟用溫水沖洗咖啡壺：

1. 打開水箱蓋，向水箱注水，水位不得超過水箱中的 "MAX" 標記。標記。然後蓋上水箱蓋。

注：為便于清潔，設備配有壹個可拆卸的水箱，您可以先將水箱注滿水，然後將水箱裝入設備。

2. 將鋼網放入金屬漏門中（鋼網中不含咖啡），確保漏門上的管子與設備上的凹槽對齊，然

後將漏門從 "6" 位置插入設備，並將其逆時針旋轉至 "6" 位置，將其牢牢固定在咖啡機中。

將水壺放在可移動的杯架上。確保蒸汽控制旋鈕處於關閉位置。

3. 接通電源，按下電源按鈕，電源指示燈閃爍，機器開始預熱，電源指示燈穩固亮起後，預熱完成。

4. 按下 2 杯咖啡按鈕，設備將抽水約 25 秒鐘，倒出杯中的水，然後徹底清洗，此時設備即可開始制作咖啡。

注意：第壹次打水時可能有噪音，這是設備在釋放內部空氣。大約 20 秒後，噪音會消失。

預熱

1. 爲了煮出壹杯熱騰騰的特濃咖啡，我們建議您在煮咖啡之前先預熱設備，包括金屬漏鬥、鋼網和咖啡杯，這樣咖啡的味道就不會受到冷部件的影響。1.取下可拆卸的水箱，打開水箱蓋，注入所需的水，水位不應超過水箱中的 "MAX" 標記。然後更換水箱。
- 2.將鋼網裝入金屬漏鬥，確保漏鬥上的管子與設備上的凹槽對齊，然後將漏鬥從" "位置插入設備，並將其逆時針旋轉至""位置，使其牢固地固定在咖啡機上。
3. 在可移動的杯架上放壹個意式咖啡杯。
4. 然後連接設備電源。確保蒸汽控制旋鈕處於關閉位置。
5. 按下電源按鈕，電源指示燈閃爍，機器開始預熱，電源指示燈穩固亮起後，表示預熱完成，按下 2 杯咖啡按鈕，機器開始抽水，當有水流出時，再次按下該咖啡按鈕，立即停止抽水。此步驟的目的是將水箱中的水抽入鍋爐。
6. 電源指示燈亮起時，表示預熱完成。

制作意式咖啡


順時針旋轉漏鬥，取出漏鬥。用量勺將咖啡粉加入鋼網，壹勺咖啡粉可制作約壹杯頂級咖啡，然後用打蛋器將咖啡粉壓緊。

1. 將鋼網裝入金屬漏鬥，確保漏鬥上的管子與設備上的凹槽對齊，然後將漏鬥從" "位置插入設備，並將其逆時針旋轉至""位置，使其牢固地固定在咖啡機上。
2. 在可移動的杯架上放壹個杯子。
3. 預熱完成後，按下 1 杯或 2 杯咖啡按鈕，產品將開始沖煮，1 杯咖啡的工作時間爲 15 秒，2 杯咖啡的工作時間爲 25 秒。5.在相應的咖啡按鈕指示燈亮起時，當時間到時，咖啡機自動停止工作，相應的咖啡按鈕指示燈熄滅。
4. 按住 1 杯咖啡按鈕 3 秒鐘，1 杯咖啡按鈕閃爍，進入設置模式，再次按 1 杯咖啡按鈕開始輸出咖啡，當達到指定時間時，按 1 杯咖啡按鈕完成設置，該設置可被本機記憶。按住 2-cup 按鈕 3 秒鐘，2-cup 按鈕閃爍，進入設置模式，再次按 2-cup 按鈕開始輸出咖啡，當達到指定時間時，按 2-cup 按鈕完成設置，該設置可由設備記憶。1 杯咖啡的工作時間最多可設置 90 秒。
5. 警告：在制作咖啡期間，請勿將咖啡機置于無人看管的狀態，因爲有時您需要手動操作！
6. 煮完咖啡後，順時針旋轉金屬漏鬥，取出金屬漏鬥，然後用按壓杆按壓鋼網，將咖啡渣倒出。
7. 待其完全冷卻後，用流動的清水沖洗幹淨。

使用 OriginalLine NESPRESSO® 膠囊的 PORTA 過濾器

注意：該過濾器僅適用於 Nespresso® 咖啡膠囊。

- 1.掀開 OriginalLine Nespresso® 咖啡膠囊過濾器的蓋子。將 OriginalLine Nespresso® 膠囊放入過濾器內，然後蓋上蓋子。

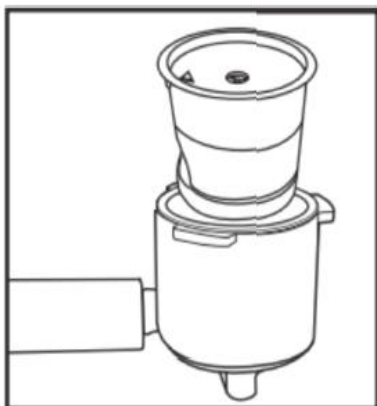

1. 将 OriginalLine Nespresso® 胶囊过滤器装入胶囊漏斗，然后将胶囊漏斗置于金属漏斗支架下方，再将漏斗从"6"位置插入设备，并将其逆时针旋转至"0"位置，使其牢固地固定在咖啡机中。
2. 将热杯（自己的杯子）放在可移动的杯架上。
3. 预热完成后，按下 1 杯或 2 杯咖啡按钮，稍等片刻，就会有咖啡流出。1 杯咖啡的工作时间为 15 秒，2 杯咖啡的工作时间为 25 秒，工作时间最长为 60 秒，如果 60 秒内没有任何操作，咖啡机将自动停止工作。
4. 煮完咖啡后，按下电源按钮，所有指示灯熄灭，咖啡机停止工作，此时咖啡已煮好。
5. 将金属漏斗顺时针旋转取出，然后倒入胶囊过滤器。
6. 待其完全冷却后，用流水冲洗干净。

制作卡布奇诺/加奶

在壹杯特濃咖啡中加入打泡牛奶，就能得到壹杯卡布奇諾。

方法：

1. 根據 "制作意式濃縮咖啡 "部分，用足夠大的容器準備意式濃縮咖啡，確保蒸汽控制旋鈕處於關閉位置。
2. 按下蒸汽按鈕，咖啡按鈕指示燈熄滅，等待蒸汽按鈕指示燈亮起。

注意：在操作過程中，蒸汽按鈕指示燈會循環開啓和關閉，以保持所需的溫度。

3. 為每杯卡布奇諾咖啡注入約 100 毫升牛奶，建議使用冷藏溫度下的全脂牛奶（不要熱牛奶！）。

注：在選擇壺的大小時，建議直徑不小於 $70 \pm 5\text{mm}$ ，並注意牛奶的體積會增加 2 倍，確保壺

的高度足夠。

4.逆時針緩慢旋轉蒸汽控制旋鈕，蒸汽將從起泡噴嘴噴出。

注意：切勿快速旋轉蒸汽控制鈕，因為蒸汽會在短時間內迅速積聚，從而增加潛在的爆炸風險。

5.將起泡噴嘴插入牛奶中約兩厘米，以上下移動容器的方式使牛奶起泡。

6.達到要求的效果後，將蒸汽控制旋鈕轉到關閉位置。

注意：蒸汽停止後，立即用濕海綿清潔蒸汽出口，但注意不要弄傷！

7.將打好的奶泡倒入準備好的意式濃縮咖啡中，卡布奇諾就做好了。根據口味添加甜味，如果需要，可在奶泡中撒上少許可可粉。

8.按電源按鈕切斷電源。所有指示燈將熄滅。

注意：如果您想在制作完蒸汽後立即制作咖啡，按下咖啡按鈕後，咖啡指示燈會閃爍報警，此時您應將蒸汽控制旋鈕轉到開的位置，抽出熱水，以便讓設備冷卻。

自動斷電功能

如果在 25 分鐘內沒有任何操作，設備將自動關閉。

如果在 25 分鐘內沒有任何操作，設備將自動關閉。：

1. 關閉咖啡機，讓咖啡機完全冷卻後再清洗。

2. 經常用防潮海綿清潔咖啡機外殼，定期清潔水箱、滴水盤和可移動杯架，然後擦幹。

注意：請勿使用酒精或溶劑清潔劑清潔。切勿將外殼浸入水中清洗。

3. 順時針旋轉金屬漏門將其拆下，清除裏面的咖啡殘渣，然後用清潔劑清洗，最後用清水沖洗乾淨。

4. 在清水中清洗所有附件並徹底晾幹。

5. 機器工作 500 次後（包括咖啡、蒸汽和其他功能），預熱完成後所有指示燈同時快速閃爍 5 次，提醒您除垢，如果您不除垢，每次使用機器時都會出現這種情況；在待機狀態下，同時按住手動咖啡鍵和 2 杯咖啡鍵 3 秒鐘，兩個指示燈快速閃爍 3 次，提醒您取消除垢，工作循環次數歸零。

清除礦藏

1. 為確保您的咖啡機高效運行、內部管道清潔和咖啡風味最佳，您應每 2-3 個月清理壹次殘留的礦物質沉澱物。

2. 將水和除垢劑注入水箱至最大水位（水和除垢劑的比例為 4:1，具體請參考除垢劑使用說明）。請使用 "家用除垢劑"，也可以使用檸檬酸（可在藥店或藥房購買）代替除垢劑（100 份水和 3 份檸檬酸）。

3. 按照預熱程序，將金屬漏門（內無咖啡粉）和壺放好。按照 "預熱" 程序沖泡水

4. 按下電源按鈕，電源指示燈閃爍，按下咖啡按鈕，確保蒸汽控制旋鈕處於關閉位置，當有水流出時，按下咖啡按鈕停止抽水，稍等片刻，咖啡機開始預熱。


5. 當電源按鈕指示燈亮起時，表明預熱完成。按下咖啡鍵，制作兩杯咖啡（約 2 盎司）。

6. 按下蒸汽鍵，咖啡鍵指示燈熄滅，等待蒸汽鍵指示燈亮起。轉動蒸汽控制旋鈕，產生 2 分鐘的蒸汽，然後將蒸汽控制旋鈕轉到關閉位置，停止產生蒸汽。按下電源按鈕立即關閉咖啡機，使除垢劑在咖啡機內沈積至少 15 分鐘。
7. 按下電源按鈕重新啟動設備，等待電源按鈕指示燈亮起，然後按下咖啡按鈕沖泡，直到沒有除垢劑殘留為止。
8. 用最高水位的自來水沖泡，重複步驟 4-6 3 次，然後沖泡至水箱無水。

故障排除

症狀	原因	更正
水箱中的金屬部件已生鏽。	不推薦使用除垢劑。它可能會腐蝕水箱中的金屬部件。	使用制造商推薦的除垢劑。
咖啡机底部漏水。	滴水盘中有很多水。	请清洁滴水盘。
	咖啡机出现故障。	请联系授权服务机构进行维修。
滤网外侧漏水。 咖啡有酸（醋）味。	过滤器边缘有咖啡粉。 清洁矿物质沉积物后不能正确清洁。	清除掉。 按照 "首次使用前 "中的内容多次清洁咖啡机。
	咖啡粉长期存放在高温潮湿的地方。咖啡粉变质。	请使用新鲜的咖啡粉，或将未使用的咖啡粉存放在阴凉干燥处。打开咖啡粉包装后，请将其重新密封并存放在冰箱中，以保持其新鲜度。
咖啡机无法继续工作。 蒸汽无法起泡。	电源插座没有插好。	将电源线正确插入墙上的插座，如果设备仍然无法工作，请联系授权服务机构进行维修。
	蒸汽指示灯不亮。	只有在蒸汽指示灯点亮后，才能使用蒸汽起泡。
	容器太大或形状不合适。	使用高而窄的容器。

如果找不到故障原因，請勿自行拆卸設備，最好聯系有資質的維修中心。

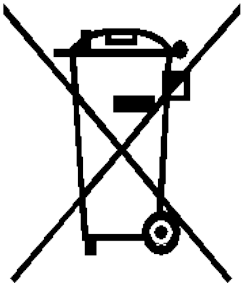

環保處置

您可以幫助保護環境！

請謹記遵守當地法規：將不工作的電氣設備交給適當的廢物處理中心。