



Affordable. Reliable. Home Improvement.

HEATED SOCKS


MODEL:PG-4000, KEC-5000, KEC-6000

VEVOR

Affordable. Reliable. Home Improvement.

HEATED SOCKS

MODEL:PG-4000, KEC-5000, KEC-6000

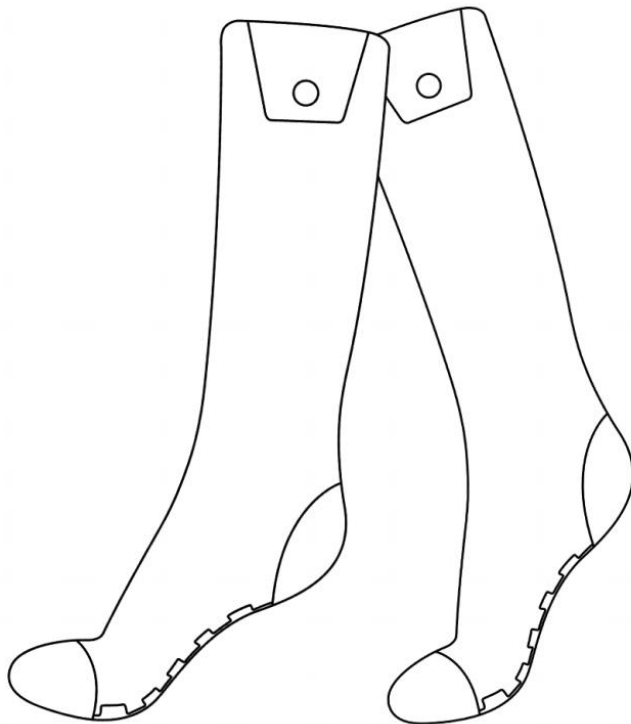

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

Symbol	Symbol Description
	CORRECT DISPOSAL This product is subject to the provision of european Directive 2012/19/EU. The symbol showing a wheelie bin crossed through indicates that the product requires separate refuse collection in the European Union. This applies to the product and all accessories marked with this symbol. Products marked as such may not be discarded with normal domestic waste, but must be taken to a collection point for recycling electrical and electronic devices.
 Li-Ion	BATTERY DISPOSAL To minimize hazards to health and the environment at the end of this product's life, laws dealing with Waste Electrical and Electronic Equipment(WEEE)and The Waste Battery Directive require you to dispose of this product at a suitable collection facility where it will be sent in order to remove the batteries and for appropriate recycling.Please contact your local authorities for more details on recycling and safe disposal of these in your area.
	FCC Information: CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment! This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This product may cause harmful interference. 2)This product must accept any interference received, including interference that may cause undesired operation. WARNING: Changes or modifications to this product not expressly approved by the party.responsible for compliance could void the user's authority to operate the product. Note: This product has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules, These limits are designed to provide reasonable

	protection against harmful interference in a residential installation. This product generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this product does cause harmful interference to radio or television reception, which can be determined by turning the product off and on, the user is encouraged to try to correct the interference by one or more of the following measures. · Reorient or relocate the receiving antenna. · Increase the distance between the product and receiver. · Connect the product to an outlet on a circuit different from that to which the receiver is connected. · Consult the dealer or an experienced radio/TV technician for assistance.
--	---

WARNING

Read all safety warnings and instructions below. They apply to all heated apparel including, but not limited to, jackets, vests, parkas, socks, and hoodies. Failure to follow the instructions and warnings may result in electric shock, fire, serious injury, and/or product damage.

- Check connection cables and connectors regularly for signs of worn.
- To reduce the risk of the product powering on unintentionally, disconnect the power pack/battery box from the power cables, and remove it from the garment before storing or washing.
- Use the product only as stated in this manual, taking into account the environment in which the product will be worn. Use of the product for operations other than specified herein may result in injury to the user or product damage. That use may also void the warranty for the product.
- If you have a medical condition, device, or take medication that may affect your sensitivity to heat, consult your physician before use.

- If the product malfunctions or does not operate properly, stop using it immediately.
- Clean this product only in accordance with the instructions specified on the product's washing label, and in the Cleaning Instructions section of this manual for a long lifespan and better function.
- Make sure that the power pack/battery box is held in the pocket properly when in use.

Lithium Battery Safety Warnings LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED:

- a. Keep Battery pack dry.
- b. DO NOT DO ANY OF THE FOLLOWING to THE BATTERY PACK: • Open, • Drop, • Short-circuit, • puncture, • incinerate, or • Expose to temperatures greater than 265°F.
- c. Charge Battery Pack only according to its Charger's instructions.
- d. Inspect Battery Pack before every use; Do not use or charge if damaged.

INSTRUCTIONS

Thank you very much for choosing these heated socks. Please read all of the instructions before using it. The information will help you achieve the best possible results.


PART LIST

1Pair x Heated Socks	2xBattery Packs	1xY-Shaped Type-C Cable
1xLaundry bag	1xUser Manual	

Specifications

Material	Anti-Pilling Acrylic Fiber 19%+Modal (Viscose)23%+Polyamide 14%+ Polyester 24%+PBT 17%+Nylon 3%
Heating Area	Front Instep+ Front Sole +Toe Heating Area For Pure Black With 2 White Strips; Front Instep + Front Sole Heating Area For Black With Orange Leaves
Control Methods	1.Button Control(Support ON/OFF;4 Heating Levels Switch); 2.APP Control (Model PG-4000 is not applicable)
Heating Level	4 Levels(40-50-60-70℃± 5℃/104-122-140-158 F±41F) (Or 40-70℃/104-158F Stepless Temperature Via APP)
Per Polymer Battery Pack Capacity	4000mAh / 5000mAh / 6000mAh
Battery Pack Input/Output	5V/2A(10W)
Per Battery Pack Recharging Time	About 4 Hrs For PG-4000 And KEC-5000; About 6 Hrs For KEC-6000;
Working Time	2.5-6.5Hrs For PG-4000; 3.5-7Hrs For KEC-5000; 3.5-8Hrs For KEC-6000
APP Name	SAFEIER
Wireless Connecting Name	AC632N-1
Timer Setting Via APP	15Mins/30Mins/45Mins/60Mins/90Mins/Constant Heating
Recommended Shoe Size	EU 38-48/US 6-14 For Size Universal; EU 35-38/US 5-6 For Size S; EU 38-42/US 6-9 For Size M; EU 42-45/US 9-12 For Size L; EU 45-48/US 12-14 For Size XL;
Visible Power Cable Length	10cm/3.94in

Product Details

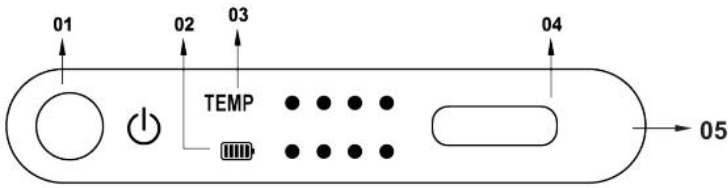

(1) Battery Pack Details

01.Power switch/mode selection.

02.Battery power indicator light(it will bright with one indicating 25%battery,two indicating 50%battery,three indicating 75%battery,and four indicating 100%battery).

03.Heating indicator light, when fully lit, the maximum gear is heated, one lit means the minimum gear is heated, and when fully lit and flashing at the same time,it is the fast heating mode.

04.TYPE-C input recharging port. Socks°F

05.Power output port

(2) APP Interface Introduction

- ①Dual Socks Setting
- ②Temperature Switch
- ③104-158F Stepless Adjustment
- ④ON/OFF Switch
- ⑤4 Level Adjustment:104-122-140-158F
- ⑥5 Timer Setting
- ⑦Constant Heating Mode
- ⑧Fast Heating Mode
- ⑨Remain Battery Power



Connect with the APP

(Model PG-4000 is not applicable)

Step1:Download the APP. Search for "SAFEIER" in the APP store or GooglePlay and download the "SAFEIER"APP.

Step2:Turn on the "Wireless" function of the phone

Step3:Connect the device



1.Firstly,connect the power cord to the battery.


2.Open the application and it will automatically match and connect to the device. When the following icon turns blue, indicating that the application is connected to the device, it is turned on and heating up.



Step4:Select your heating mode on the APP

(1)Automatic heating mode. After connecting the device to the APP, it automatically enters to the heating program. Then, the temperature rises to the desired value, adjust the gear down for insulation. The temperature can also be adjusted quickly by means of the 4 Level Adjustment.

(2)Rapid heating mode. Open the quick heating mode button at the bottom left corner of the APP, the device will enter quick heating for 2 minutes and then switch to 3-speed,and then automatically enter keep warm mode after another 2 minutes.

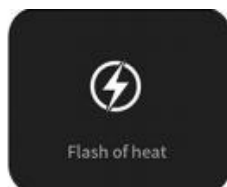

THINGS TO AVOID

This product is NOT intended for:

- An infant or young child.
- An incapacitated or immobile person.
- A person with diabetes.
- A person who is paralyzed, or who has skin that is sensitive to temperature changes.
- Anyone with heat-sensitivity medical issues (e.g. poor blood circulation).
- Anyone who cannot clearly comprehend the instruction manual and/or operate controls.

SAFE PRACTICES

●Prolonged close contact with the body of the heating system can cause burns.

Wear thin socks inside the heated socks first when using.

- Please DO NOT allow the heating elements to make contact with bare skin directly.
- ALWAYS wear a base layer between the product and the skin.
- ALWAYS use the lowest possible setting for comfort.
- DO NOT use for prolonged periods particularly at high heat setting.
- DO NOT use when wet. This includes excessive sweat. If the inner lining becomes wet, allow the product to dry completely before wearing. Wet, heated apparel increases the risk of electric shock.
- DISCONTINUE USE IMMEDIATELY at any sense of discomfort. Power off the product immediately if any discomfort occurs while wearing it. Temperatures high enough to cause burns could occur regardless of the heat setting.

- Please DO NOT use the product if the power button is malfunctioning.
 - Please DO NOT use the product while sleeping, or when there is the potential to fall asleep while wearing.
 - Please DO NOT use the product under the influence of drugs or alcohol, as this can decrease skin sensitivity, and/or impair the ability to recognize the sensation of a burn.
 - Please DO NOT use the product on open wounds.
 - Please DO NOT use the product continuously for a long period of time. Excessive heat levels over prolonged periods of time can lead to burns.
 - It is forbidden to be close to fire sources, corrosive liquids and various adverse environments.
 - DO NOT use in high temperature and another extreme environments, otherwise, it may lead to other unexpected safety risks.
 - DO NOT use it in bathrooms, laundry rooms or other similar humid environments cause the socks are not waterproof.
 - DO NOT place the power pack next to the bathtub or other water containers. Keep it dry.
 - Always keep the plug dry. Do not use it in the presence of water or high humidity.
 - DO NOT hit the power pack violently.
 - DO NOT attempt to repair, modify or disassemble this product.
 - Do heat up the socks with the supplied battery pack.
 - Recharge and activate the battery every 60 days if not used frequently.
- Do NOT use during sleep at night to prevent low temperature burns.(if the human body is in a low-temperature environment, the body feels dull, and there are differences in physical fitness. Please lower the temperature in time when the body feels slightly burning.
- When not using the product, unplug the plug from the battery for storage.
 - It is only the household electronic health product and shall not be used for diagnostic, therapeutic or other commercial purposes.

PRECAUTIONS

- You don't need to use the maximum heating range all the time. When you feel enough temperature, choose a small gear on the APP in a timely manner to keep warm.
- If you don't want to use the APP, you can also switch it directly on the battery:
 - (1) Connect the battery to the power cord on the sock first.
 - (2) Press and hold the switch for 3 seconds, and the heating indicator light will all light up and flash simultaneously, indicating that the 1-minute rapid heating program has entered. After starting the heating program, you can also freely select the heating mode by pressing the switch.
 - (3) Press and hold the switch again for 3 seconds to shut down.
- After your device is connected to the APP, when the phone is away from the device, the APP will display that the device is turned off, but the socks are still in a heated state. When the phone is close to the device, it will automatically connect to the APP.
- For better using experience, it is recommended that the battery be fully charged before use. Otherwise, you may find the socks don't heat because of insufficient power.
- In order to get a better heating affection, please wear a thin sock inside, then put on the Heated Socks. Finally, put on trousers to keep the temperature.
- When using this product, if you find that the local temperature of the power pack and power cord plug is too high or other abnormalities, please stop using it immediately.
- Please use an 5V/2A adapter to charge the power pack. Do not use an unmatched adapter.

PRODUCT CARE

- PLEASE DO NOT dry clean the product.
- PLEASE DO NOT allow the cord to become tangled, pinched, kinked, or damaged inside the power pack/battery box pocket. Fire could result.
- PLEASE DO NOT attach pins or any other object(s) to the product. It may cause the damage of electrical wiring.
- PLEASE DO NOT use bleach when hand-washing. Harsh cleaning solvents may damage, or lessen the effectiveness of, the insulated heating elements.
- PLEASE DO NOT use overheating water to wash. Wash with 30°C/86F or below water.
- PLEASE DO NOT use acidic detergent to clean the product. Use neutral detergent to clean the product.

DISCONNECT and REMOVE the power pack/battery box from the pocket, put the connector cable back inside of the pocket, and make sure the pocket is fully zippered closed(If features zip)before washing the apparel. Just dry it naturally, don't use the dryer. Note that the USB connector needs to be completely dry before reconnecting the battery.



- Place the apparel inside of a mesh laundry bag before putting it in the washing machine.
- Follow Care Instructions on the garment tags. Machine wash, gentle cycle or hand wash in cold water.
- DO NOT iron.
- DO NOT use bleach or any other harsh cleaning agents.
- DO NOT wring or twist the apparel.
- DO NOT dry clean.
- DO NOT machine dry.
- Support Hang Dry Naturally.
- Line dry, hang dry, or lay flat to dry only.
- Recommend to wash with 30°C/86 For below water.

MAINTENANCE

1.Note:In extremely cold temperatures, the activity of the Polymer battery may decrease, leading to a corresponding reduction in usage duration, and the perceived temperature may also decrease.

2.Cannot start function: the battery may be low, please charge it.

3.Any other abnormal conditions can't be solved, please contact us.

Common Fault Guidelines

Fault Description	Cause Analysis	Solution
The socks do not heat up	1. The power supply is not connected. 2. The battery is dead.	1. Check the power supply: Replace the battery or ensure the plug is securely inserted. 2.Please charge it in time
The temperature is not hot enough	1. Failed to select the appropriate heating setting 2. The battery is running low.	1. Adjust the heating setting and select the appropriate temperature. 2. Please charge it in time
The APP does not respond to control.	The mobile phone's Bluetooth function is not turned on.	Turn on the Bluetooth on your mobile phone
The battery cannot be charged.	The plug of the charging cable is loose or damaged.	Replace with a charger of the same specification

Manufacturer: Dongguan Jintai electronic Technology Co., LTD.

Address: Third floor,Building A, 217 South Jie Road, Xiaojie Jiao
Community, Humen Town, Dongguan City,China

Imported to AUS: SIHAO PTY LTD. 1 ROKEVA STREETEASTWOOD
NSW 2122 Australia

Imported to USA: Sanven Technology Ltd. Suite 250, 9166 Anaheim
Place, Rancho Cucamonga, CA 91730

UK	REP
-----------	------------

YH CONSULTING LIMITED. C/O YH Consulting
Limited Office 147, Centurion House, London
Road, Staines-upon-Thames, Surrey, TW18 4AX

EC	REP
-----------	------------

E-CrossStu GmbH
Mainzer Landstr.69,
60329 Frankfurt am Main.

