

Installation & Usage Instruction for Foam Gun (Dog Wash Kit)

1. Pre-Installation Preparation

1.1 Components Check

First, confirm all parts are included in the kit to avoid missing accessories:

- 1 × Heavy-duty foam gun (with built-in soap dispenser and rotary foam adjustment switch)
- 1 × Hose nozzle (compatible with standard garden hoses)
- 3 × Practical accessories: Car wash mitt, pet bath brush, lint remover
- 1 × Detergent bottle (attached to the foam gun)

1.2 Tools & Auxiliary Materials

No additional tools required for installation.

Prepare: Mild car wash detergent/pet shampoo (avoid corrosive cleaners to protect the foam gun's material), standard garden hose (with 3/4-inch universal thread), and a clean cloth (for post-use cleaning).

1.3 Safety Precautions

Ensure the foam gun and hose are dry before assembly to prevent slipping.

Keep the foam gun away from sharp objects and avoid dropping it (though it's heavy-duty, rough handling may affect spray performance).

When using for pet/horse bathing, test the water temperature (37 – 39° C is ideal) and spray pressure on a small area first to avoid startling animals.

Keep the foam gun out of children's reach when not in use, especially when connected to a water source.

2. Step-by-Step Installation & Assembly

Step 1: Connect the Foam Gun to the Garden Hose

Take the foam gun's hose nozzle (the end with the universal thread) and align it with the outlet of your garden hose.

Rotate the nozzle clockwise by hand to tighten the connection — ensure it's snug but not over-tightened (over-tightening may damage the thread).

Turn on the water tap slightly to check for leaks: If water seeps from the joint, re-tighten the nozzle or wrap a layer of Teflon tape (optional) around the hose thread before re-connecting.

Step 2: Install the Detergent Bottle

Unscrew the detergent bottle from the foam gun by rotating it counterclockwise.

Pour the desired detergent (car wash soap, pet shampoo, etc.) into the bottle—fill it to 1/3 – 2/3 capacity (avoid overfilling to prevent foam overflow).

Screw the bottle back onto the foam gun clockwise until it's firmly attached. Ensure the seal ring at the bottle mouth is intact (this prevents detergent leakage during use).

Step 3: Attach Optional Accessories (As Needed)

The kit includes 3 interchangeable accessories, which can be installed based on your task:

Car Wash Mitt: No assembly required—directly use it to wipe the car body after spraying foam for deep cleaning.

Pet Bath Brush: Hold the brush handle and gently attach it to the foam gun's spray outlet (it fits snugly via a snap-on design). Ensure it's fully seated to avoid falling off during use.

Lint Remover: For post-cleaning use (e.g., removing lint from car seats or pet fur)—no connection

to the foam gun is needed; use it independently.

Step 4: Adjust Spray Pattern & Foam Intensity

Select Spray Pattern: Rotate the front of the foam gun to switch between 8 spray modes. The modes are clearly marked on the gun body: MIST, CENTRE, FLAT, CONE, FULL, JET, FLOOD, and SHOWER. Test each mode briefly to familiarize yourself with the water flow:

MIST/CENTRE: Suitable for watering plants or gentle cleaning of delicate surfaces.

FLAT/CONE: Ideal for car washing (even foam coverage).

JET: For tough stains on driveways or house exteriors.

FLOOD/SHOWER: Perfect for pet/horse bathing or rinsing large areas.

Adjust Foam Amount: Use the rotary switch on the side of the foam gun to control the detergent concentration:

Rotate clockwise to increase foam intensity (for heavy dirt, e.g., muddy cars/pets).

Rotate counterclockwise to decrease foam (for light cleaning or rinsing).

Turn the switch to the “OFF” position to spray only water (no detergent).

3. Usage Guide for Different Scenarios

3.1 Car Washing

Select FLAT or CONE spray pattern, adjust foam to medium-high intensity.

Spray the entire car with foam, covering all surfaces (let the foam sit for 1 – 2 minutes to dissolve dirt).

Use the car wash mitt to wipe the body gently, then switch the foam gun to FULL or SHOWER mode (foam OFF) to rinse thoroughly.

3.2 Pet/Horse Bathing

Attach the pet bath brush to the foam gun, select SHOWER spray pattern, and set foam to low-medium intensity.

Wet your pet/horse with water first (foam OFF), then apply foam evenly with the brush.

Massage the coat gently with the brush, then rinse with water (foam OFF) until no soap residue remains.

3.3 House/Garden Cleaning

For house exteriors/driveways: Select JET or FLOOD mode, adjust foam as needed (use cleaning detergent for tough stains).

For watering plants: Choose MIST mode, turn off foam, and spray gently to avoid damaging foliage.

4. Post-Use Disassembly & Maintenance

Step 1: Disconnect the Foam Gun

Turn off the water tap first, then press the foam gun’s trigger to release any remaining water pressure.

Rotate the hose nozzle counterclockwise to disconnect it from the garden hose.

Step 2: Clean the Detergent System

Unscrew the detergent bottle, empty any remaining detergent, and rinse the bottle with clean water.

Fill the bottle with water, reattach it to the foam gun, and set the foam switch to maximum.

Spray water for 30 seconds (select FULL mode) to flush the detergent channel—this prevents clogs and residue buildup.

Empty the water bottle and dry it with a clean cloth.

Step 3: Clean Accessories

Rinse the car wash mitt and pet bath brush with water to remove soap residue, then hang them to air dry.

Wipe the lint remover with a dry cloth to remove debris.

Step 4: Store the Foam Gun

Wipe the entire foam gun with a dry cloth to remove water spots (prevents rust or material degradation).

Disassemble all parts (detergent bottle, accessories) and store them in a dry, cool place (avoid direct sunlight or high temperatures).

Ensure the foam gun is completely dry before storage to extend its service life.