 


Item #1008677353

Model #FL-804

USE AND CARE GUIDE

5 INCH PORTABLE FAN USB RECHARGEABLE

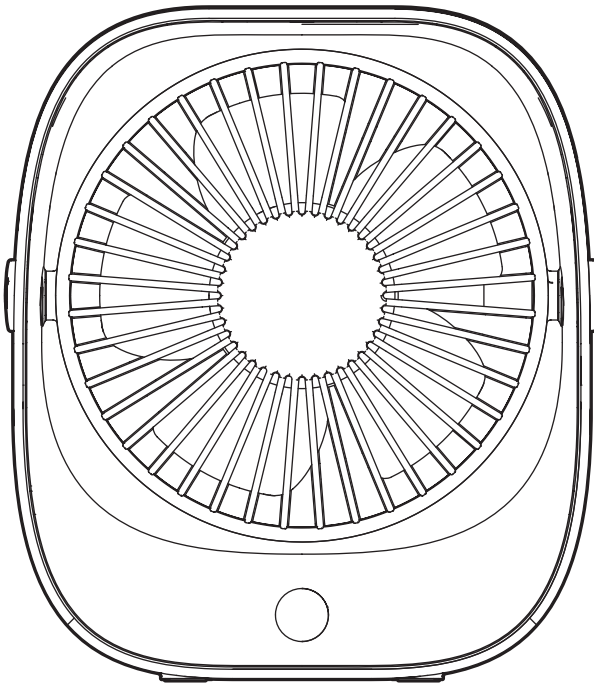

Questions, problems, missing parts?

Before returning to the store, call Customer Service

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-HOMEDEPOT (1-800-466-3337)

HOMEDPOT.COM

Table of Contents

Safety Information	2	Operation.....	4
Warranty.....	2	Care and Cleaning	5
Pre-Operation	3		
Specifications	3		
Package Contents	3		

Safety Information

- ☐ Do not disassemble the fan by yourself.
- ☐ Do not allow the fan to get wet.
- ☐ Do not put the fan near anything hot.
- ☐ Do not put the fan near any liquid.
- ☐ Children should be supervised by adults when using.
- ☐ Do not use the fan in humid and wet weather or in a wet environment, as it could damage the product or cause it to malfunction.
- ☐ Charge the fan with standard DC 5V voltage. Remove the USB cable when charging is completed.
- ☐ Do not place the fan on anything flammable when charging.
- ☐ Keep the fan at temperatures between 32°F–104°F.
- ☐ Do not hit or smash the fan. Repeated hitting may damage the fan.
- ☐ Do not dismantle, change or repair the fan by yourself.
- ☐ Do not remove or modify the fan battery.



CAUTION: When operating, the fan blade revolves at a high speed. Do not put fingers or other objects in the fan blades.



CAUTION: Do not place the fan in a fire; otherwise, the battery will explode.



CAUTION: If the fan gets too hot or out of shape, or if the battery is leaking while charging, please stop charging immediately.

Warranty

LIMITED WARRANTY


This product is warranted to be free from defects in workmanship and materials for up to one (1) year from date of purchase. If it fails to do so, please contact the Customer Service Team at 1-800-HOMEDEPOT (1-800-466-3337) or visit www.HomeDepot.com.

SPECIFICATIONS

Input	DC 5 Volts – 1 Amp
Speed Level	3 Speeds – High / Medium / Low
Working Hours	Average 4–5 hours at high speed* Up to 11 hours at low speed*
Battery Capacity	2,900 mAh
Hours of Charging	4–5 hours*
Product Dimension	5.7 in. H × 5 in. W × 1.8 in. D
Product Weight	8.3 oz.

* Working hours and charging hours will differ based on different products.

PACKAGE CONTENTS

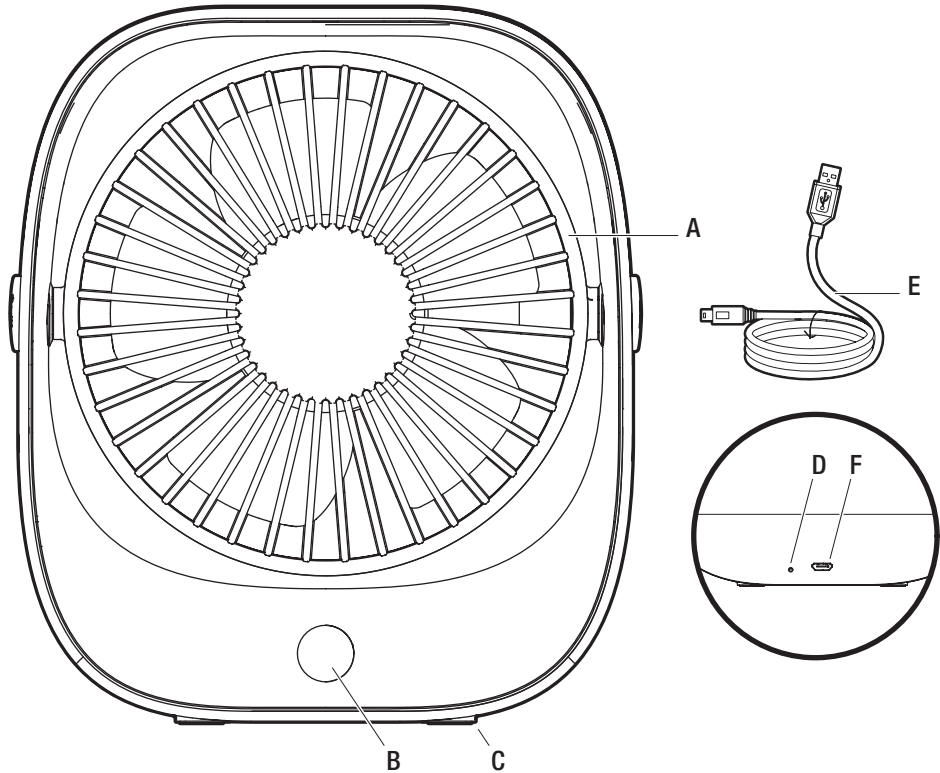


Part	Description	Quantity
A	Fan	1
B	Power Button	1
C	Foot	2

Part	Description	Quantity
D	Power Indicator Light	1
E	USB Cable	1
F	USB Port	1

1 Charging the Fan

- Plug the USB cable (E) into the USB Port (F) on the back of the fan (A).
- Plug the other end of the USB cable (E) into a USB wall charger (not included) or other power source.
- The power indicator light (D) turns red when the fan (A) is charging.
- The power indicator light (D) turns blue when the fan (A) is fully charged.
- The power indicator light (D) is blue while the fan (A) is in use.

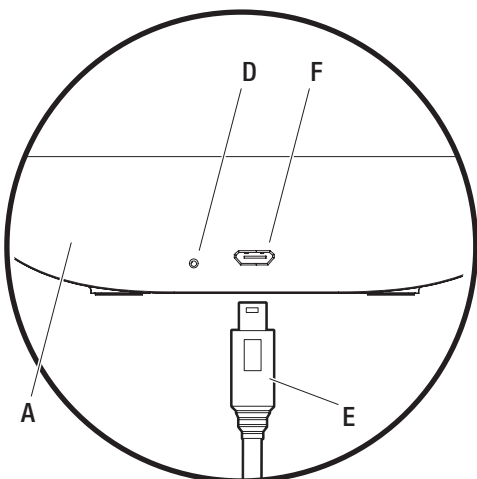


2 Operating the Fan




NOTE: Working hours - when fully charged:
At the lowest fan speed, the fan works for about 9–10 hours.
At the medium fan speed, the fan works for about 7–8 hours.

- Push power button (B) once, and the fan starts operating at its highest speed.
- Push power button (B) a second time, and the fan operates at medium speed.
- Push power button (B) a third time, and the fan operates at lowest speed.
- Push power button (B) a fourth time, and the fan will turn off.

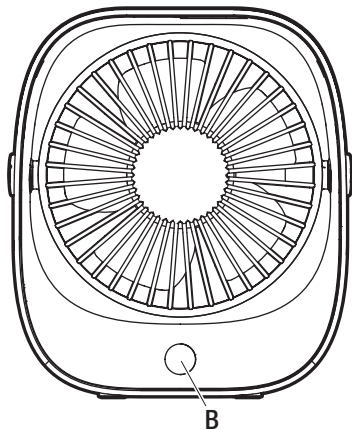

3 Adjusting the Fan Angle


- Push the fan head to point up, down or straight ahead as desired.

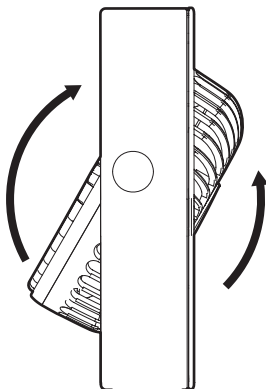

Care and Cleaning


1 Removing Front Grill

- Make sure the fan (A) is off.
- Turn the front grill (AA) counterclockwise, and take the front grill off.

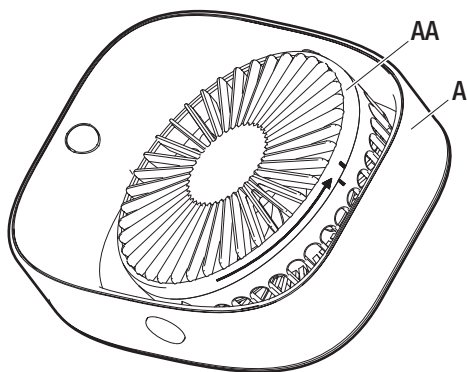


2 Cleaning Front Grill

- Clean the front grill (AA) and blade (BB) with a soft cloth.

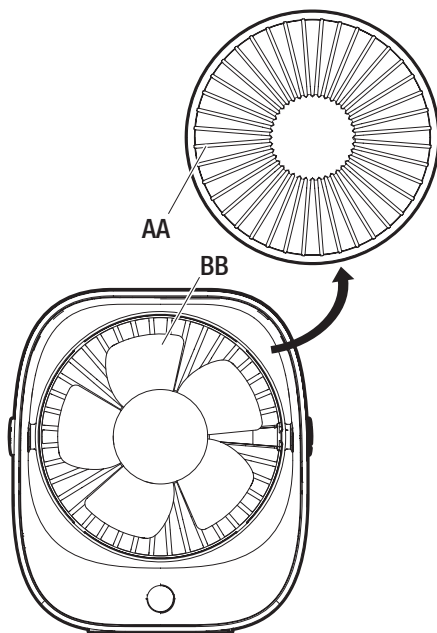

3 Reinstalling Front Grill

- Position the front grill (AA) on the fan (A) and turn clockwise to lock in place.
- Ensure the line on the front grill (AA) is aligned with the line on the fan body.

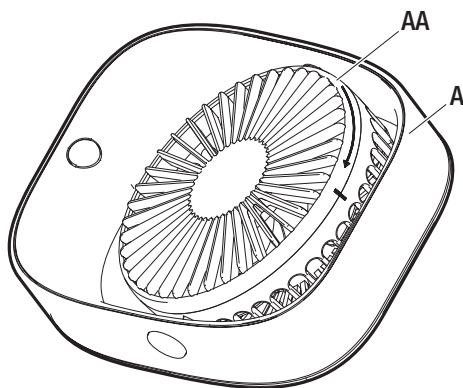

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-HOMEDEPOT (1-800-466-3337)

HOMEDOT.COM

Retain this manual for future use.