


USE AND CARE GUIDE

2 DRAWER 1 SHELF CONSOLE TABLE

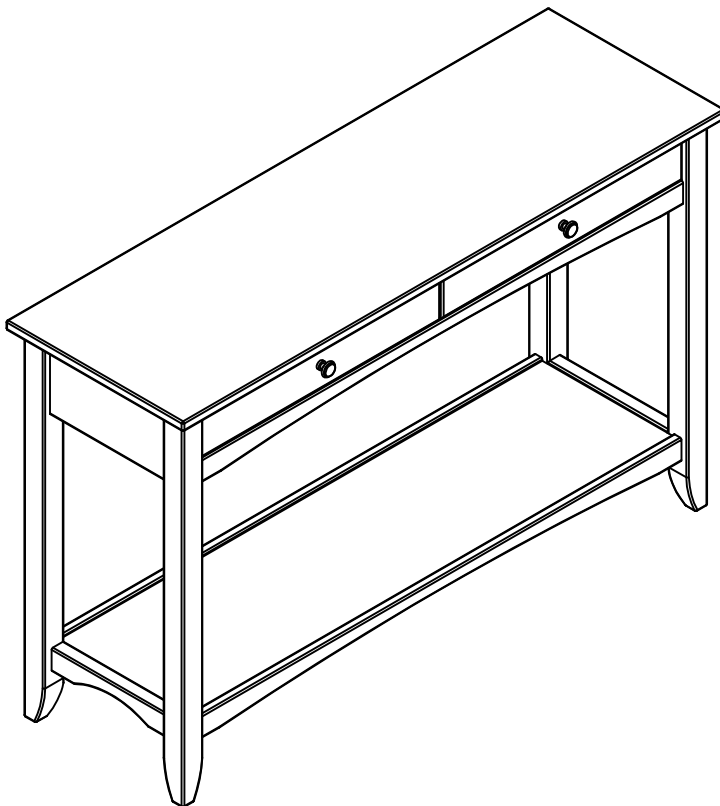

Questions, problems, missing parts?
Before returning to the store, call Customer Service.
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Style Well through the purchase of this 2 drawer 1 shelf console table. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Style Well!

Table of Contents

Table of Contents	2	Tools Required	3
Safety Information	2	Hardware Included	3
Warranty	2	Pre-assembly (continued)	4
1 Year Warranty	2	Package Contents	4
What is Covered	2	Assembly	5
What is Not Covered	2	Maintenance	16
Pre-assembly	3	Care and Cleaning	16
Planning Assembly	3		

Safety Information



DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



WARNING

- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.



CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts / product.
- Do not overtighten connectors (screws, bolts, etc.). Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.
- Some assembly may involve attaching glass or mirrors.
- Be very careful handling the glass or mirrors, as severe injury may result if the glass or mirror breaks.
- Never handle large pieces of glass or mirrors by yourself.
- Assembly requires two people; assembly alone may cause injury.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED


This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly

PLANNING ASSEMBLY

- Remove all Packaging materials , staples and packing straps form the carton .
- Refer to Parts List and Hardware List , and ensure parts and hardware are correct before assembly .
- Contact customer service for missing parts .
- Place all wooden parts on a clean , flat , and soft surface (e.g.carpet or rug) to prevent scratch and damage to parts .


TOOLS REQUIRED

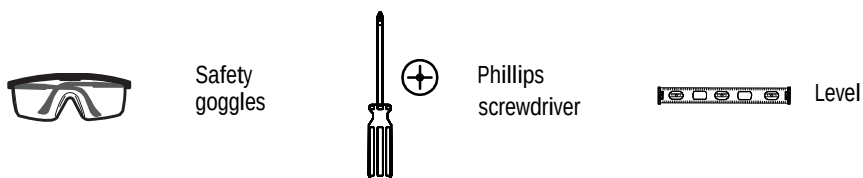

HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.

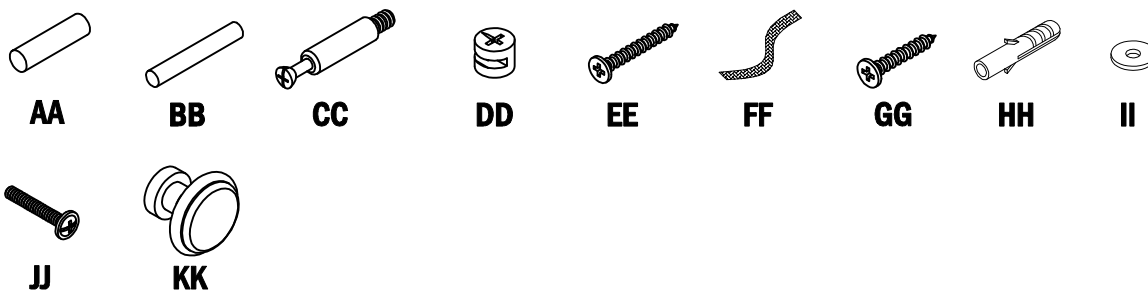

Part	Description	Quantity
AA	Wooden dowel Ø8*30	14
BB	Wooden dowel Ø6*40	8
CC	Cam bolts	36
DD	Cam locks	36
EE	Screw Ø3.5*30	12
FF	Strap	1
GG	Screw Ø3.5*25	1
HH	Wall anchor	1
II	Washer	2
JJ	Screws	2
KK	Handshandles	2

Pre-assembly (continued)

PACKAGE CONTENTS


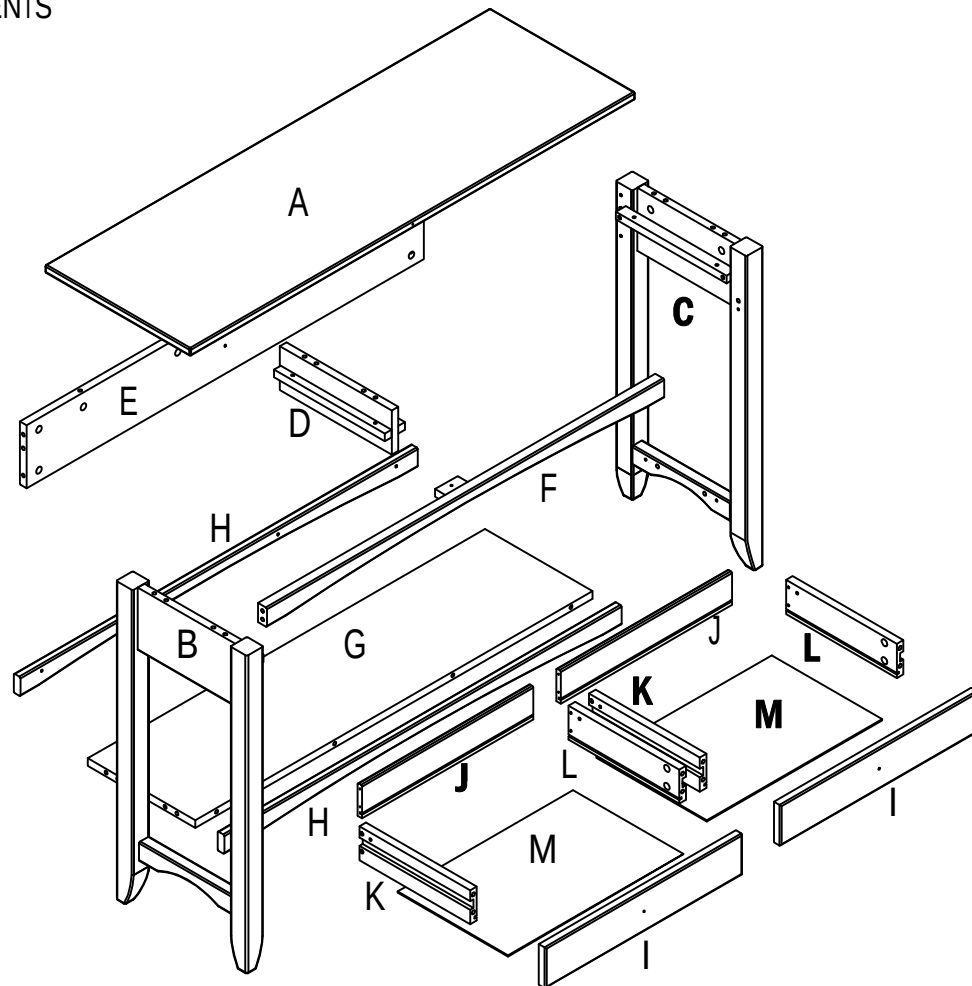


Part	Description	Quantity
A	Table Top	1
B	Left side panel	1
C	Right side panel	1
D	Divider panel	1
E	Back panel	1
F	Rail panel	1
G	Bottom panel	1
H	Edge strip	2
I	Drawer front panel	2
J	Drawer back panel	2
K	Drawer left side panel	2
L	Drawer right side panel	2
M	Drawer bottom panel	2

Assembly

1 Lock the cam bolts and wood dowels


- ☐ Insert the cam bolts (CC) and wood dowels (AA&BB) into the left side panel (B) and right side panel (C) as below shown.

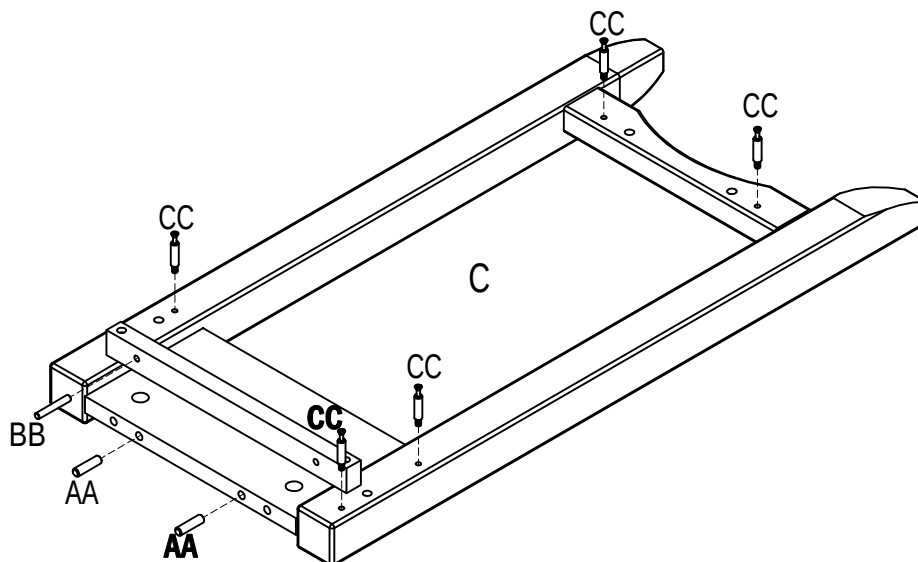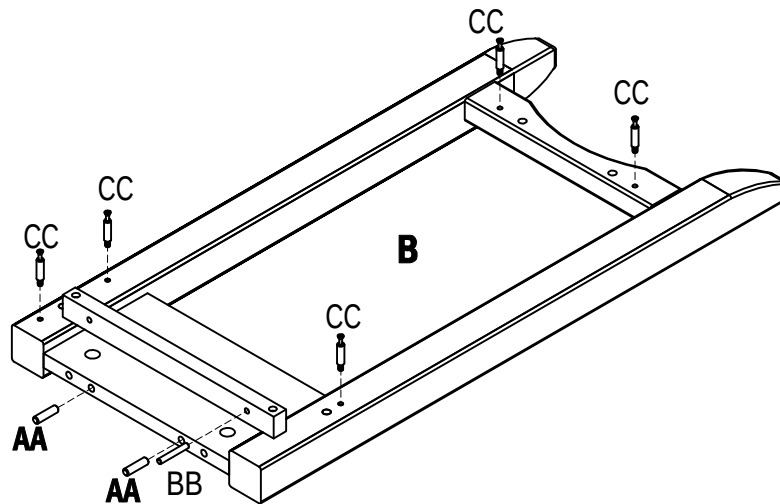


Assembly (continued)

2 Lock cam bolts and wood dowels

- ☐ Insert wood dowels (AA) into holes on the rail panel (F) as below shown.
- ☐ Lock cam bolts (CC) into 2 edge strip (H).

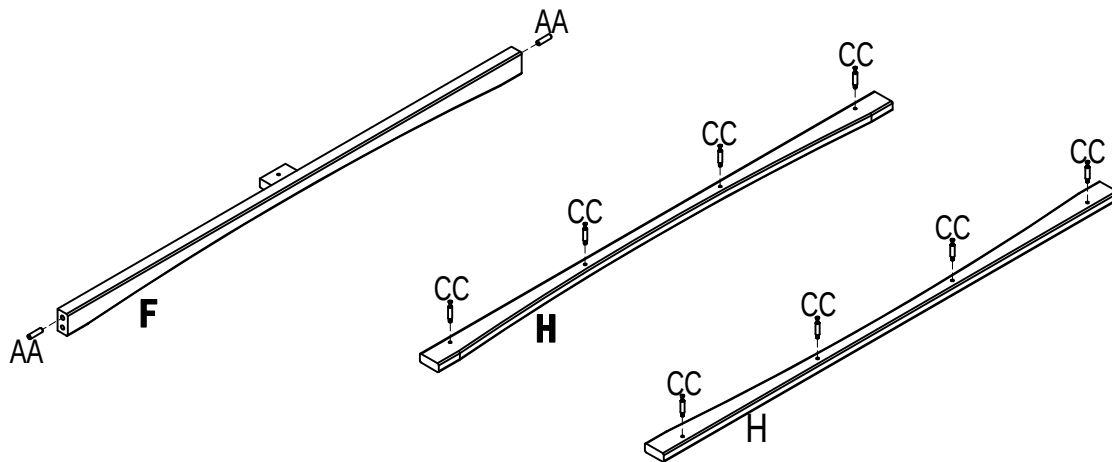


3 Place top panel (A) on a flat and protected surface, lock cam bolts (CC) into it

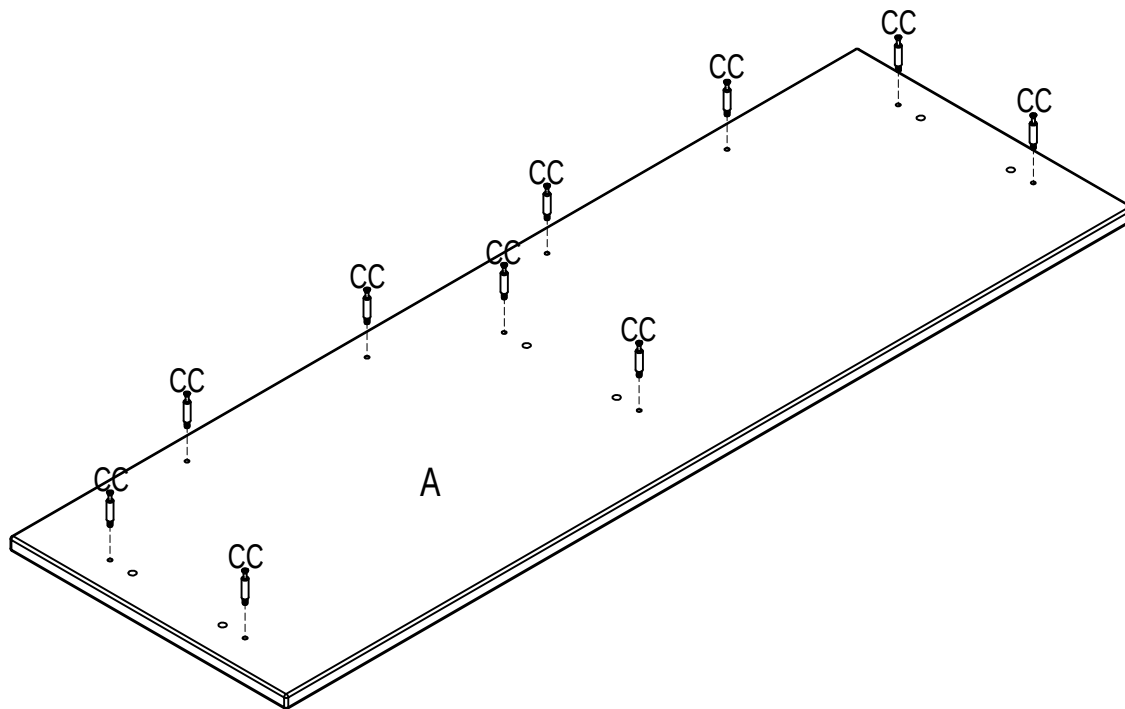


Assembly (continued)

- 4** Insert wood dowers (AA) into holes on the bottom panel (G) and back panel (E)

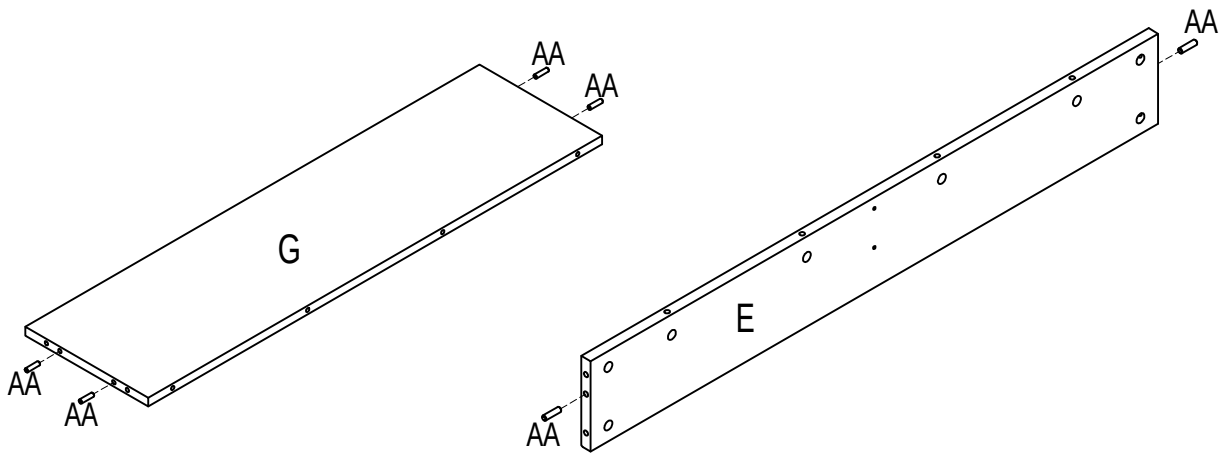


- 5** Insert wooden dowel (AA&BB) into divider panel (D)

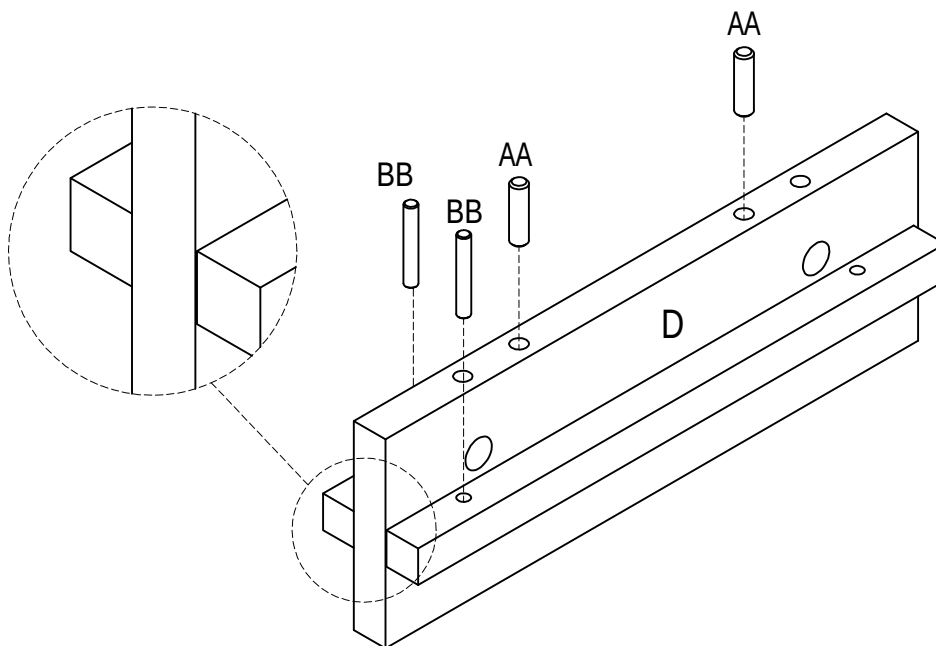


Assembly (continued)

- 6** Connect edge strip (H) and bottom panel (G) with cam lock (DD) as below shown

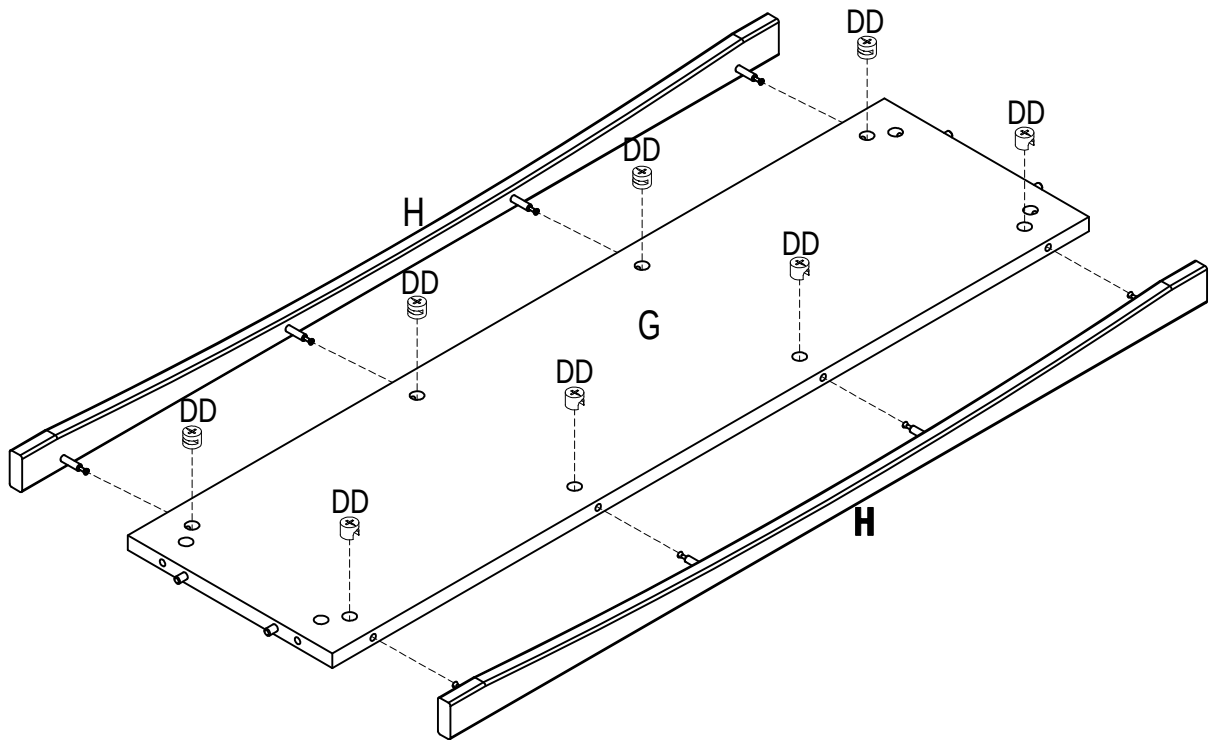


Assembly (continued)

- 7** Connect bottom panel (G), rail panel (F) and back panel (E) with cam lock (DD).

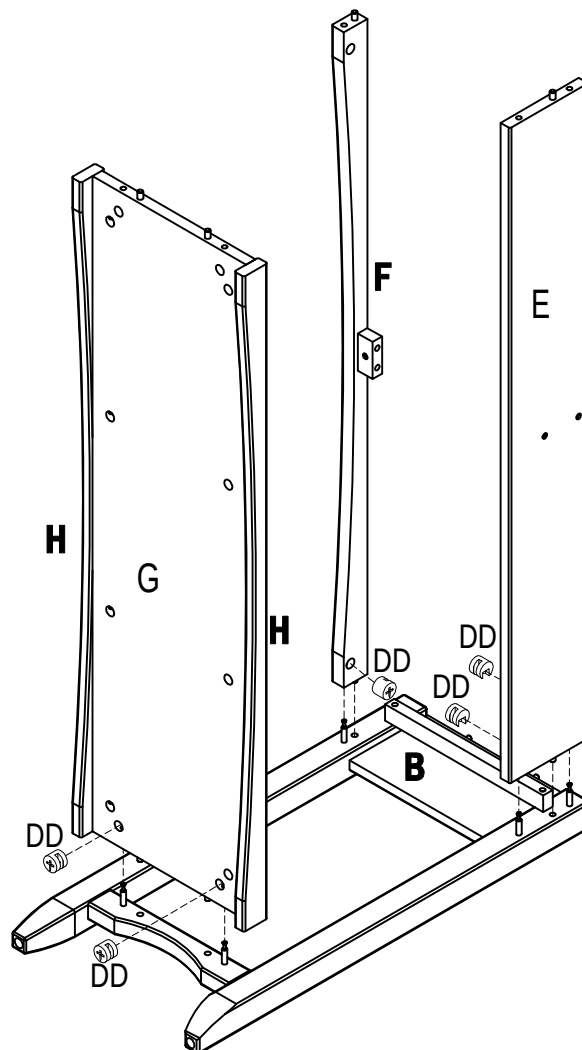


Assembly (continued)

- 8 Connect right side panel (C) with cam lock (DD) from step 7

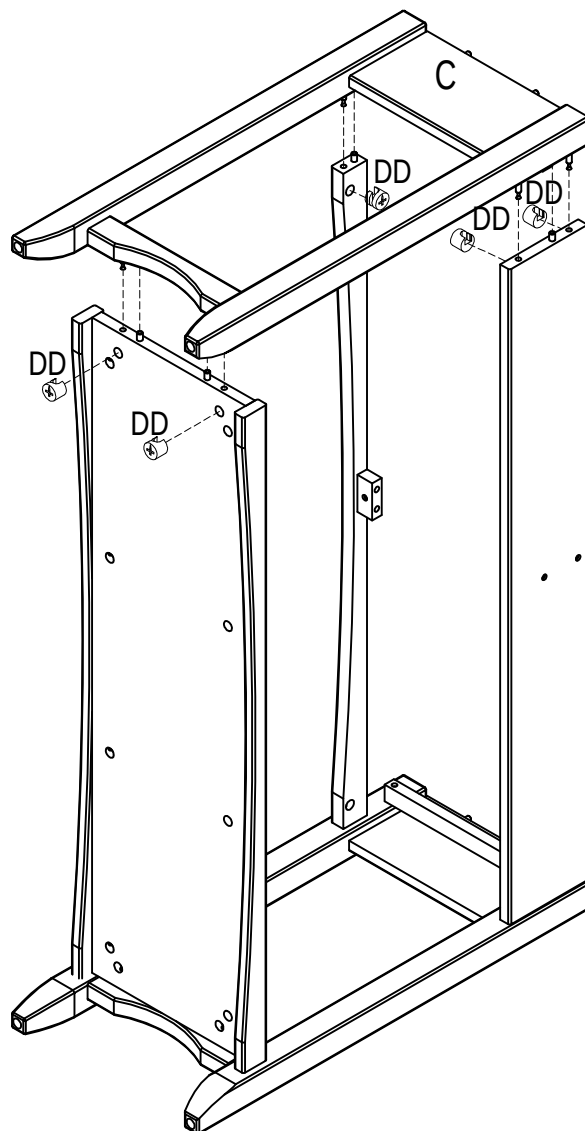


Assembly (continued)

- 9** Lock screw (EE) to tighten back panel and divider panel as shown

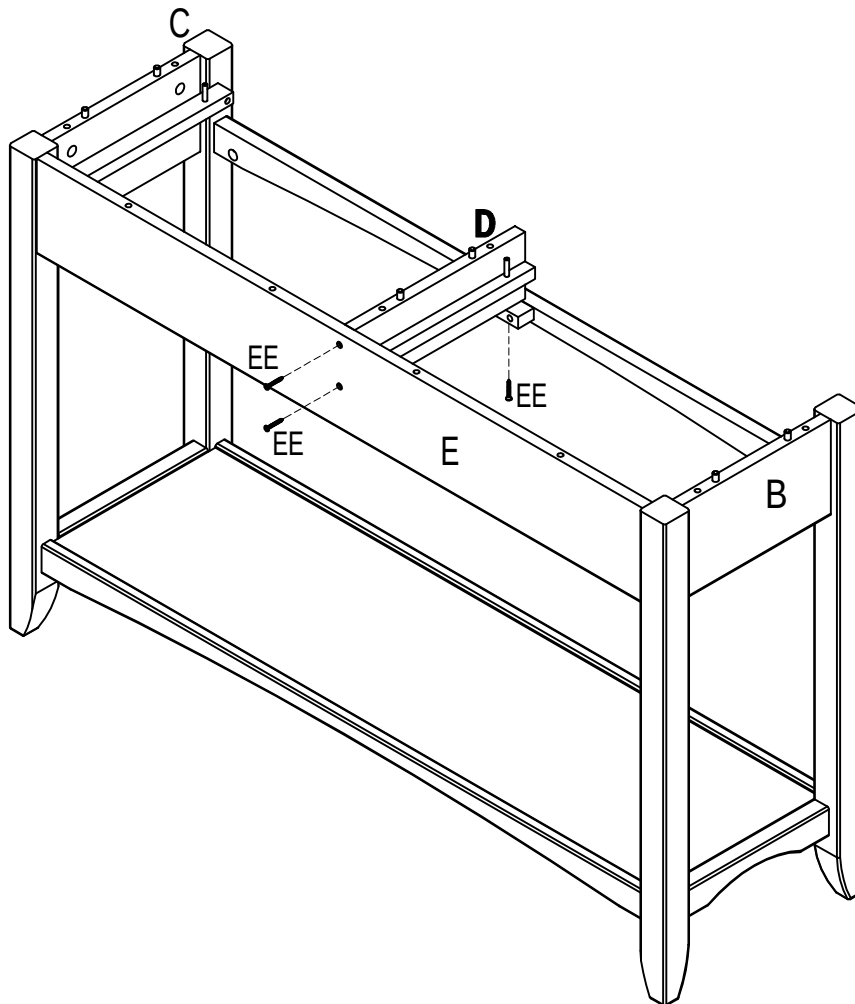

Assembly (continued)


10 Connect top panel (A) with cam lock (DD) as below shown

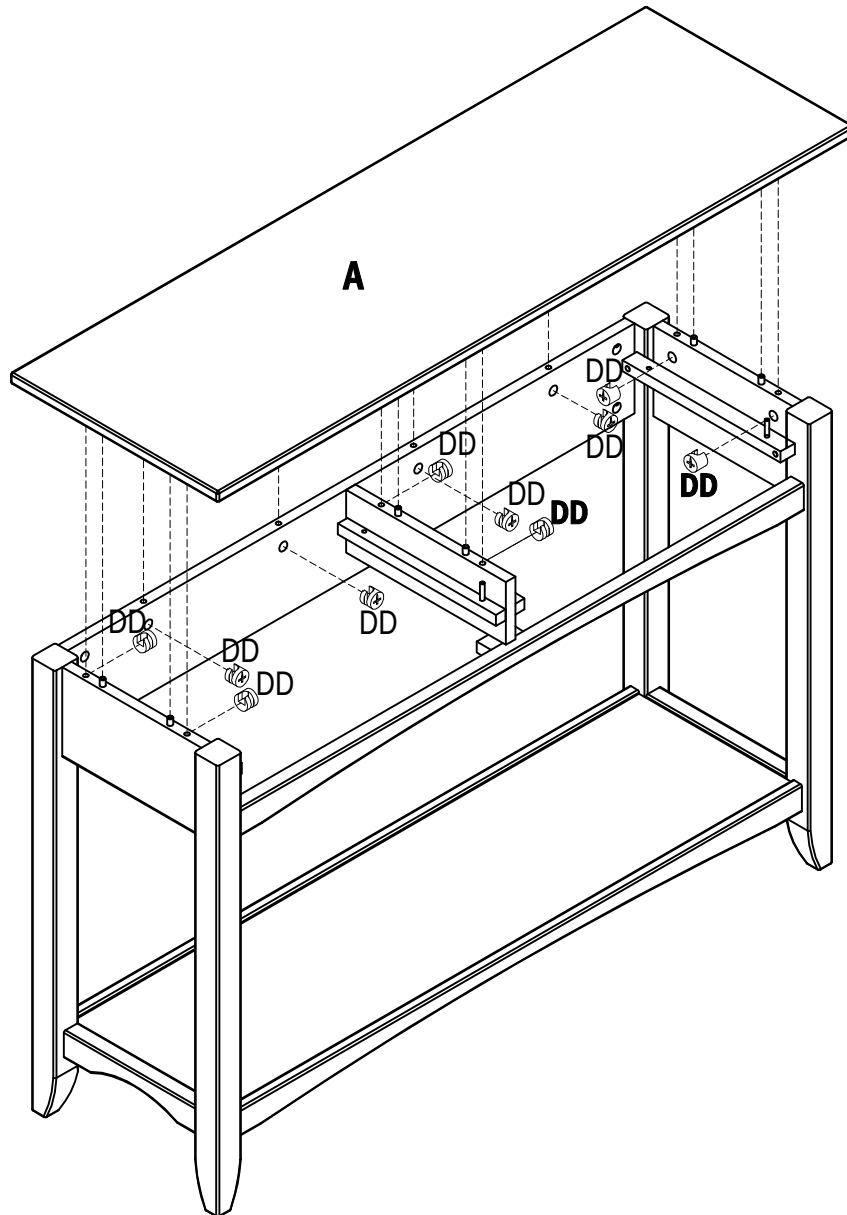

Assembly (continued)


11 Install the drawer

- Lock cam bolts (CC) into drawer front panel(I), connect drawer side panel (K&L) to front panel with cam lock(DD) insert the bottom panel(M), and tighten the drawer back panel(J) with screw(EF), assemble the handhandle (KK) with screw (JJ).

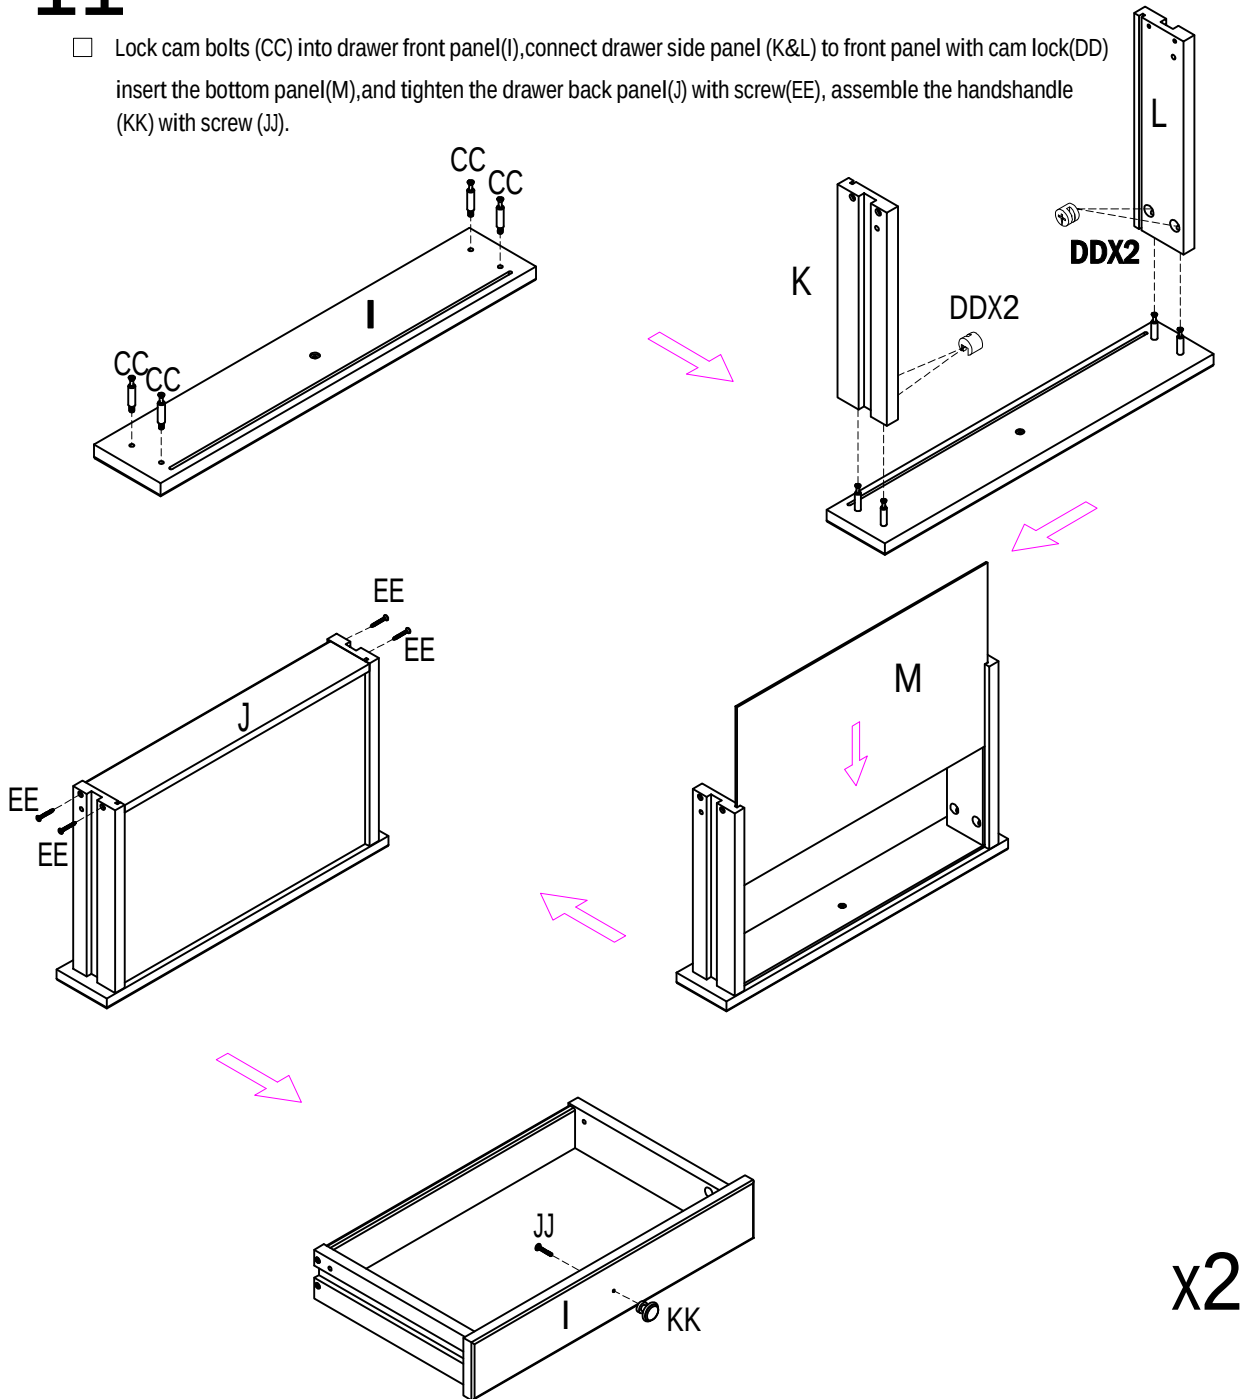


Assembly (continued)

12 Use screwdriver to tighten the strap(FF) with screw(GG) and washers (II) as shown

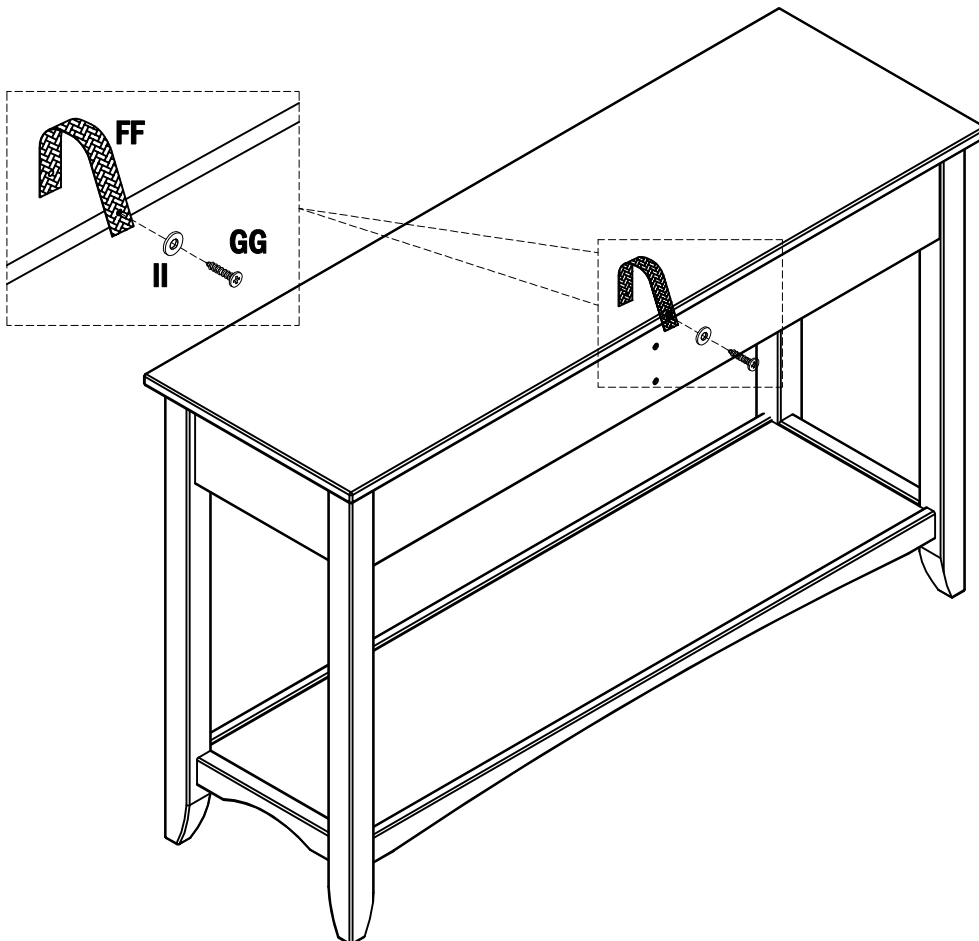

Assembly (continued)

- 13** Use the screwdriver to tighten strap with screw (EE) ,washers (II) and wall anchor (HH) into the wall,insert wooden dowel(BB) to prevent drawer slipping out

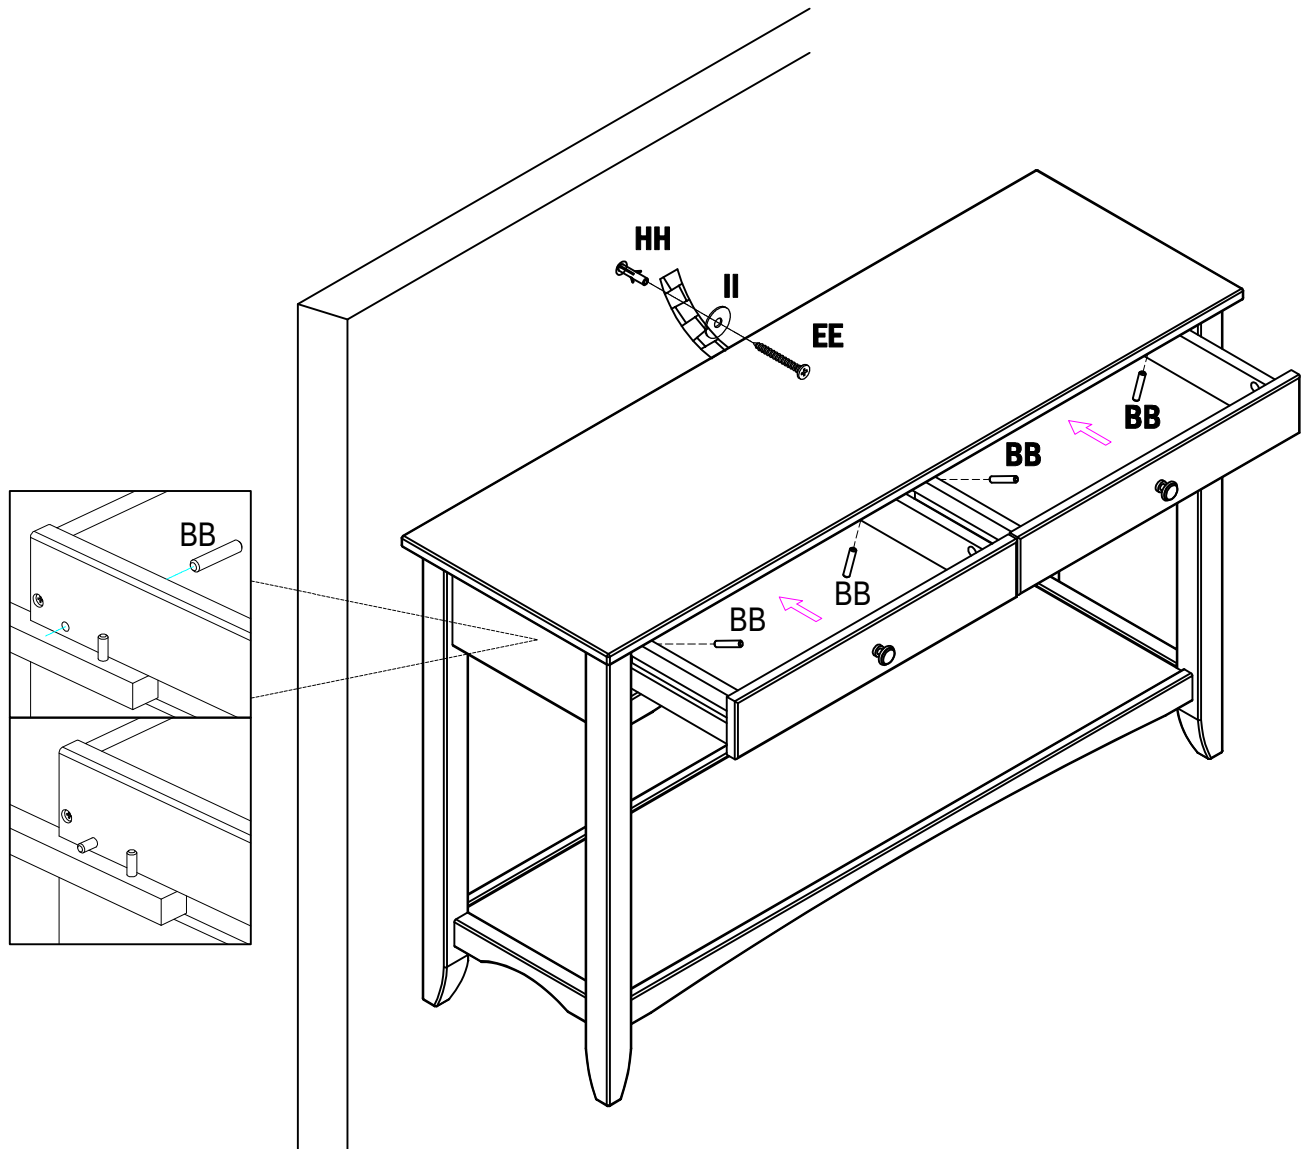

Maintenance

- ☐ Keep the product away from direct heat and sunlight .
- ☐ Prolonged exposure to heat sources may cause scorching, or even cause color to fade .
- ☐ Regular vacuuming or light brushing helps to remove dirt and prevent soil build-up, which increases the appearance of wear .
- ☐ Periodically (every 90 days) make sure that the screws are fully tightened .

Care and Cleaning

- ☐ Handle with care.
- ☐ Use a slightly damp cloth to clean the product. Do not use bleach or use abrasive cleaning material .
- ☐ Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts are damaged or broken .
- ☐ Never allow any kind of liquid to remain on your furniture .
- ☐ Absorption can make wood warp or delaminate .
- ☐ Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- ☐ Do not drag and /or pull the furniture .
- ☐ Never use harsh chemicals or solvents on your product as this may damage the metal .
- ☐ Marks and stains from pens, crayons and ink markers are difficult to remove. In the event that your products become permanently stained, we recommend that you consult a professional .

StyleWell.™

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.