



FOR IRON GATE MORTISE LOCK

FOR RESIDENTIAL MORTISE LOCK: SEE INSTRUCTIONS ON OTHER SIDE OF PAGE (PAGE 1)



STEP 1: MEASURE THE THICKNESS OF YOUR DOOR

Door Thickness (T) must be 1" to 1-1/4" to use this product

STEP 2: MEASURE THE DISTANCE FROM THE EDGE OF THE DOOR TO THE CENTER OF THE MORTISE CYLINDER HOLE

This is called the backset and must be 2-1/2"(L)

Note: If this measures differently you can not use this product

STEP 3: MEASURE THE DOOR CAVITY WHERE THE MORTISE LOCK MECHANISM SLIDES IN

The cavity dimensions must be equal or be greater than 5-1/2"(H) x 3-3/4"(D) x 7/8"(T)


STEP 4: MEASURE THE FACE PLATE INDENT

The dimensions must be 7-1/8" (L) x 1" (W)

STEP 5: STAND OUTSIDE OF YOUR DOOR AND DETERMINE WHERE THE HINGES ARE.

-If the hinges are on the left, this is a left hand door.

-If the hinges are on the right, this is a right hand door.

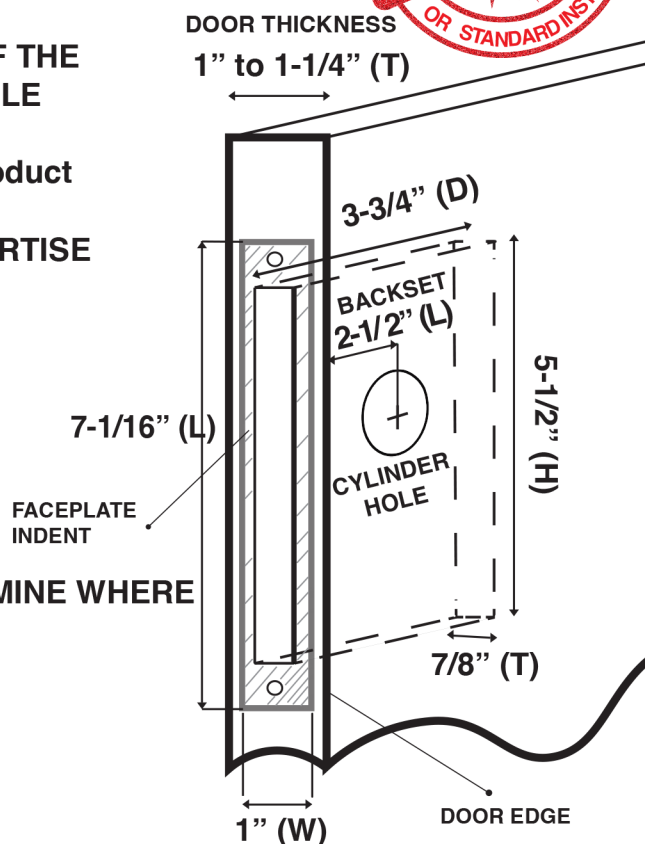


You should check if your door accepts the lock as a standard (B) or upside down (A) install.

NOTE: Please select the model number (D) for your correct door orientation and application (C).

(C) DOOR ORIENTATION AND APPLICATION

LEFT HAND SWING IN DOOR

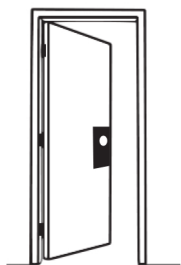

OUTSIDE

MRG01 RIGHT
(UPSIDE DOWN INSTALL)

NOTE: YOU MUST CHANGE THE LOCKING BAR *

MLG01 LEFT
(STANDARD INSTALL)

NOTE: YOU MUST CHANGE THE LOCKING BAR *

LEFT HAND SWING OUT DOOR



OUTSIDE


MLG01 LEFT
(UPSIDE DOWN INSTALL)

NOTE: YOU CAN INSTALL THIS AS IT COMES OUT OF THE BOX

MRG01 RIGHT
(STANDARD INSTALL)

NOTE: YOU CAN INSTALL THIS AS IT COMES OUT OF THE BOX

RIGHT HAND SWING IN DOOR

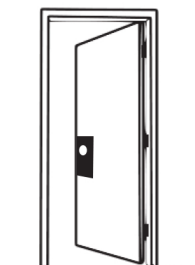

OUTSIDE


MLG01 LEFT
(UPSIDE DOWN INSTALL)

NOTE: YOU MUST CHANGE THE LOCKING BAR *

MRG01 RIGHT
(STANDARD INSTALL)

NOTE: YOU MUST CHANGE THE LOCKING BAR *

RIGHT HAND SWING OUT DOOR

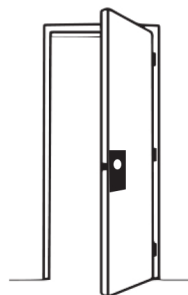

OUTSIDE


MRG01 RIGHT
(UPSIDE DOWN INSTALL)

NOTE: YOU CAN INSTALL THIS AS IT COMES OUT OF THE BOX

MLG01 LEFT
(STANDARD INSTALL)


NOTE: YOU CAN INSTALL THIS AS IT COMES OUT OF THE BOX

(A) UPSIDE DOWN INSTALLATION

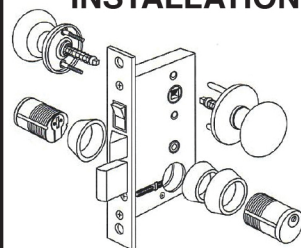


Knob is on the top and cylinder is on the bottom

(B) STANDARD INSTALLATION

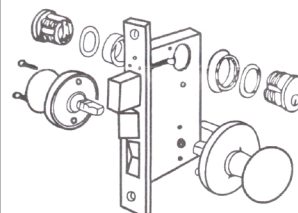

Knob is on the bottom and cylinder is on the top

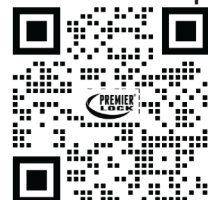

* For instructions on how to change the locking bar you can scan this QR code here:

WWW.PREMIERLOCKS.COM