

18" HIGH



VELOCITY PEDESTAL FAN OPERATION INSTRUCTIONS

VieAir

READ AND FOLLOW ALL INSTRUCTIONS BEFORE OPERATION FAN

CAUTION:

Read and follow all instructions before operating fan. Do not use fan if any part is damaged or missing.

WARNING:

1. To reduce the risk of fire or electric shock, do not use this fan with any solid state speed control device.
2. This appliance has a ground plug which is intended to fit in an outlet only one way. If this does not fit outlet, contact a qualified electrician. Do not attempt to by-pass this procedure.
3. This product is used for indoor.
4. Unplug from electrical supply source before cleaning.
5. If the power cord is damaged, contact your local service centre or a qualified electrician to install an appropriate replacement cord to prevent any injury or damage.
6. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
7. Children should be supervised to ensure that they do not play with the appliance.

RULES FOR SAFE OPERATION:

1. Never insert fingers, pencils, or any other object through the guard when fan is running.

2. Disconnect the fan when moving from one location to another.
3. Disconnect the fan when removing grilles for cleaning.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. DO NOT use fan in window. Rain may create electrical hazard.
6. The fan is for commercial use only.
7. Do not leave the fan running unattended.

USER SERVICING INSTRUCTIONS

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord
2. Open fuse cover. Slide open fuse access cover on top of attachment plug towards blades. (see fig.1)
3. Remove fuse carefully. Remove the fuse by prying it out carefully. (see fig.2)
4. Risk of fire. Replace fuse only with 5 Amp, 125 Volt fuse.
5. Close fuse cover. Slide closed the fuse access cover on top of attachment plug. (see fig.3).
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.



Fig. 1

Fig. 2

Fig. 3

Tips: Do not overexert when replacing the fuse or damage may occur. If it's hard to close the access cover, make sure the fuse is fully inserted.

OPERATING INSTRUCTIONS:

Turning Fan On/Off: To start the fan, rotate control dial from "0" (off) to desired fan speed (1,2, or 3). Rotate top control dial again to "0" (off) position to discontinue use. Unplug fan when not in use.

ASSEMBLY INSTRUCTIONS:

Step 1: Assemble Extension Pole onto base by inserting 4ea. 2-1/2" bolts through openings

Step 2: Using washers and nuts supplied, tighten extension pole to base as shown.

Step 3: lace decorative chrome flange over extension pole to cover the base screws.

Step 4: Thread extension pole nut onto threads of extension pole.

Step 5: Take fan motor housing and insert it into extension pole and tighten set screw securely.

Step 6: Remove four mounting screws from motor housing where indicated to use for rear grill in step # 7.

Step 7: Assemble rear grill onto motor housing using screws removed in step #6. Tighten the 4 screws securely.

Step 8: Place fan blade onto motor shaft. Tighten set screw securely onto flat surface on motor shaft.

Step 9: Attach front grill to rear grill with hook clip centered on the top above wire handle.

Step 10: Press remaining grill clips onto rear grill to securely attach front grill. Do not operate fan without grill in place.

Step #6



Step #1



Step #2



Step #4




Step #3



Please make it so these images are not on top of each other

2. Do not allow the motor or other electrical components to be exposed to water.
Reassemble after cleaning by reversing above procedure.
3. Do not bend the blades.
4. Put several drops of sewing machine oil into the oil ways on the front and rear shells at regular intervals. (Recommendation: every 3 months with 24 hour use or every 6 month with regular use)

 
Step #5

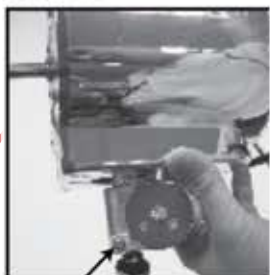


Step #7



 Step #8

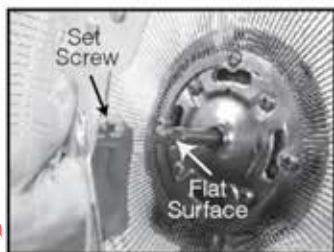

Step #9

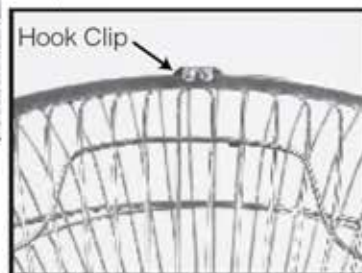 

Step #10



TO CLEAN FAN BLADE OR GRILL:

WARNING:

Unplug from electrical supply source before cleaning.

1. Clean the blade by using a soft, damp cloth then wipe with dry cloth. Please be caution around the motor housing area.