 


## USE AND CARE GUIDE

---

### INDUSTRIAL METAL DINING CHAIR

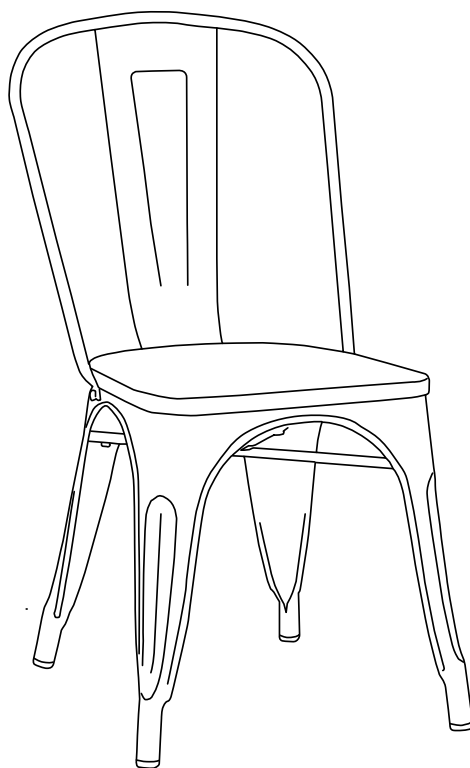

Questions, problems, missing parts?  
Before returning to the store, call Customer Service.  
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-877-527-0313**

**HOMEDEPOT.COM**

---

#### THANK YOU

*We appreciate the trust and confidence you have placed in StyleWell through the purchase of this industrial metal dining chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!*

# Table of Contents

|                               |   |                         |   |
|-------------------------------|---|-------------------------|---|
| Table of Contents .....       | 2 | Assembly .....          | 5 |
| Safety Information.....       | 2 | Maintenance .....       | 6 |
| Warranty .....                | 2 | Care and Cleaning ..... | 6 |
| 1 Year Warranty .....         | 2 | Troubleshooting .....   | 6 |
| What is Covered.....          | 2 |                         |   |
| What is Not Covered.....      | 2 |                         |   |
| Pre-Assembly .....            | 3 |                         |   |
| Planning Assembly .....       | 3 |                         |   |
| Tools required.....           | 3 |                         |   |
| Hardware Included .....       | 3 |                         |   |
| Pre-Assembly (continued)..... | 4 |                         |   |
| Package Contents .....        | 4 |                         |   |

## Safety Information



### DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



### WARNING

- Read these instructions carefully and keep in a safe place.
- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.



### WARNING

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.). Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.
- Assembly requires two people; assembly alone may cause injury.
- This product is designed for in-door use only.
- Weight limit : 300 lb / 136 kg.

## Warranty

### 1 YEAR WARRANTY

#### WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

#### WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

# Pre-Assembly

 
## PLANNING ASSEMBLY

Use the carton as a working surface to prevent product damage during assembly.  
Gather all tools prior to assembly.

## TOOLS REQUIRED



Safety  
Goggles

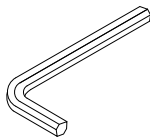


Allen Wrench  
(INCLUDED)


## HARDWARE INCLUDED



 NOTE: Hardware not shown to actual size.

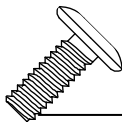


AA

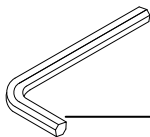 

BB

| Part | Description  | Quantity |
|------|--------------|----------|
| AA   | Screws       | 6        |
| BB   | Allen Wrench | 1        |

 PACKAGE CONTENTS

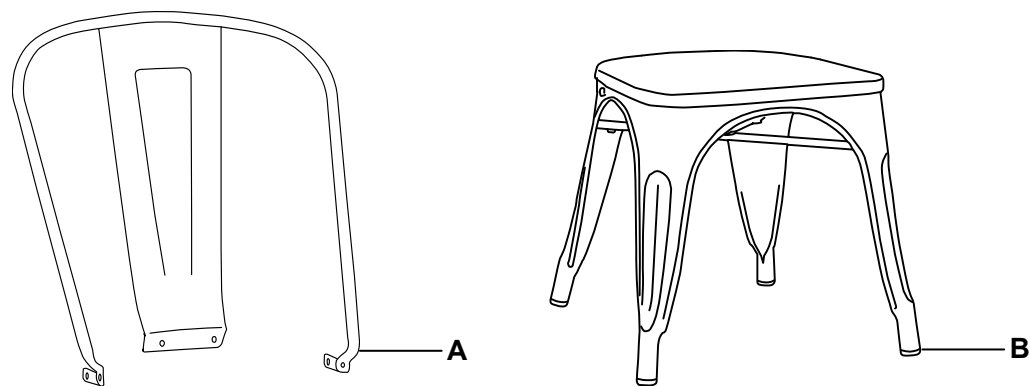

| Part | Description | Quantity |
|------|-------------|----------|
| A    | Back        | 1        |
| B    | Seat        | 1        |


# Assembly
 
## 1 Install the chair back

- Attach the back (A) to the seat (B) with screws (AA) as shown.



**NOTE:** Do not tighten screws until all screws are in place.

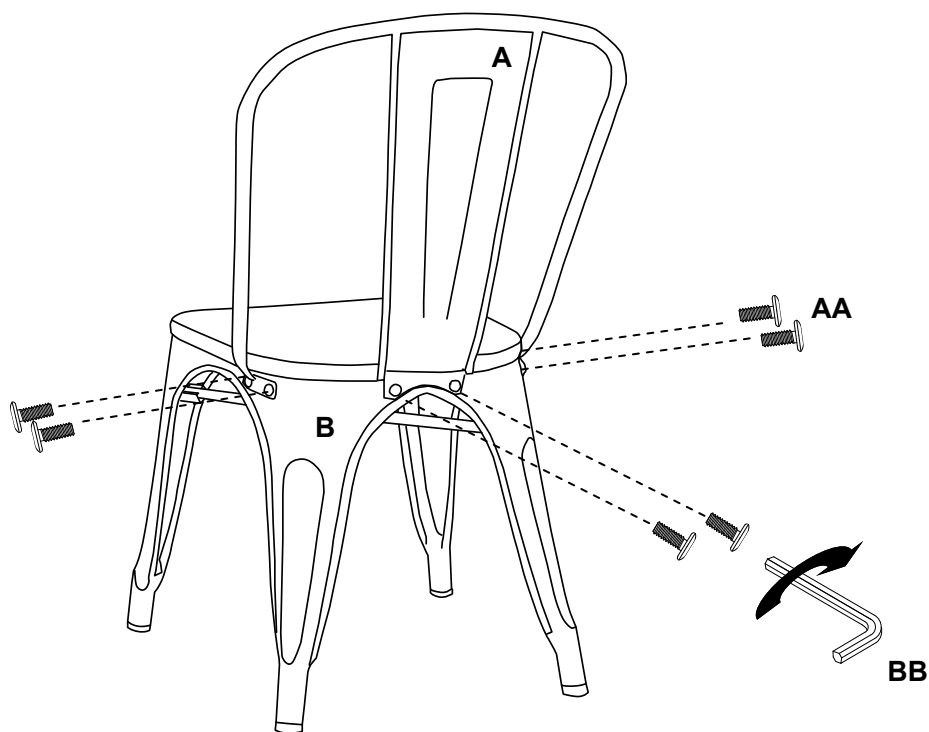

## Maintenance

---

- ☐ Use the furniture indoors.
- ☐ Keep the furniture away from humid environments like bathrooms.
- ☐ Keep the furniture away from sharp objects like knives.

## Care and Cleaning

---

- ☐ Move your new furniture carefully, with two people lifting and carrying the unit to its new location.
- ☐ Clean the product with your favorite furniture polish and dry soft cloth. Do not use harsh chemicals or abrasive cleaners.

## Troubleshooting

---

| Problem                   | Possible Cause                                              | Solution                                  |
|---------------------------|-------------------------------------------------------------|-------------------------------------------|
| The chair frame is loose. | Check all screws and make sure there are no screws missing. | Use tool BB to tighten the screws AA.     |
| The chair is not flat.    | Ensure that the floor or ground is flat.                    | Check to see if the stoppers are missing. |



# **StyleWell.™**

Questions, problems, missing parts?

Before returning to the store, call Customer Service

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

**1-877-527-0313**

**HOMEDEPOT.COM**

Retain this manual for future use.