 


Jewenwils

Wireless Light Switch Kit

[Instruction Manual]

 
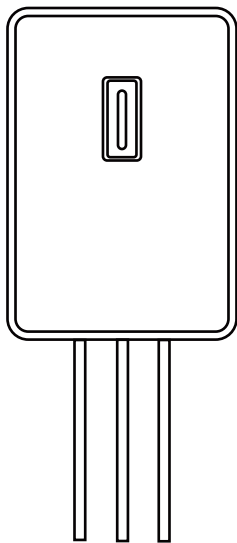 


 
Please pay attention to the warning signs
Read the instructions with caution before operating
and keep it properly

WARNING: To reduce the risk of fire, electric shock, or personal injury, please strictly follow the instructions.


1. Indoor use only. Avoid high humidity, high temperature, and areas with a high magnetic field.
2. Always be sure to cut off the power before installing the receiver.
3. Don't connect any device that may exceed the performance limits of the receiver.
4. Don't install or repair the product Only authorized service personnel should undertake such installation and repairs.
5. If the remote is not in use for an extended period time, remove batteries.
6. Used batteries should be disposed of safely and properly.
7. To prevent a choking hazard, keep packing materials away from children.
8. Do not use the battery again if it is dropped or knocked out of shape.

Product Layout

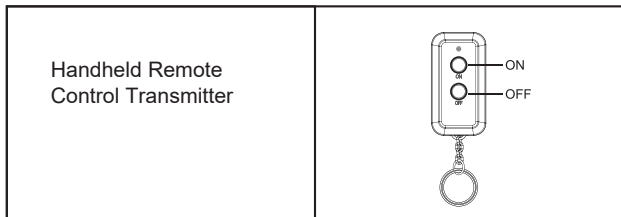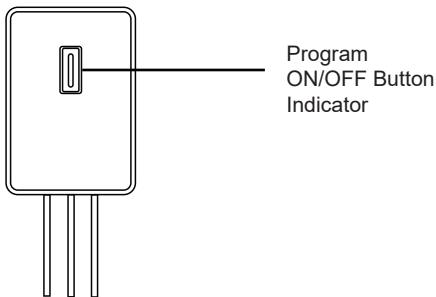

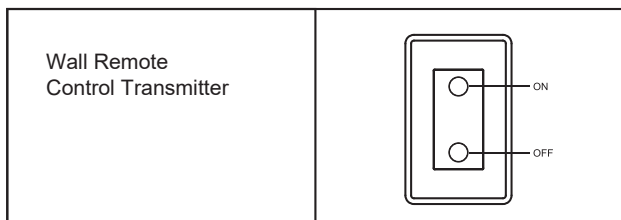

Wiring Diagram

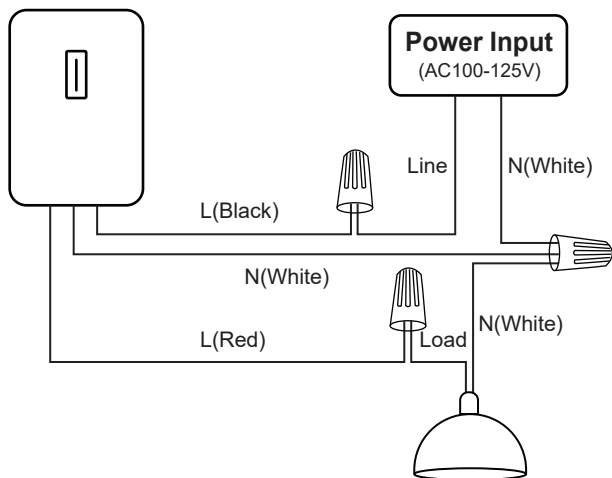 

Find the NEUTRAL Wires

Neutral wire is required to install the wireless light switch. Most likely a bundle of one or more white wires in the wall.

Note: If there is no neutral, please try another location or call an electrician for help.

1. Turn off the power to the main circuit breaker or fuse box working area before installation. .
2. At the input "L" Black line is the hot wire. At the output "L" Red line is the hot wire. "N" White line is the neutral wire. Do not connect the "L" (hot wire) and "N" (neutral wire) mistakenly.
3. Connect the power to the "input" side, and the load to the "output" side carefully.
4. The wireless switch kit only needs to connect with the hot wire and neutral wire. The "G" Green line (ground wire) just needs to be connected as normal.
5. After connecting, use the wiring cap to cover it.

Operating Instructions

 
1. Follow the " Wiring Diagram" for the receiver and the power supply.
2. Remove the isolation tab in the battery compartment of the transmitter.
3. Press the ON/OFF button on the remote control to turn the receiver on and off.

Note:

1. The program button of the receiver can also be used as a manual switch.
2. The receiver will remain "OFF" after a power cut to save energy.

Mounting the Wall Switch


If you purchased a wall remote control transmitter, please install it as follow. Shown as the figure

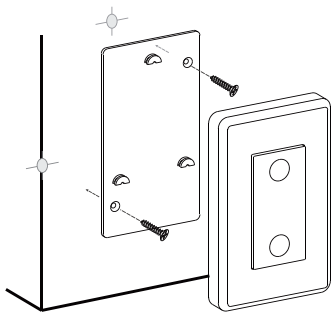

Programming the Receiver

Note: The transmitter and receiver have been pre-programmed for immediate use, but the configuration can be customized to meet your needs.

 To program a remote transmitter and receiver:

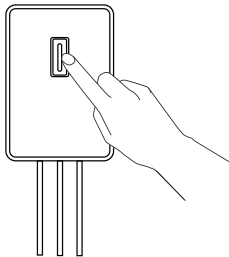


1. Press the program button on the receiver for 3 seconds until the indicator light starts to flash slowly.
2. Release the program button and then press the "on" or "off" button on the remote control.

3. Programming / pairing is successful when the indicator light stops blinking.


Note:

 Each set of ON or OFF button can be paired with and control several receivers; Each receiver can be paired and controlled by multiple transmitters.




Cancel All Programming

 Cancel all the programs so that no remote transmitter can control it.

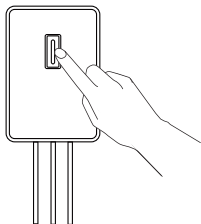

 1. Press the program button on the receiver for 6 seconds until the indicator light starts to flash rapidly. (Note: The light flashes from slowly to rapidly.)

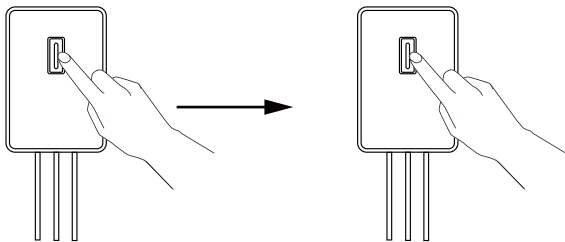


2. Release the program button and then press it again. The indicator light will be off. All the programming has been canceled.

No Interference

Remote control outlets adopt variable learning codes technology. The codes will be changed each time after re-programming. If this remote control outlet happens to be in the same channels with other RF remote devices, just re-program it and the interference will be eliminated.

Replacing the battery

 If you find the receiver works abnormally or the indicator on the remote control becomes dim, please replace the battery.

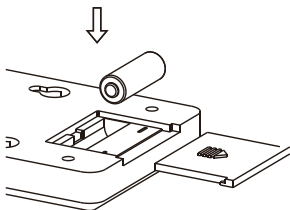

1. Remove the battery compartment cover away from the remote.
2. Remove the old battery and place a new DC 12V (type 23A) battery into the battery compartment.
3. Ensure the polarity +/- of the battery is correct.
4. Remove batteries if the remote is not in use for an extended period of time.

BATTERY HANDLING AND USAGE

- REMOVE AND IMMEDIATELY RECYCLE OR DISPOSE OF USED BATTERIES ACCORDING TO LOCAL REGULATIONS AND KEEP AWAY FROM CHILDREN. DO NOT DISPOSE OF BATTERIES IN HOUSEHOLD TRASH OR INCINERATE.
- EVEN USED BATTERIES MAY CAUSE SEVERE INJURY

OR DEATH.

·CALL A LOCAL POISON CONTROL CENTER FOR TREATMENT INFORMATION.

·COMPATIBLE BATTERY TYPE CR2032 LITHIUM BATTERY.

·NOMINAL BATTERY VOLTAGE 3V.

·NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.

·DO NOT FORCE DISCHARGE, RECHARGE, DISASSEMBLE, HEAT (ABOVE MANUFACTURER'S SPECIFIED TEMPERATURE RATING) OR INCINERATE. DOING SO MAY RESULT DUE TO VENTING, LEAKAGE OR EXPLOSION RESULTING IN CHEMICAL BURNS.

·ENSURE THE BATTERIES ARE INSTALLED CORRECTLY ACCORDING TO POLARITY (+ AND -).

·DO NOT MIX OLD AND NEW BATTERIES, DIFFERENT BRANDS OR TYPES OF BATTERIES, SUCH AS ALKALINE, CARBON-ZINC, OR RECHARGEABLE BATTERIES.

·REMOVE AND IMMEDIATELY RECYCLE OR DISPOSE OF BATTERIES FROM EQUIPMENT NOT USED FOR AN EXTENDED PERIOD OF TIME ACCORDING TO LOCAL REGULATIONS.

·ALWAYS COMPLETELY SECURE THE BATTERY COMPARTMENT IF THE BATTERY COMPARTMENT DOES NOT CLOSE SECURELY, STOP USING THE PRODUCT, REMOVE THE BATTERIES, AND KEEP THEM AWAY FROM CHILDREN.

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH** of **CHILDREN**.
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Troubleshooting

In the case that one receiver is unresponsive to the remote control, please follow the steps below to resolve the issue:

1. If the wire switch receiver is unresponsive to the remote control, please refer to the "Canceling Programming" and "Programming the Receiver" sections in the manual to reprogram the receiver.
2. Make sure the receiver and appliance are properly connected and powered on.
3. Replace the remote battery with a new 12V (23A) battery.
4. The remote transmitter may be too far away to control the receiver.
5. Make sure not to exceed the maximum load.
6. "Canceling Program" is always prior to "Programming the Receiver" when you would like to make changes.

Specifications

- Input Voltage: 120VAC 60Hz
- Max.load Power: 15A, 1800W Resistive
- Transmission Frequency: 433.92MHz
- Remote Control Distance: 100 ft (Free Area)
- Remote Battery: 23A, 12V

Safety Information

Federal Communications Commission Interference Statement. This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Redirect or relocate the receiving antenna.
- Increase distance between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

ISED Warning:

This device complies with Innovation, Science, and Economic Development Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions

suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme

Après examen de ce matériel aux normes de conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'acquiescer les informations correspondantes.

One Year Limited Warranty

Supported by our professional R&D team and QC team, we provide One Year Warranty for materials and workmanship from the purchase date. Please note that the warranty does not cover damage caused by personal misuse or improper installation.

Please attach your Order ID and Name so that our dedicated customer service team can help you better.

