


45-0614

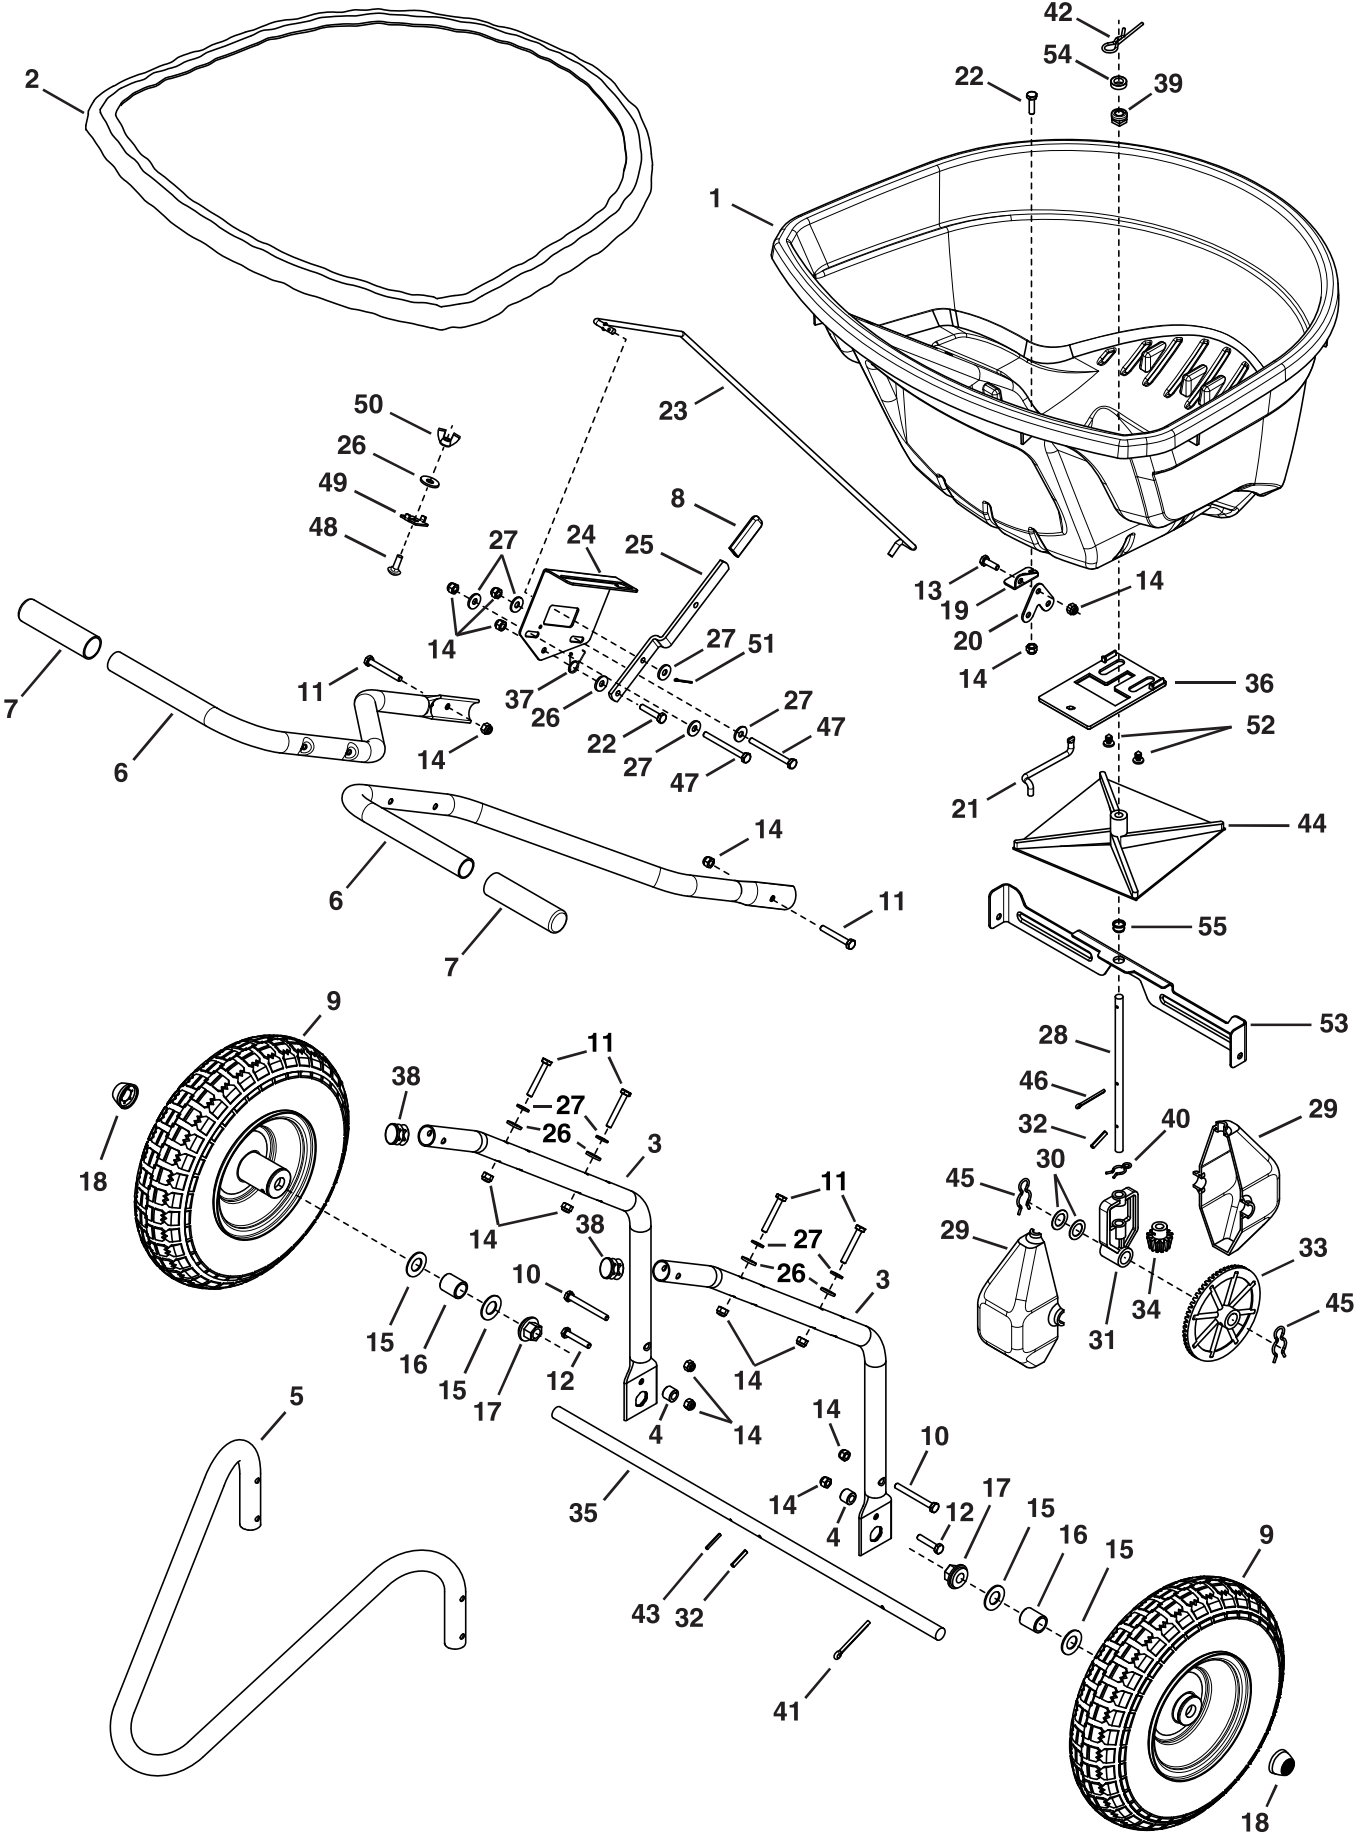

# 45-0614

REF	QTY	PART NO	DESCRIPTION	REF	QTY	PART NO	DESCRIPTION
1	1	41084	Hopper	31	1	47204	Yoke, Large
2	1	41316	Hopper Cover (Optional)	32	2	43659	Pin, Spring 3/16 x 1
3	2	28383OR1	Tube, Hopper Support	33	1	47209	Gear, Large
4	2	46847	Spacer	34	1	47205	Gear, Small
5	1	42004OR1	Tube, Stand	35	1	26710	Axle
6	2	41924OR1	Tube, T-Handle	36	1	45344	Plate, Flow
7	2	44482	Grip, Handle	37	1	42347	Spring, Torsion
8	1	43848	Grip, Control Arm	38	2	49449	Plug
9	2	40880G	Wheel	39	1	44285	Bushing, Hopper Bottom Black
10	2	49870	Bolt, Hex 1/4-20 x 2-1/2	40	1	49898	Clip, Hairpin 5/8
11	6	1509-69	Bolt, Hex 1/4-20 x 1-3/4	41	1	46855	Pin, Cotter 3/16" x 2"
12	2	46699	Bolt, Hex 1/4-20 x 2	42	1	48934	Hairpin, Agitator
13	1	43012	Bolt, Hex 1/4-20 x 3/4	43	1	46055	Pin, Spring 1/8 x 1
14	15	47189	Nut, Hex 1/4-20 Nylock	44	1	04367	Spreader Impeller
15	4	R19212016	Washer, .6562 x 1.25 x .0598	45	2	49897	Clip, Hairpin 7/8
16	2	45280	Spacer, .64 ID x .88 OD x .625	46	1	43093	Pin, Cotter 1/8 x 1-1/2
17	2	45279	Bearing, Flange	47	2	43796	Bolt, Hex 1/4-20 x 2-3/4
18	2	48499B	Hub Cap	48	1	44950	Bolt, Carriage 1/4-20 x 3/4
19	1	27276	Bracket, Drive Link Mount	49	1	24858	Adjustable Stop
20	1	27277	Bracket, Drive Link	50	1	47141	Nut, Nylon Wing 1/4-20
21	1	41929	Rod, Drive Link	51	1	44101	Pin, Cotter 3/32 x 3/4
22	2	43661	Bolt, Hex 1/4-20 x 1	52	2	48402	Plug, 1/4" (Christmas Tree)
23	1	41928	Rod, Flow Control	53	1	27313OR1	Cross Brace
24	1	27322BL1	Bracket, Flow Control	54	1	23625	Spacer
25	1	24856BL1	Arm, Flow Control	55	1	42839	Bushing, 3/8" Plastic
26	6	1543-69	Washer, Nylon .3281 x .75	56	1	68881	Transmission Assembly - not shown (includes 28, 29, 30, 31, 32, 33, 34, 35, 40, 43, & 45)
27	9	43088	Washer, 1/4 Std .312 x .734				
28	1	28390	Shaft, Spreader				
29	2	47212	Housing, Large Gear		1	3-319	Owner's Manual
30	2	44125	Washer, .625 x 1.0 x .03				