


Item # 1004394166/1004394167 Item # 1004394168 Model # CT 1013

USE AND CARE GUIDE

2 DRAWER 1 SHELF COFFEE TABLE

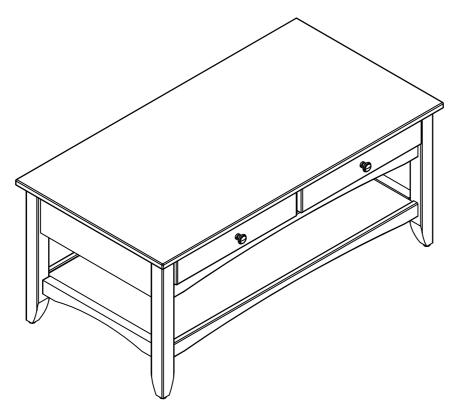

Questions, problems, missing parts?

Before returning to the store, call Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

Table of Contents

Table of Contents	2	
Safety Information	2	
Warranty	2	
1 Year Warranty	2	
What is Covered	2	
What is Not Covered	2	
Pre-assembly	3	
Planning Assembly	3	

Tools Required	3
Hardware Included	
Pre-assembly (continued)	4
Package Contents	4
Assembly	5
Maintenance	15
Care and Cleaning	

Safety Information



DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



WARNING

- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.



CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.).
 Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- □ DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.
- Some assembly may involve attaching glass or mirrors.
- Be very careful handling the glass or mirrors, as severe injury may result if the glass or mirror breaks.
- Never handle large pieces ofglass or mirrors by yourself.
- Assembly requires two people; assembly alone may cause injury.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly

 
PLANNING ASSEMBLY

- Remove all Packaging materials , staples and packing straps form the carton .
- $\, \square \,$ Refer to Parts List and Hardware List , and $\,$ ensure parts and hardware are correct before assembly .
- Contact customer service for missing parts .
- Place all wooden parts on a clean , flat , and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts .

TOOLS REQUIRED




HARDWARE INCLUDED



Part	Description	Quantity
AA	Drawer support	2
BB	Wooden dowel	24
CC	Cam bolt	56
DD	Cam lock	56
EE	Screw	4
FF	Knob	4


Pre-assembly (continued)

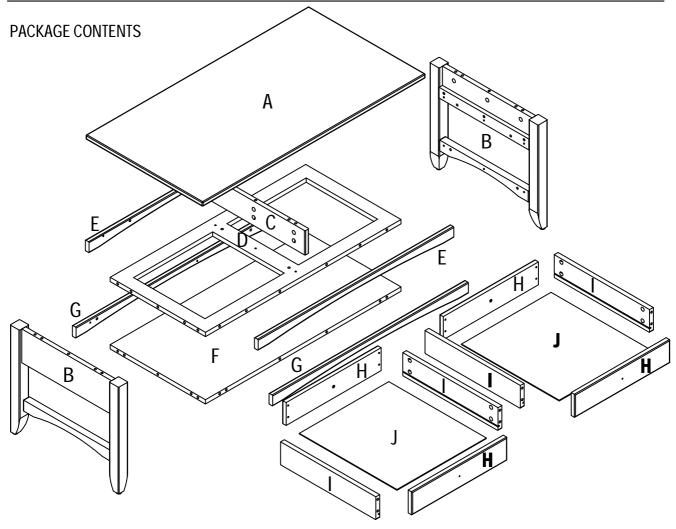


Part	Description	Quantity
Α	Table top	1
В	Side panel	2
С	Divider panel	1
D	layer box	1
E	Rail panel	2
F	Bottom panel	1
G	Bottom rail panel	2
Н	Drawer front panel	4
I	Drawer side panel	4
J	Drawer bottom panel	2

Assembly


Locked cam bolts(CC) and attached wooden dowel(BB) to side panel(B) as shown

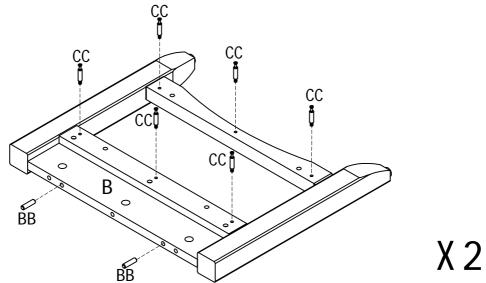


2 Lock cam bolts(CC) to the top panel(A), attached wooden dowel(BB) to divider panel(C)

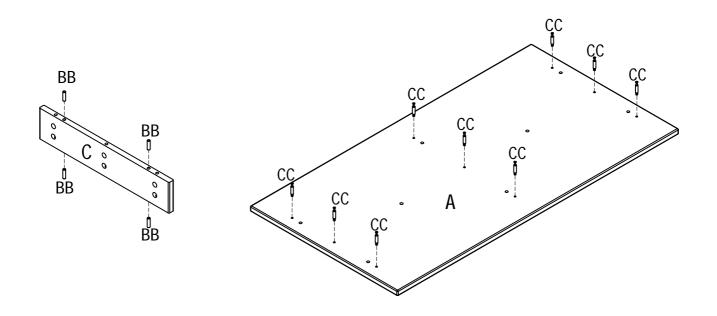


Attached wooden dowel(BB)to bottom panel(F) and layer box(D),locked cam bolt(CC) to layer box(D)

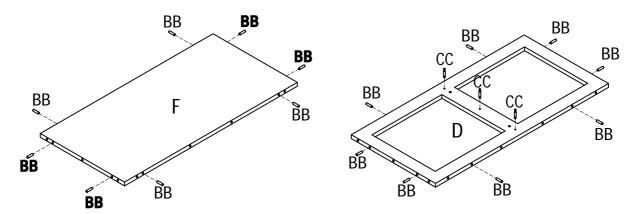


4 Locked cam bolt(CC) to rail panel(E) and bottom rail panel(G) as shown

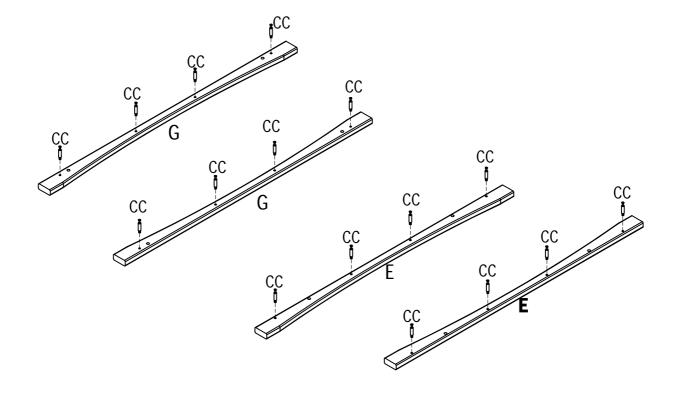


5 Connect bottom rail panel(G) and bottom panel(F) with cam lock(DD) as shown

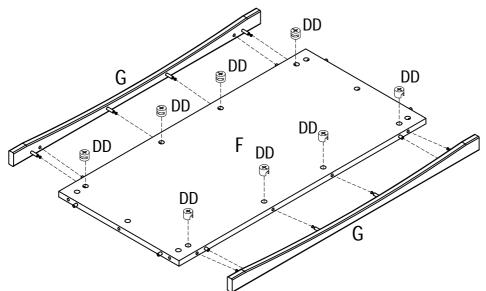


6 Connect rail panel(E) and layer box(D) with cam lock(DD) as shown

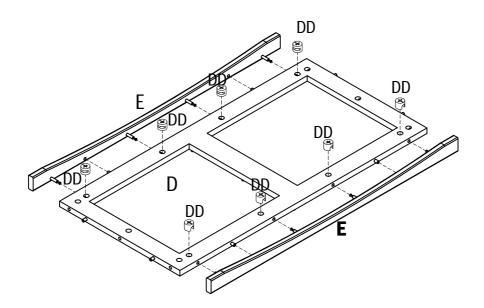


7 Connect side panel(B) with cam lock(DD) from step 6

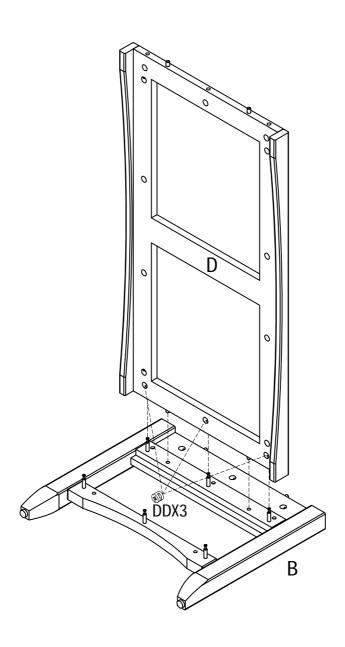


Sonnect bottom panel(F) to side panel(B) with cam lock(DD) from step 7

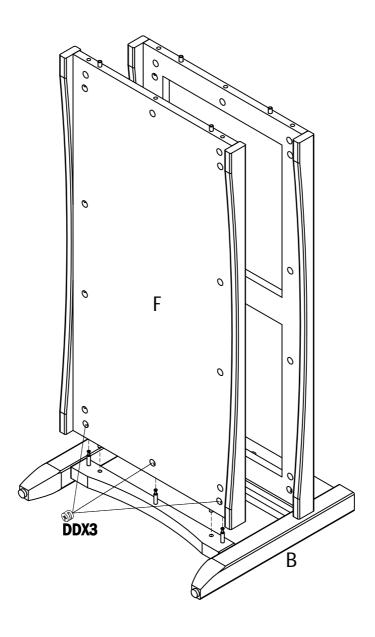


 ${\bf 9} \ \ {\bf Connect \ side \ panel (B) \ with \ cam \ lock (DD) \ from \ step \ 8}$

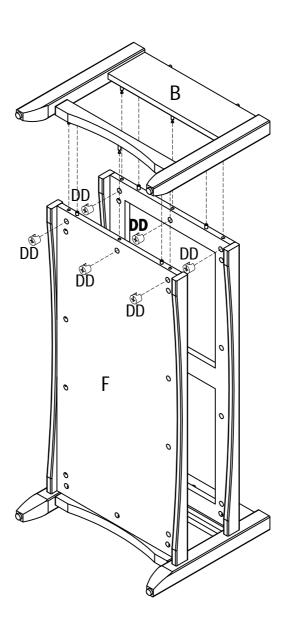


10 Connect divider panel(C) with cam lock(DD) from step 9

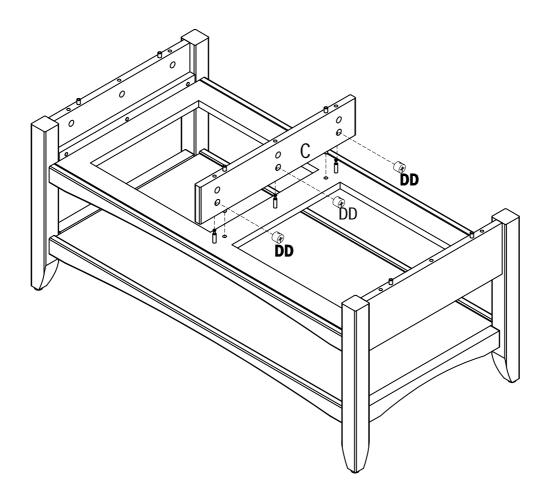


1 1 Connect table top panel(A) with cam lock(DD) from step 10

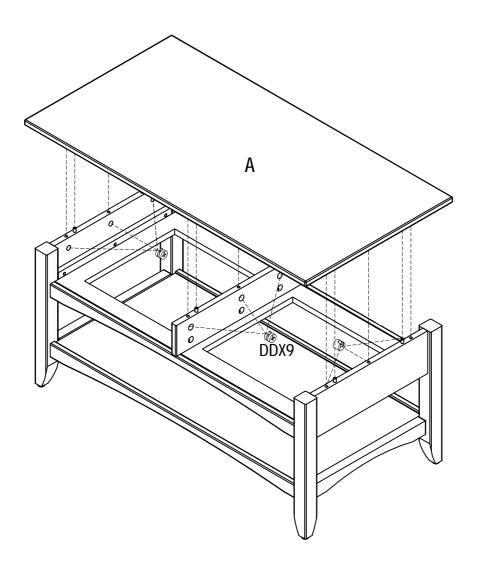

Locked cam bolt(CC) to drawer front panel(H),connect drawer side panel(I) to drawer front panel(H),insert drawer bottom panel(J) and tighten drawer front panel with cam bolt(DD),aseembly the knob (FF) with screw (EE) as shown

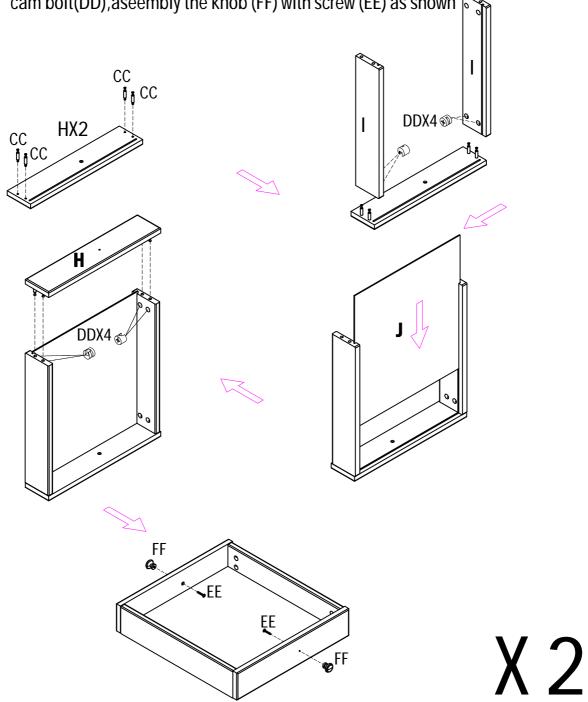

12 Locked drawer support(AA) as shown

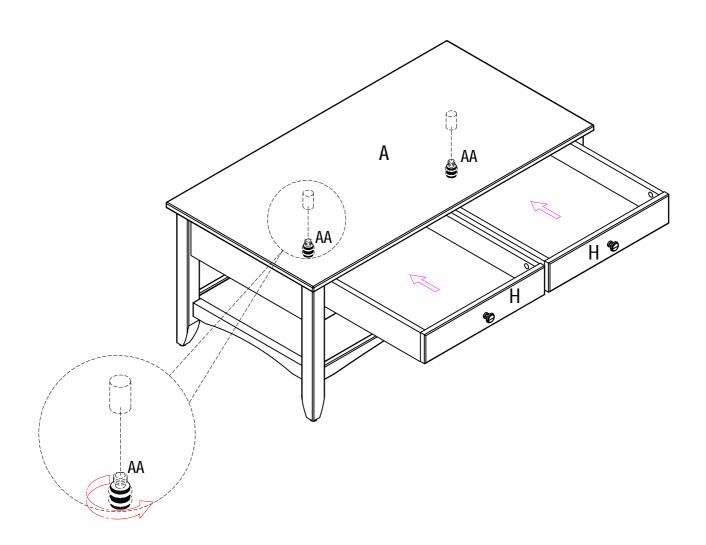

Ma	aintenance		
	Keep the product away from direct heat and sunlight . Prolonged exposure to heat sources may cause scorching, or ever Regular vacuuming or light brushing helps to remove dirt and pre Periodically (every 90 days) make sure that the screws arefully tig	vent soil build-up, which increases the appearance of wear .	
Ca	re and Cleaning		
	Handle with care. Use a slightly damp cloth to clean the product. Do not use bleach Check all the fittings periodically and re-tighten as necessary. Do Never allow any kind of liquid to remain on your furniture. Absorption can make wood wrap or delaminate. Do not place hot items (e.g. hot drinks) directly onto the wood sur Do not drag and /or pull the furniture.	o not us the product if any of the parts are damaged or broken . face.	
	 Never use harsh chemicals or solvents on your product as this may damage the metal. Marks and stains from pens, crayons and ink markers are difficult to remove. In the event that your products become permanently stains we recommend that you consult a professional. 		

StyleWell.

Questions, problems, missing parts?

Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.