



## **DocaPole 24ft GoSaw Kit Assembly Instructions**

- 1. To adjust extension pole length, raise thumb levers and pull out pole segments to desired length, then lower thumb levers to lock into place**
- 2. Extend and use the lower pole segments first if full extension is not required. These segments are thicker and stronger and will provide the best sawing experience.**
- 3. To minimize pole bend when not using at full extension, leave about 6" of overlap between pole segments by not extending them all the way.**
- 4. Let the GoSaw's sharp teeth do the work. Focus on the saw's up and down motion and not on trying to press the saw into the wood.**
- 5. .) Only screw the GoSaw onto the pole's metal tip. Some poles come with a separate plastic hinge tip. This plastic tip is perfect for use with cleaning attachments but is not intended for tree pruning.**
- 6. After screwing the GoSaw onto the pole, use a screwdriver to tighten the locking screw at the base of the GoSaw. This will further secure the GoSaw onto the end of the pole.**
- 7. If any pole segments begin to slip, use a screwdriver to tighten the locking clasps on the pole. These can be adjusted as needed to increase or reduce tension.**
- 8. Be safe. Tree pruning can be a dangerous activity. Always be sure to wear gloves and eye protection.**