


LIGHT

SOCIETY

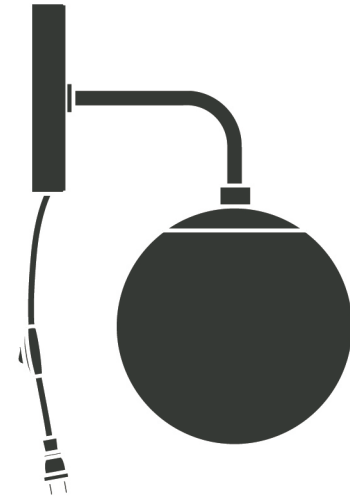

CONTACT INFORMATION

Have a question or missing parts? Our customer service team is ready to help.
Give us a call or send us an email and we'll get you sorted!

Phone: +1 888-550-9970

Email: support@lightsociety.com

Website: www.lightsociety.com

Hours of operation:

Monday - Friday: 8:00am-4:00pm PST

Saturday - Sunday: Closed

MADE IN CHINA

Model # LS-W463
V2-063020

⚠ IMPORTANT SAFETY INSTRUCTIONS

- PLEASE READ INSTRUCTIONS IN THEIR ENTIRETY PRIOR TO ASSEMBLY.
- Carefully examine the cord, lamp holder, switch and all other parts for damage. If any part is damaged, the product should not be used.
- This light fixture is rated for 60W MAX medium-base (E26) light bulb (120V, 60Hz). To avoid the risk of fire, do not exceed the recommended wattage.
- We suggest using LED bulbs for low energy consumption and long-life span.
- Keep all hardware parts out of reach of children.
- Dispose plastic packaging material immediately to avoid any risk of suffocation to children and animals



This portable lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug.

CARE AND USE


- Recommended for indoor use only.
- Wipe clean using a soft, dry cloth or static duster. Always avoid the use of harsh chemicals and abrasives to clean fixture as they may damage the finish.

GETTING STARTED


1. Carefully unpack fixture and parts.
2. Place all components on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.
3. Make sure all parts are included before discarding any packing materials.

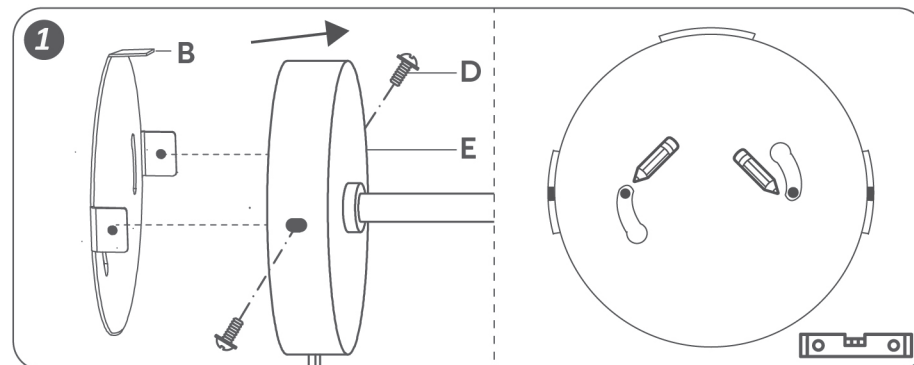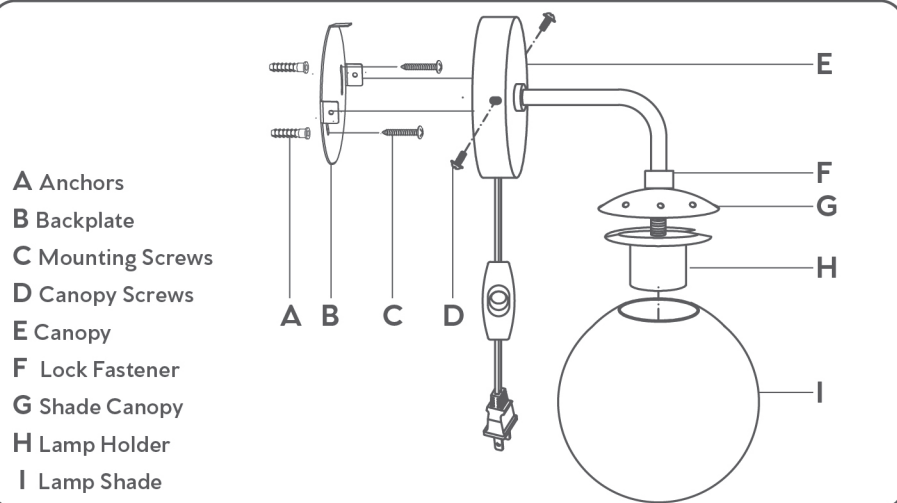

Remove Backplate (B) from Canopy (E) by unscrewing Canopy Screws (D). Place Backplate on wall and mark the location for anchors as shown above. We highly recommend using a level tool to ensure the fixture hangs straight.

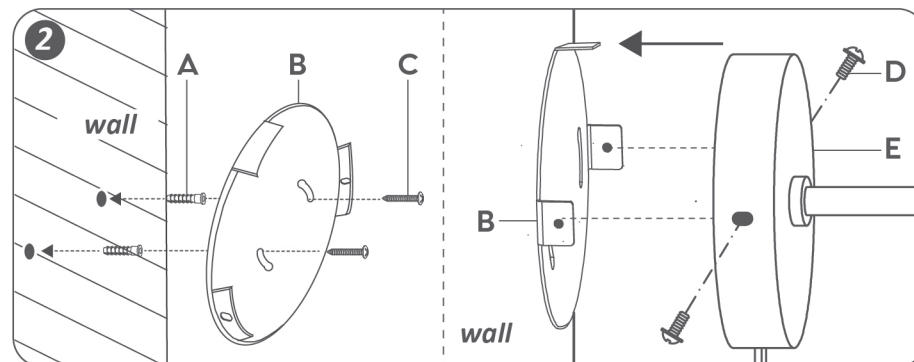

Drill holes at the marked location and insert anchors into wall. Secure Backplate (B) to wall by screwing Mounting screws (C) into anchors. Place fixture over Backplate (B) and secure using Canopy Screws (D).

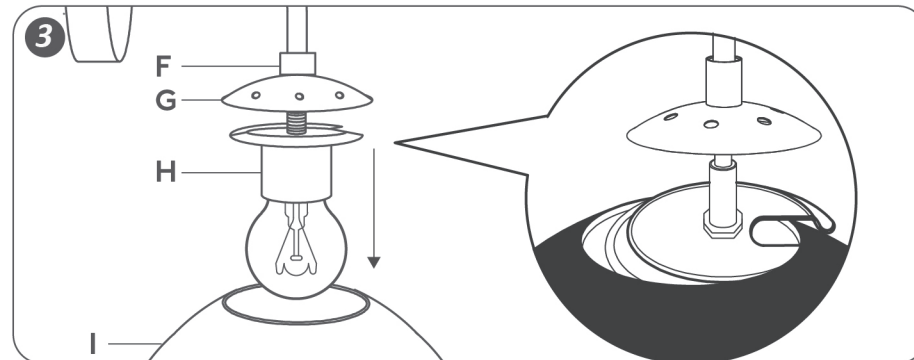

Insert desired bulbs (not included). Unscrew Lock Fastener (F) from Shade Canopy (G), hook Lamp Shade (I) at an angle over Lamp Holder (H), pivot Lamp Holder (H) until fully inserted. Lower Shade Canopy (G) over Lamp Shade (I). Thread Shade Fastener (F) clockwise to secure shade in place. Enjoy your new lamp!