



## BEFORE FIRST USE

- Read instructions carefully.
- Remove all packaging materials; make sure all parts are included and are in good condition.
- Wash any accessories with warm soapy water, rinse and dry thoroughly
- Use a damp cloth to clean the exterior of the base; do not immerse the unit in water.



## HOW TO USE YOUR BREAKFAST CENTER

### USING THE TOASTER OVEN

---

#### **Before First Use of Toaster Oven:**

**PLEASE NOTE:** The initial 15 minutes of use may result in minimal smell and smoke. This is normal and harmless and comes from the protective substance applied to the heating elements during manufacturing.

1. Make sure the Timer Control Knob is set to “OFF” position before plugging the power cord into a wall outlet.
2. Set the Timer Control Knob to pre-heat the oven for 15-min using mode 3 (griddle and oven working together) at the maximum temperature or until the smoke and odor no longer persist.
3. Turn the Timer Control Knob to the “OFF” position and remove the power cord from the wall outlet.

#### **Using the Timer Control Knob:**

1. In order for the toaster oven to turn on, the Timer Control Knob must be set.
2. Turn the Timer Control Knob clockwise to select the desired time.  
(Maximum time 15-minutes)
3. Once the desired time frame has expired, the timer bell will ring loudly and the oven will turn OFF automatically.
4. If you wish to shut the timer off earlier than the programmed time, you can manually turn it off by turning the Timer Control Knob counter clockwise to the OFF position.

#### **Using the Toaster Oven:**

1. When using the broiler tray, preheat the oven for 2-minutes.
2. When toasting, place the food directly onto the baking rack.
3. Always keep the door closed when the oven is in use.
4. The oven can be used to defrost or heat up frozen foods. The time will depend on the size and the temperature of the food.
5. To ensure uniform defrosting, divide the food into smaller portions if possible and wrap in aluminum foil.

## **OPERATING CONTROLS:**

MODE 1	GRIDDLE/BROILER ONLY
MODE 2	OVEN ONLY
MODE 3	GRIDDLE & OVEN

## **USING THE BREAKFAST GRIDDLE**

---

1. Make sure the timer is set to OFF position before plugging the power cord into a wall outlet.
2. Position the Oven-Top Griddle on top of the oven.
3. Set the Timer Control Knob to desired time.
4. Set mode selector to Mode 1.
5. When cooking is complete, set the Timer Control Knob to the OFF position before unplugging.

## **USING THE COFFEE MAKER**

---

1. Fill the coffeemaker glass carafe with cold water. Lift open the tank lid and pour the water into the Coffeemaker Water Tank.
  2. Swing open the filter compartment, remove the reusable filter and fill with ground coffee. Place the reusable filter back into the swing-out basket and carefully push it closed until it snaps into place.
  3. Close the Coffeemaker Water Tank lid.
  4. Place the empty glass carafe back onto the heating plate of the coffeemaker.
  5. Switch the ON/OFF button to ON.
  6. Switch button to "OFF" position when finished.
- \*\* Note: The glass carafe can be kept warm as long as there is always approximately one cup of coffee left in it.**
- \*\* Always turn off the unit when it is empty or when not in use.**

## **HINTS & TIPS**

---

- Never operate the toaster oven with door completely open.
- Always use heat resistant containers. Make sure the container can fit properly inside the oven before use.
- Never set a cooking container directly on the lower heating element. Always use the Baking Rack.
- In order to prevent countertop damage from the lower heating elements, the crumb tray must always be positioned securely inside the oven.
- Always leave at least 1-inch between food or containers from the top heating element.
- Always remove any plastic or paper from TV dinner dishes before putting inside the oven to cook. Always check cooking instructions to make sure it is safe to use in a Toaster Oven.
- Take caution when removing foods or containers. Always use oven mitts or hot pads.
- Never operate the oven unattended.
- Stop using the appliance if smoke comes from the power cord. Unplug immediately.



## CLEANING AND MAINTENANCE

1. Always make sure the unit is turned OFF and unplugged when not in use.
2. Always allow the appliance to cool down completely before cleaning.
3. Use a damp wash cloth to clean the outside of the main appliance. Use a dry cloth to clean the interior of the oven. Never use abrasive cleansers or products that cause scratching.
4. The Toaster Oven Baking Pan is dishwasher safe.
5. The removable crumb tray can be cleaned with a damp cloth. Dry it completely before replacing it back into the oven. Make sure to clean the crumb tray on a regular basis.
6. When cleaning inside the oven, make sure not to touch or damage the heat elements.



## POLARIZED PLUG

If this appliance is equipped with a **polarized plug** (one blade is wider than the other), please follow the below instructions:

To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If you are unable to fit the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the product or any extension cord being used with this product. Do not attempt to defeat the safety purpose of the polarized plug.