

## How to Install a Return Air Filter Grille



### **For replacement of filter grille (existing installation)**

**Step 1** – Sizing the return air filter grille. The size of the hole is likely to be the same as the size of filters in the filter grille that you plan to replace.

Alternatively, or for new installation, measure the size of the hole in the wall or ceiling to figure out the filter grille size. The back of the filter grille frame slides into the hole; therefore, the size of hole needs to be approximately the same size as the filter grille.

For example, in an approximately 16-inch x 25-inch hole size, the size of the required filter grille is 16-inch x 25 inch. All Venti Air filter grilles are described as width (W) x height (H). Therefore, a 16 x 25 filter grille is 16 inches wide and 25 inches high. In Venti filter grilles, the opening and closing latch is always on the width side. This allows you to open them from the top when installed on the sidewall.

**Step 2** – The filter grille consists of two parts: frame and grille (face). On the wide side, the grille has latches on the top and take apart hinges at the bottom. Please see the pictures below. Only the frame needs to be installed after removing the grille as they come packaged together. If it is a replacement, then after removing the grille, remove the old frame by removing the screws. Slide in the new frame and hold it in place using the built-in tabs. Secure it with screws.

Lastly, you can attach the grille (face) to the frame and you are done. On attachment, the latches will go on the top and take apart hinges at the bottom.

**Step 3** – If it is a new installation, then we recommend the use of a trained and licensed HVAC technician. This process can require identifying the proper location for the filter grille, cutting the sheet rock to correct size and securing the hole, removing insulation, etc., so that the filter frame can be installed properly.



Above instructions have copyright and property of Venti Air Products. Their use any other purpose except for the installation from Venti Air products, without the express and written permission of Venti Air Products, is prohibited and can lead to legal action on infringement.