

CORDLESS



ONEPWR<sup>®</sup>  
BATTERY SYSTEM


## ONEPWR<sup>®</sup> SMARTWASH<sup>™</sup>

CORDLESS CARPET CLEANER




# QUICK START GUIDE


## GETTING STARTED

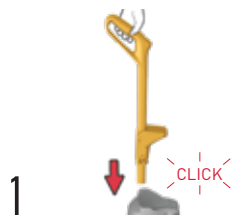

1 Insert handle into main unit. You will hear a click when inserted properly.

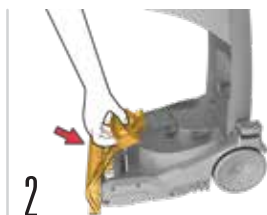


2 Install the brush roll cover according to instructions on brush roll cover.

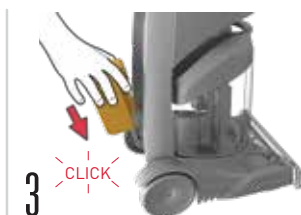

3 Insert the battery until it clicks. **Ensure battery is fully charged before starting.**


## FILLING THE TANK

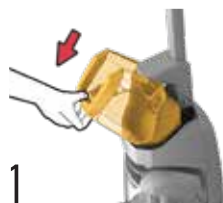

1 Remove solution tank from your product.



2 First, open the flap and fill with water to the WATER line. Next, fill Hoover Solution to SOLUTION fill line.

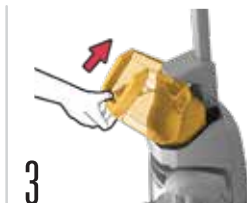

3 Close the flap and reinsert tank until it clicks into place.


## HOW TO USE



**1**  
Step on the Handle Release Pedal to recline the unit into cleaning position.



**2**  
Locate and push the power button on the handle to start your machine.

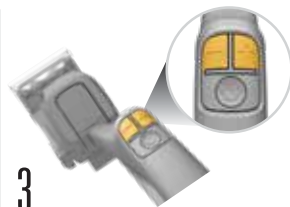

**3**  
Use the + and - buttons to switch between AUTO, SPOT, and DRY ONLY modes.

## USE MODES



### AUTO MODE

Slowly push forward and the machine will automatically dispense water and solution. Then pull back and the machine will extract.



### SPOT MODE

Toggle to SPOT Mode for heavy messes and stubborn stains.



### DRY ONLY MODE

Used to remove any remaining moisture in the carpet.



**BUY SOLUTIONS TODAY**  
FOR BEST PERFORMANCE, CHOOSE HOOVER®