

43" Propane Gas Fire Pit Table Use and Care Manual

IMPORTANT SAFETY WARNINGS

READ AND FOLLOW ALL INSTRUCTIONS CAREFULLY BEFORE USE. RETAIN THIS MANUAL FOR FUTURE REFERENCE.

- **DO NOT USE INDOORS, INCLUDING GARAGES, TENTS, OR ENCLOSED SPACES.**This fire pit is designed for OUTDOOR USE ONLY. Indoor use may cause carbon monoxide poisoning, fire, or explosion.
- **KEEP A MINIMUM OF 10 FEET (3 METERS) AWAY FROM BUILDINGS, FENCES, TREES, OR OTHER FLAMMABLE MATERIALS**(e.g., furniture, curtains, gasoline, paint, etc.).
- **NEVER LEAVE UNATTENDED WHILE IN USE.**Keep children and pets at least 3 feet (1 meter) away from the fire pit during operation.
- **DO NOT USE IF DAMAGED.**Inspect for cracks, leaks, or loose parts before each use. Discontinue use if any damage is found.
- **ALWAYS USE A PROPANE TANK WITH A PRESSURE REGULATOR AND SAFETY VALVE.**Use only 20 lb (9 kg) propane tanks (not included).
- **DO NOT TOUCH HOT SURFACES.**Use heat-resistant gloves when adjusting parts or adding fuel. Allow to cool completely before cleaning or moving.
- **EXTINGUISH FIRE COMPLETELY BEFORE LEAVING THE AREA.**Use a fire extinguisher (Class B or ABC) or sand to smother flames if needed.

5. Install the Glass Wind Guard

- Attach the glass wind guard to the table using the provided brackets. Ensure it is secure and centered around the burner pan.

6. Connect the Propane Tank

- Turn the propane tank valve**OFF**(clockwise) before connecting.
- Attach the regulator hose to the tank's outlet valve. Hand-tighten the connection until snug—**do not use tools**.
- Check for gas leaks: Apply a solution of 50% water and 50% dish soap to the hose connections. Open the tank valve slightly (1/4 turn). If bubbles form, there is a leak—tighten the connection and retest. If leaks persist, stop use and contact customer service.

Operating Instructions

Before Ignition

- Ensure the fire pit is outdoors, well-ventilated, and at least 10 feet from flammable materials.
- Confirm the glass wind guard is installed and the propane tank valve is closed.
- Check that the burner ports and media are not blocked by debris.

Ignition Steps

1. Open the propane tank valves **slowly** (counterclockwise) 1-2 full turns.
2. Turn the control knob to the "IGNITE" position and press the ignition button. You should hear a "click" and see a spark.
3. If ignition does not occur within 5 seconds, turn the control knob to "OFF," close the tank valve, and wait 5 minutes to clear gas fumes. Retry.
4. Once lit, adjust the control knob to your desired flame height (low/medium/high). The maximum output is 60,000 BTU—avoid continuous use for more than 2 hours to prevent overheating.

During Use

- Never leave the fire pit unattended. Keep children and pets at a safe distance.
- Do not touch the glass wind guard or table surface—they will be extremely hot.
- Do not add additional media (e.g., wood, paper) to the fire pit. Only use propane gas.
- If the flame goes out unexpectedly:
 - Turn the control knob to "OFF."
 - Close the propane tank valve.
 - Wait 5 minutes, then follow the ignition steps to relight.

Shutting Down

1. Turn the control knob to "OFF."
2. Close the propane tank valve **fully** (clockwise).
3. Allow the fire pit to cool completely (at least 30 minutes) before covering or moving.

Maintenance & Cleaning

Regular Cleaning

- **Burner Pan:** Once cool, remove media and brush away debris with a soft bristle brush. Wipe with a damp cloth.
- **Table Surface (Wicker):** Clean with mild soap and water. Avoid abrasive cleaners—they may damage the weave.
- **Glass Wind Guard:** Wait until completely cool. Wipe with a glass cleaner and soft cloth. Avoid sudden temperature changes (e.g., cold water on hot glass) to prevent cracking.

Monthly Inspection

- Check the hose and regulator for cracks, wear, or damage. Replace if compromised.
- Tighten any loose screws or brackets on the frame or wind guard.