

Portable Backpack Chair Maintenance & Care Instructions

Page 1

1. Introduction

This portable backpack chair is made of high-strength 7075 aluminum alloy frame and durable 600D polyester fabric, featuring light weight, portability, and stable triangular structure. Proper maintenance and care can extend the service life of the chair, maintain its good performance, and ensure safe use. This instruction covers daily maintenance, cleaning methods, storage precautions and other key points for your reference.

2. Daily Maintenance Guidelines

2.1 Frame Maintenance

- Regularly check the 7075 aluminum alloy frame for signs of deformation, cracks, or looseness. If any abnormal condition is found, stop using the chair immediately to avoid structural failure.
- After using the chair outdoors (especially in humid or salty environments such as beaches), wipe the frame with a dry cloth to remove moisture and dust, preventing corrosion.
- Do not knock or collide the frame with hard objects, so as not to damage the surface protective layer and affect its load-bearing capacity.

2.2 Fabric Maintenance

- Check the 600D polyester fabric regularly for scratches, tears, or loose stitching. If the fabric is damaged, repair it in time or replace it with a new one to ensure waterproof and protective performance.
- Avoid placing sharp objects on the fabric seat to prevent scratching. Do not drag the fabric on rough surfaces to reduce wear.
- If the fabric is stained with oil, sauce, or other difficult-to-clean substances, clean it as soon as possible to avoid long-term adhesion affecting the fabric's performance.

2.3 Fastener & Accessory Maintenance

- Check the fixed buckles, elastic bands, and other accessories regularly for looseness, aging, or damage. Tighten the loose buckles in time; replace the aging or damaged accessories to ensure the stability of the chair assembly.
- Keep the fasteners clean. If they are stuck due to dust accumulation, wipe them with a dry cloth and apply a small amount of neutral lubricant (if necessary) to ensure smooth operation.

3. Cleaning Methods

3.1 Frame Cleaning

For general dust, wipe the frame with a soft dry cloth. If there is stubborn dirt, dampen the cloth with a small amount of neutral detergent (such as mild soap water), wipe gently, and then dry it with a dry cloth immediately. Do not use strong corrosive cleaners (such as bleach, acid, or alkali) which will damage the frame's surface.

3.2 Fabric Cleaning

The 600D polyester fabric is waterproof and stain-resistant. For light stains, wipe with a damp cloth directly. For heavy stains: 1. Remove the fabric from the frame first (refer to the disassembly steps in the assembly instructions); 2. Soak the fabric in warm water (below 30°C) with neutral detergent for 10-15 minutes; 3. Gently scrub the stained area with a soft brush; 4. Rinse thoroughly with clean water; 5. Hang the fabric in a well-ventilated place to air dry naturally. Do not expose it to direct sunlight for a long time, and do not use a dryer to dry it, so as not to damage the fabric's fiber and waterproof coating.

Page 2

4. Storage Precautions

1. Before storage, ensure that the frame and fabric are completely dry. Storing in a damp state will easily cause the frame to rust and the fabric to mold.
2. Disassemble the chair according to the correct method: separate the fabric from the frame, fold the frame into a compact shape, and then put the frame, fabric, and accessories into the special storage bag.
3. Store the chair in a dry, cool, and well-ventilated place, away from high temperature, open flames, and direct sunlight. High temperature will accelerate the aging of the fabric and the deformation of the frame.
4. Do not place heavy objects on the stored chair to avoid compressing the frame and fabric, affecting their performance.
5. If the chair is not used for a long time, it is recommended to check and clean it once every 3 months to prevent mold and corrosion.

5. Common Problems & Solutions

- **Problem:** The frame is loose. **Solution:** Check the connecting parts and fasteners, tighten the loose buckles or screws; if the fasteners are damaged, replace them in time.
- **Problem:** The fabric is moldy. **Solution:** Clean the moldy area with neutral detergent and water, then dry it thoroughly; if mold is severe and cannot be removed, replace the fabric.
- **Problem:** The waterproof performance of the fabric is reduced. **Solution:** Check if the fabric's waterproof coating is worn; if so, you can spray a special waterproof agent for polyester fabric to restore the waterproof performance; if the wear is severe, replace the fabric.
- **Problem:** The frame is corroded. **Solution:** Wipe the corroded area with a dry cloth; if corrosion is slight, apply a small amount of anti-rust oil; if corrosion is severe (with cracks or deformation), stop using the chair and contact after-sales service.

6. Important Notes

- Do not modify the chair's structure or replace parts with non-original ones, which will affect the safety and performance of the product.
- When cleaning and maintaining, wear gloves if necessary to avoid scratches on hands caused by metal parts or sharp edges of the frame.
- If the chair is damaged due to improper use or lack of maintenance, it will not be covered by the warranty. Please follow this maintenance instruction strictly.