

The CERAMIC INFRARED COOKTOP

by MegaChef

MC-6200IC



USER MANUAL

Thank you for purchasing our product!

Make sure you have read the manual before using this product. Please use the appliance in accordance with the instructions. Please save these instructions. This item is intended for household use only.


IMPORTANT SAFEGUARDS

1. **READ ALL INSTRUCTIONS.**
2. After unpacking, make sure that the appliance is intact with no signs of damage caused by transport. If in doubt, do not use the appliance and contact the supplier immediately.
3. If the cooktop is cracked, immediately stop usage, cut off the power supply and contact us directly at 424-543-1628.
4. Ensure that the appliance is securely grounded to the appropriate voltage wall outlet.
5. The surface of the cooktop will get extremely hot during operation. **Do not touch the surface or hotplate when the appliance is operating or cooling down after use.**
6. Do not allow the cord to touch the hotplate during operation or cooling down after use.
7. Do not leave the appliance unattended whilst in operation.
8. Do not leave the appliance without supervision when oil and/or fat is being heated.
9. To protect against fire, electric shock, and injuries, **DO NOT IMMERSE THE CORD OR PLUG IN WATER OR OTHER LIQUIDS.**
10. **CLOSE SUPERVISION IS REQUIRED WHEN USING THE UNIT NEAR OR BY CHILDREN.**
11. Unplug from outlet when not in use and before cleaning. Allow at least 30 minutes for the unit to cool down before cleaning and storing.
12. Do not operate the appliance if it has a damaged cord or plug, or after it has malfunctioned or has been damaged in any manner.
13. Do not operate the appliance outdoors without taking the adequate precautions .
14. Do not let the power cord hang over the edge of tables or counters, or touch hot surfaces.
15. Do not place on or near hot gas or electric burner, or in a heated oven.
16. Keep clear of any flammable materials such as curtains, clothes, etc.
17. Do not place metallic objects such as cutlery or utensils directly on the heating plates as they will get extremely hot and may result in serious injuries.
18. Unplug the unit when it is not in use.
19. Do not use appliance for other than its intended use. Improper use may result in risk of fire, electric shock and/or serious injuries.
20. Ensure the appliance is used on a stable and heat resistance surface.
21. This appliance is not intended for use by children, or any person with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given authorization or instruction concerning the use of the appliance by a person responsible for their safety.
22. Do not attempt to repair, disassemble or modify the appliance. Any servicing should be performed by an authorized service representative. For more information, contact us directly at 424-543-1628.

CONTENTS

IMPORTANT SAFEGUARDS.....	3
COMPONENTS	5
BEFORE USE	6
OPERATING INSTRUCTIONS	6
CLEANING AND CARING.....	7
DISPOSING OF YOUR UNIT	7

COMPONENTS

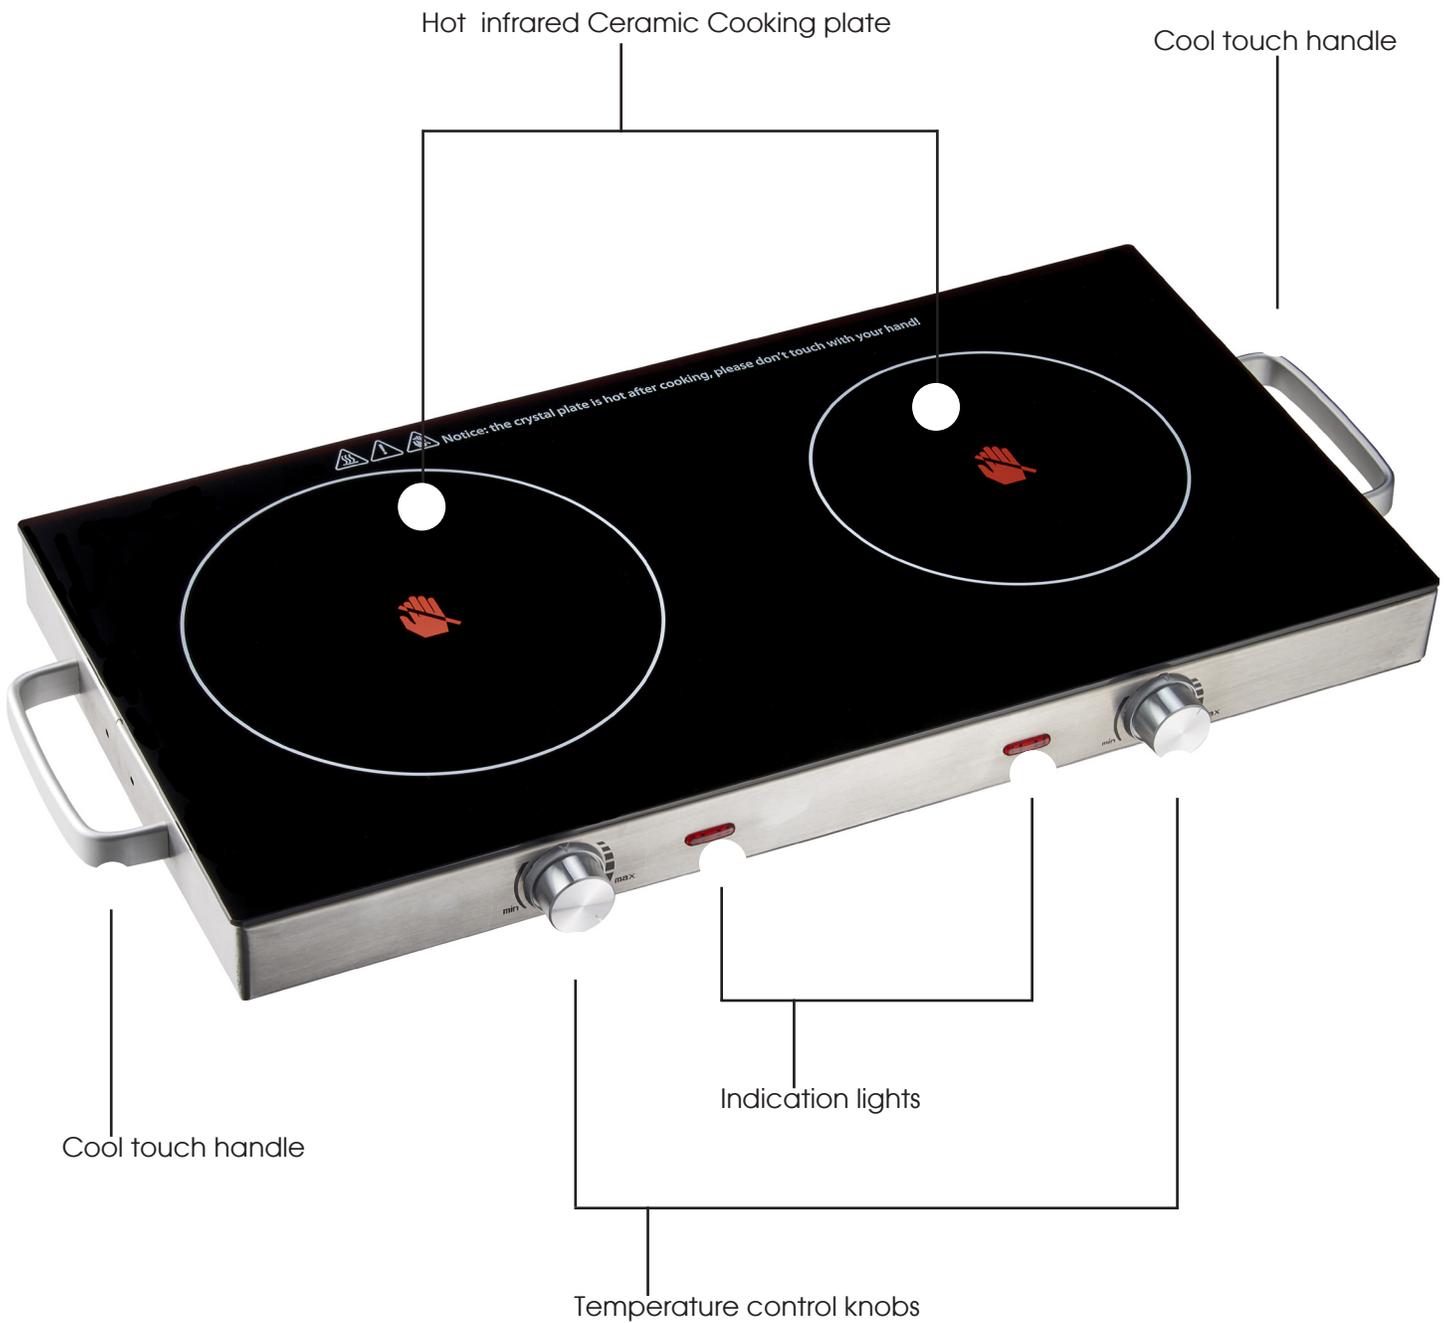

BEFORE USE

- Before using your unit for the first time, turn the temperature knob to the highest setting and let the hot plate heat up for 3 to 5 minutes. This will allow the coating designed to protect the hot plates prior to first use to fully evaporate. A presence of light smoke and smell is normal and will disappear. Please ensure that nothing is sitting on the hot plate during this process.

OPERATING INSTRUCTIONS

1. Make sure to place the Electric Infrared Ceramic Cooker on a flat heat resistant surface.
2. Before plugging in the Cooker, make sure the knobs are in "OFF" position.
3. Plug the Cooker in the correct electrical outlet.
4. Turn the temperature knob to the desired setting. The power indicator will turn on to indicate that the hot plate is warming up to the set setting.
5. Once the set temperature has been reached, the power indicator will turn off to indicate that the hot plate is now ready for cooking.
6. To turn the hot plate or the appliance off, simply turn the temperature knob to the "OFF" position
7. After use, unplug the appliance from the wall outlet and allow to cool thoroughly before cleaning and storing.

TO KEEP FOOD WARM

- Turn the knob to suitable position to maintain food at a constant warm temperature.
- Turn the knob to "min" (OFF) and food will stay warm up for up to 5 minutes as the hot plate gradually cools down.


CAUTION

- Do not use pans that are unstable and easily tipped. Use flat-bottom pans to insure full contact with the Cooker for maximum heat efficiency.
- For long-life performance, avoid dropping any items onto the infrared Cooker.
- When using this infrared Cooker for the first time, there will be some smoke, this is normal and safe.
- Do not use glass containers!

CLEANING AND CARING

1. Please ensure appliance is disconnected from the power supply and switched off before attempting any cleaning.
2. Always ensure the appliance is unplugged from the power outlet and has thoroughly cooled down before cleaning or storing. Please allow at least 30 minutes for the appliance to cool down.
3. Wipe clean with a slightly damp soapy cloth and dry with a paper towel immediately. Do not use any abrasive cleaning agents nor allow water to spill or seep into the unit. Never immerse the cooktop, cord or plug in water or any other liquid.
4. Ensure that there is no standing water left after cleaning and store in a cool, dry place.

DISPOSING OF YOUR UNIT

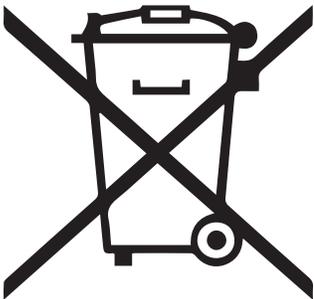

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. Please visit www.epa.gov/recycle/electronics-donation-and-recycling for access to information about the recycling of electrical items.

FOR WARRANTY & SUPPORT

CONTACT US AT

424.543.1628