

ROSEWILL
H O M E



Electric Kettle RHKT-17001

User Manual

 
 




Table of Contents

Important Safeguard	01
Product View.....	02
For First-time Use.....	02
Operation Steps.....	03
Cleaning & Maintenance	03
Specifications	03
Time heat preservation.....	04

Thank you for purchasing a **Rosewill** kettle.
Please read the instruction manual before using
and retain it for your future reference.

IMPORTANT SAFEGUARDS

When using this kettle, the following basic safety precautions should be read carefully and always followed:

- Use the appliance only on the voltage specified on the identification plate.
- The power plug should be inserted into a grounded socket.
- DO NOT let the power cord of the appliance hang over the edge of a table or a bench top, nor allow it to touch any hot surface, to avoid damaging the power cord.
- DO NOT use the power base for other purposes.
- Should you accidentally allow the kettle to operate with too less water or without water, unplug the kettle and allow it to cool down for 15 minutes before refilling.
- DO NOT heat without water. It will destroy the heating tube.
- Always ensure the lid is firmly closed, so boil-dry protection will automatically switch it off if needed.
- DO NOT overturn the appliance. By design, the lid is not fully sealed in order to release the steam during boiling. Small trickle of water will escape when overturned.
- The kettle can only be used to boil water. Use of any other liquids or food may damage the interior and void warranty.
- DO NOT wash under direct running water, otherwise will damage the switch on the handle.
- DO NOT immerse the product and power base into water, or any liquid, to avoid damage or electric shock.
- After boiling, it is recommended to press the release button for a few seconds before pouring water, this will help depressurize the steam inside.
- DO NOT fill above the MAX line, it may cause water to overflow.
- Ensure that the kettle is operated on a firm and flat surface away from the edge of the counter to prevent accidental tipping.
- This product CANNOT be placed on a heated surface, near a hot gas stove, electric burner nor in a heated oven.
- Keep out of the reach of children. Supervision is necessary when it is used by or nearby children.
- Always unplug the product from outlet when not in use and before cleaning.
- DO NOT use in outdoors. The appliance is intended to be used in household only.
- To avoid burns and risk of injury, use handles or knobs and always close lid after the boiling.
- DO NOT touch hot surfaces or hot water
- DO NOT use spare and accessory parts without the approval by the manufacturer, for this may result in fire, electric leakage, or injury.
- DO NOT operate the appliance with a damaged cord or plug, nor if there are signs of any malfunctions.
- For safety concern and energy saving, the appliance CANNOT re-start immediately after boiling. It can be restarted only when the temperature inside is below 90°C.
- DO NOT use for other than intended use.

PLEASE SAVE THESE INSTRUCTIONS

For Household Use Only**Product View****For First-time Use**

Before first use of the kettle, clean the kettle according to the following steps: fill the kettle with water up to the maximum water level, boil and discard, and repeat it twice.

Note: maximum capacity is 1.7 Liter.

Boil-dry Protection

Should you accidentally allow the kettle to operate without water, boil-dry protection will automatically switch it off. If this occurs, allow the kettle to cool before filling with cold water and re-boiling.

Operation Steps

1. To fill the kettle, remove it from the power base and open the lid.

Note: DO NOT fill the kettle over the maximum level, as water may spill out of the spout when boiling. Make sure the lid is closed firmly before connecting to power supply.

2. Place the kettle on the power base and connect to power supply.
3. Press the ON/OFF button. The button will illuminate to indicate the kettle is heating. The kettle will switch off automatically once the water has boiled. During the process, heating can be stopped by press the ON/OFF button and press again to restart.
4. Lift the kettle from the power base, press the water pouring lock and pour the water.

Note: Use caution when pouring the water from your kettle and DO NOT open the lid, as boiling water will scald.

5. The water can be kept warm by the vacuum layer between inner cavity and enclosure- no electricity consumption.
6. Unplug the appliance while it is not in use, dry and clean it, and then place it on the base.

Cleaning & Maintenance

1. Always disconnect the kettle from the power outlet before cleaning. NEVER immerse the kettle or power base in water, or allow moisture to come into contact with these parts, in case of electric leakage.

2. Exterior cleaning: wipe over the exterior of the kettle with a soft damp cloth, and then wipe dry with a dry cloth.

Note: DO NOT use chemicals, iron matter, saw dust or other abrasive cleaners to clean.

3. Clearance of deposit: minerals in water may deposit at the bottom of kettle, which will influence the usability of the kettle. So periodical descaling is needed (once every month). Please use detergents according to its instruction. Or according to the following methods with white vinegar.
 - a) Fill the kettle with 3 cups (100ml/cup) of white vinegar or 3 cups (100ml/cup) of citric acid, and then add water until it is over the deposit in the kettle. Allow it to stand overnight.
 - b) Empty the solution from the kettle. Fill the kettle with clean water to the maximum level, discard after boiling. Repeat for several times until there is no taste of vinegar.
4. When the kettle is in storage or not in use, do not fold the power cord.

Specifications

Model	RHKT-17001
Dimensions L x W x H	10.28"x 8.27"x 6.06"
Storage / Size	1.7 L
Voltage	120 V
Watts	1500 W
Cord Length	29.53"
Weight	2.74 lb.
Material / Finish	18/8 304 Stainless Steel
Plastic	BPA Free Plastic

Time heat preservation

Time	Fahrenheit	Celsius
Just boiled	210.38°F	99.1°C
1Hour	195.62°F	90.9°C
2Hours	181.58°F	83.1°C
3Hours	169.7°F	76.5°C
4Hours	159.62°F	70.9°C
5Hours	150.98°F	66.1°C
6Hours	143.06°F	61.7°C
7Hours	136.04°F	57.8°C
8Hours	129.74°F	54.3°C
9Hours	124.34°F	51.3°C
10Hours	119.30°F	48.5°C
11Hours	114.62°F	45.9°C
12Hours	110.84°F	43.8°C

Room temperature is 63.14°F

ROSEWILL H O M E

Rosewill Technical Support Information
techsupport@rosewill.com 1-800-575-9885

Thank you for purchasing a quality Rosewill product.
Please register your product at: [http: www.rosewill.com](http://www.rosewill.com)
for complete warranty information and support for your product.



Intertek

RHKT-17001_A