

# LoCo<sup>®</sup>

COOKERS

## GRIDDLE GEAR

Must have accessories, tools & more



5 PC Griddle Tool Set



Griddle Burger Kit



Griddle Cover



Griddle Cleaning Kit



Griddle Breakfast Kit

WIDTH  
**54.88**  
INCHES

HEIGHT  
**40.35**  
INCHES

DEPTH  
**25.12**  
INCHES




**LoCo**<sup>®</sup>  
COOKERS


WEIGHT  
**92.5**  
POUNDS



## GRIDDLE TOP CAPACITY

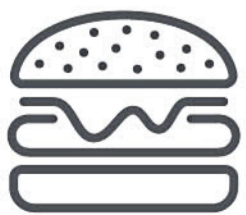

**18**  
BURGERS

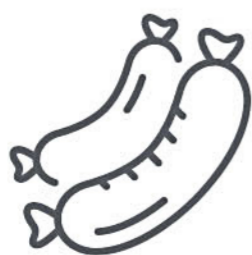


**75**  
HOTDOGS



**24**  
EGGS




**15**  
PANCAKES

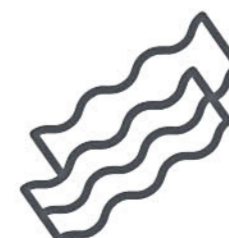

**38**  
BACON STRIPS



**15**  
STEAKS

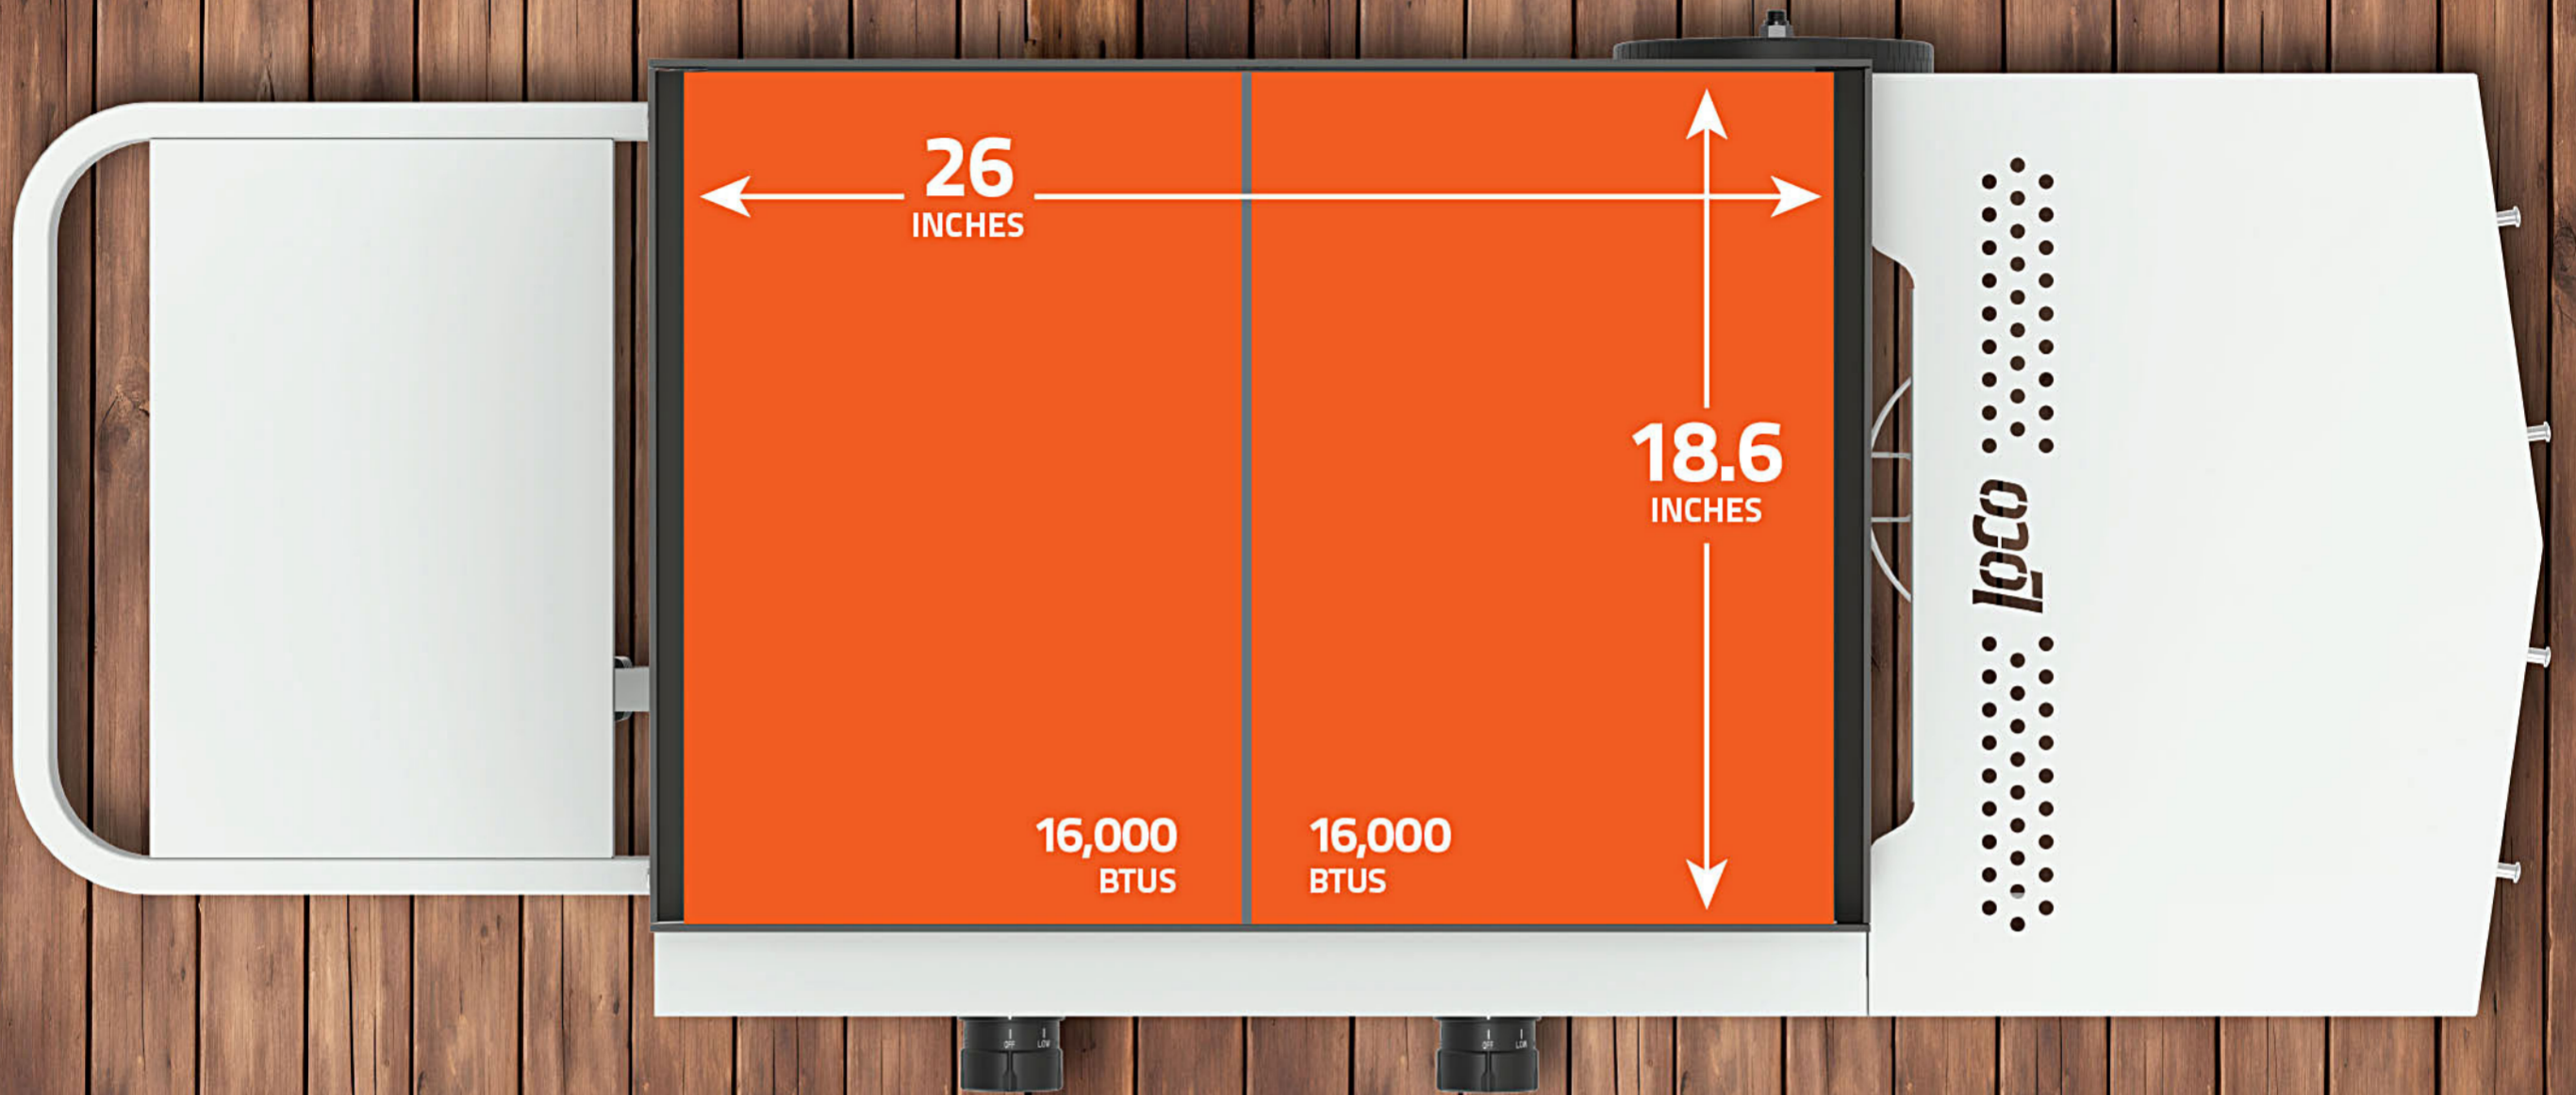

## GRIDDLE TOP AREA & POWER

**HEAT  
CONTROLS**  
**2 ZONES**

**COOKING  
SURFACE**  
**467.66**  
SQUARE INCHES

**MAX  
OUTPUT**  
**32,000**  
BTUS



Loco

Loco

Loco

LIGHTING INSTRUCTIONS:  
1. Read all instructions before lighting.  
2. Open lid during lighting.  
3. Push in and turn control knob to LOW/300F-500F/SEAR.  
4. Press and hold ignition switch until burner is lit.  
5. Adjust control knob to desired temperature.  
6. If ignition does not occur in 5 seconds, turn the burner control to OFF, wait 5 minutes, and repeat lighting procedure.

INSTRUCTIONS D'ÉCLAIRAGE:  
1. Lisez toutes les instructions avant d'allumer l'appareil.  
2. Ouvrez le couvercle avant d'allumer l'appareil.  
3. Appuyez sur le bouton d'allumage jusqu'à ce que le brûleur ne s'allume pas en 5 secondes.  
4. Réglez le robinet du brûleur, attendez 5 minutes, et procédez de nouveau à l'allumage.

LOW 300F 500F SEAR Loco

LOW 300F 500F SEAR Loco

Loco

Attached hood protects  
griddle surface

Cold Rolled Steel Cooktop

Side Shelf for Prep Space

Integrated handle

Oversized Grease Cup

**SureSpark**<sup>®</sup>  
Electronic Ignition Switch

**SmartTemp**<sup>™</sup>  
Set your precise cooking  
temperature & it Stays Where Set

Upper & Lower  
Tank Support

2 X 8"  
All-Terrain wheels

