

 


USER MANUAL

Please read all instructions
carefully before using
this product.

Steam Mop

Model: STM-402

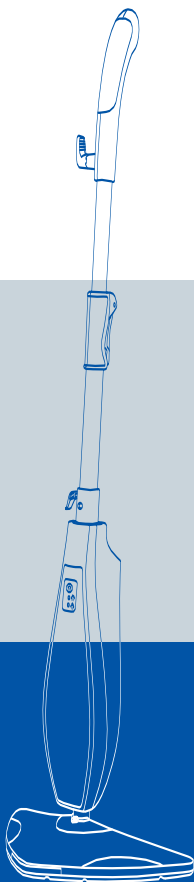

www.salavusa.com

Visit our website to find product tips, customer support and learn about
SALAV patented steam technology.

www.salavusa.com



Dear Valued Customers

Thank you for purchasing this SALAV product. Please read this manual prior to using your SALAV appliance. For more product information, FAQ and customer support please visit our website at www.salavusa.com.

Important Safety Instructions:

1. Keep the appliance and packaging film out of the reach of children.
2. This appliance is not designed to be used by individuals (including children) with limited physical, sensory or mental abilities or those without sufficient experience and/or knowledge, unless they are supervised by someone responsible for their safety. Improper use can lead to injuries, burns and electric shock.
3. This appliance is suited for cleaning heat-resistant surfaces only. The appliance is not suited for unsealed wooden flooring, soft plastic, glass, walls, counters, leather, unglazed ceramic floors, and wooden furniture. We recommend checking the use and care instructions from the floor manufacture before using this appliance.
4. Please use standard electricity service voltage 120v. Connecting to the incorrect voltage may cause damage to the appliance and void the warranty.
5. Keep the appliance away from moisture to avoid electric shock. Do not submerge the appliance, plug or power cord in water or other liquids.
6. Do not leave this appliance unattended while in operation.
7. Never operate the steam mop without water. Never fill the water reservoir beyond the maximum filling amount.
8. Do not fill water tank with hot water, cleaning agent, scented perfumes, oils or any other chemicals. Doing so could destroy the appliance.
9. Unplug the power cord and allow the appliance to cool down completely before draining the water tank; changing the mop pad; and cleaning for storage.
10. Keep the appliance away from flammable materials. Do not use the appliance in rooms containing easily ignitable dust or poisonous and explosive fumes.
11. Inspect the appliance for damage every time before use. In case of defects or damage do not operate the appliance until it is serviced by a certified technician.
12. Unplug the appliance by grasping the plug from the wall outlet. Do not pull or tug on the power cord to unplug.
13. Using extension cord is not recommended to avoid hazards caused by overheating or overload.
14. Before using the appliance always check the mop pad for wear; do not use if it shows any signs of wear or damage -it may damage your flooring.
15. Use the appliance only when it is completely assembled and operational. Make sure mop pad is firmly attached and water reservoir is full.
16. Always test the appliance at a small, inconspicuous spot before cleaning. Do not place the appliance in the same spot for more than 10 seconds to avoid damage from heavy heating.
17. Never direct the steam mop at people, animal, plants or other sensitive objects.
18. Do not touch the bottom of the appliance during operation.
19. Do not tilt or turn the appliance over when in use. Only use on flat, horizontal surfaces.
20. Use only the accessories included and recommended by the manufacturer.
21. Never use the appliance without the mop pad.
22. Always work with sufficient lighting and do not use the appliance outdoors.
23. Store the appliance indoors in a cool, dry place.

COMPONENTS



Telescopic
Handle Pole



 
Quick Clamp for
Height Adjustment



Handle



Mop Head



Mop Pad



Measuring Cup



 
Carpet Glider



Cord Hooks



Main Body with
Water Reservoir

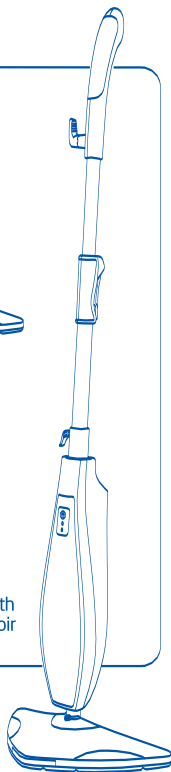


PRODUCT SPECIFICATION

Model	STM-402
Water Tank Capacity	410ML
Steam Ready Time	45 seconds
Input Voltage	120V ~/ 60Hz
Output Power	1100W

SETTING UP YOUR STEAM MOP


STEP 1

 Open the Quick Clamp and adjust handle to desire length.

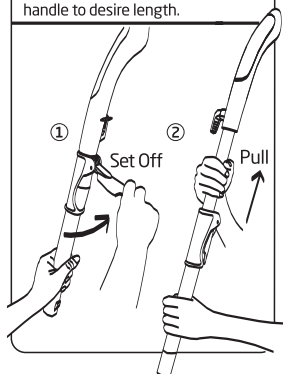


STEP 2

 Close the Quick Clamp to lock the handle length in place and insert the telescopic pole into the main body of the steam mop.

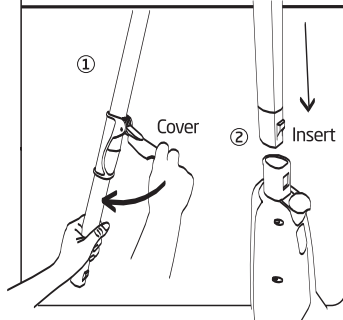


STEP 3

 Secure the Mop Pad to the bottom of the Mop Head firmly.

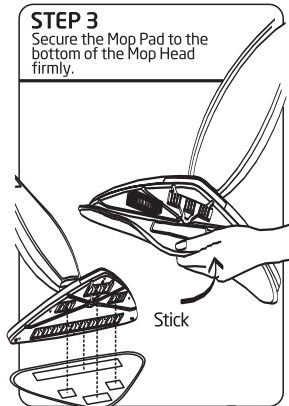

STEP 4

 
Open the cover to the water reservoir and fill with water. Do not overfill. Snap the cover back on before use.

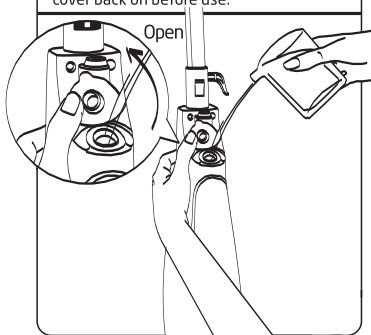

INSTRUCTIONS FOR USE


STEP 1

 Plug in steam mop and turn on by pressing Power Button. Select desire steam level.

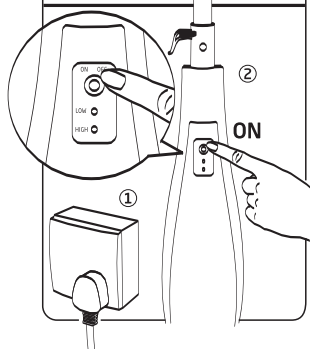

STEP 2

 Wait 45 seconds for steam ready time.

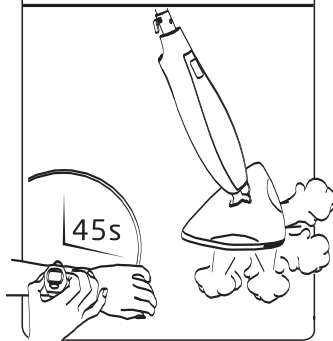

STEP 3

 
Steam mop is now ready for use. High temperature steam can kill up to 99.9% of germs and bacteria.



MAINTENANCE AND CLEANING


STEP 1

Turn power off and unplug the steam mop. Allow the steam mop to cool down completely (about 30 mins).

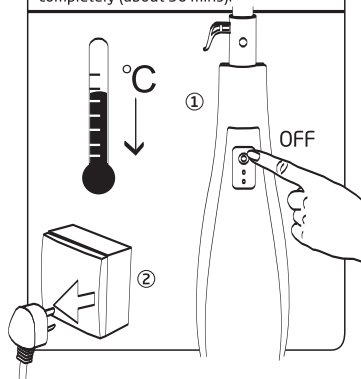


STEP 2

 Press release button to unlock the handle, pull out the handle before draining out the water.

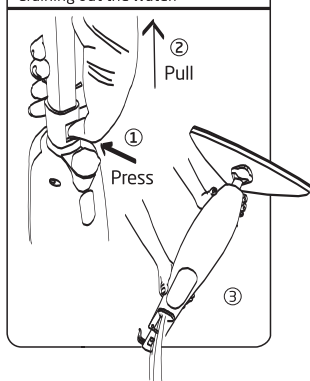


STEP 3

 Install the Telescopic Handle Pole to the main body. Wrap power cord around the cord hooks.

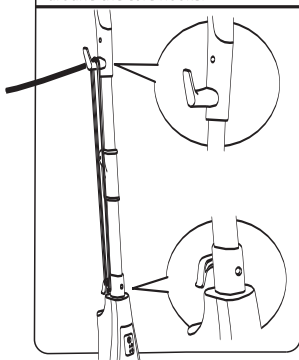


STEP 4


 
Remove the mop pad for cleaning.

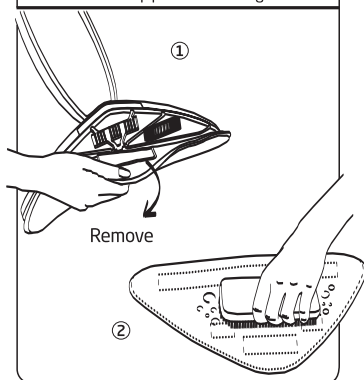


PRODUCT FEATURES

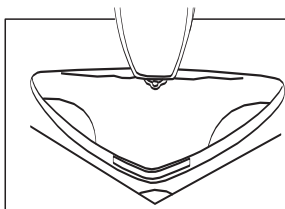 

  
Triangle mop head designed for cleaning corners.

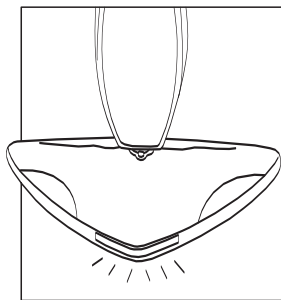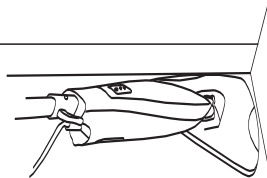


LED light for better visibility.

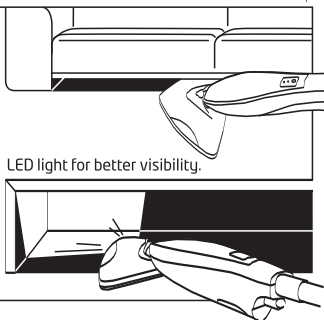 


Flexible for easy operation.

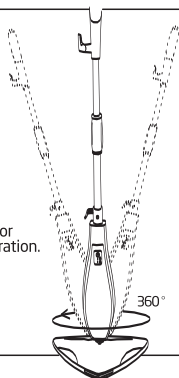 

 
Automatically turns to standby mode when the main body is placed vertically to the ground.

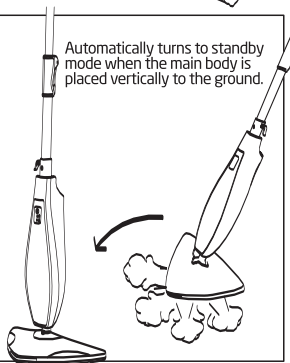



ACCESSORIES INSTRUCTION FOR USE

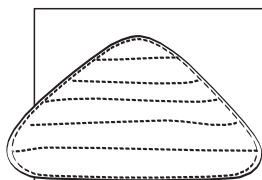 

   Attach the Mop Pad to the bottom of the Mop Head firmly.

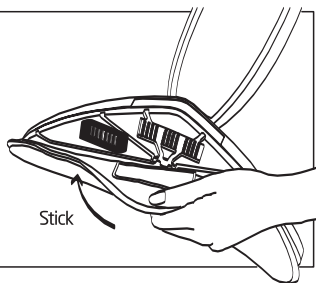

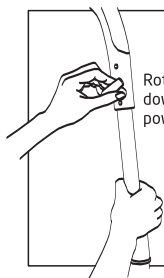 
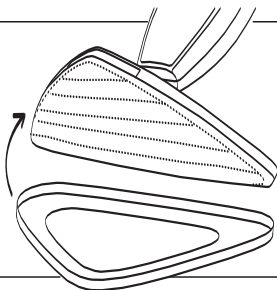 


 
 
 
 
 

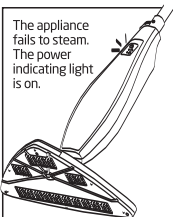 
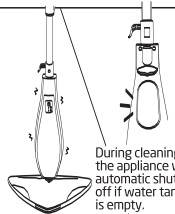 
For carpet cleaning, make sure the Mop Pad is firmly attached to the Mop Head and place mop on top of the Carpet Glider.



Rotate the Cord Hook down for quick release of power cord.

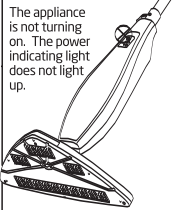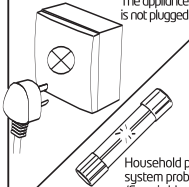

TROUBLE SHOOTING

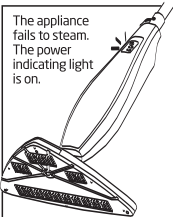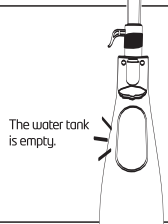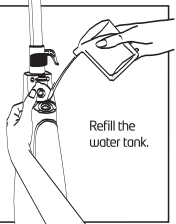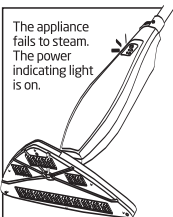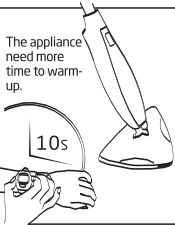Problems	Reason	Solution
<p>The appliance is not turning on. The power indicating light does not light up.</p> 	<p>The appliance is not plugged in.</p>  <p>Household power system problem / Fuse is blown.</p>	<p>Plug the power cord to the electrical outlet.</p>  <p>Check the power or ask a qualified electrician for help.</p> 
<p>The appliance fails to steam. The power indicating light is on.</p> 	<p>The water tank is empty.</p> 	<p>Refill the water tank.</p> 
<p>The appliance fails to steam. The power indicating light is on.</p> 	<p>The appliance need more time to warm-up.</p> <p>10s</p> 	<p>Wait 45 seconds to warm-up.</p> <p>45s</p> 
<p>The appliance fails to steam. The power indicating light is on.</p> 	<p>During cleaning, the appliance will automatic shut off if water tank is empty.</p> 	<p>Wait for the appliance to cool down and refill the water tank.</p> 