 


## USE AND CARE GUIDE

---

### DOWDEN BUFFET

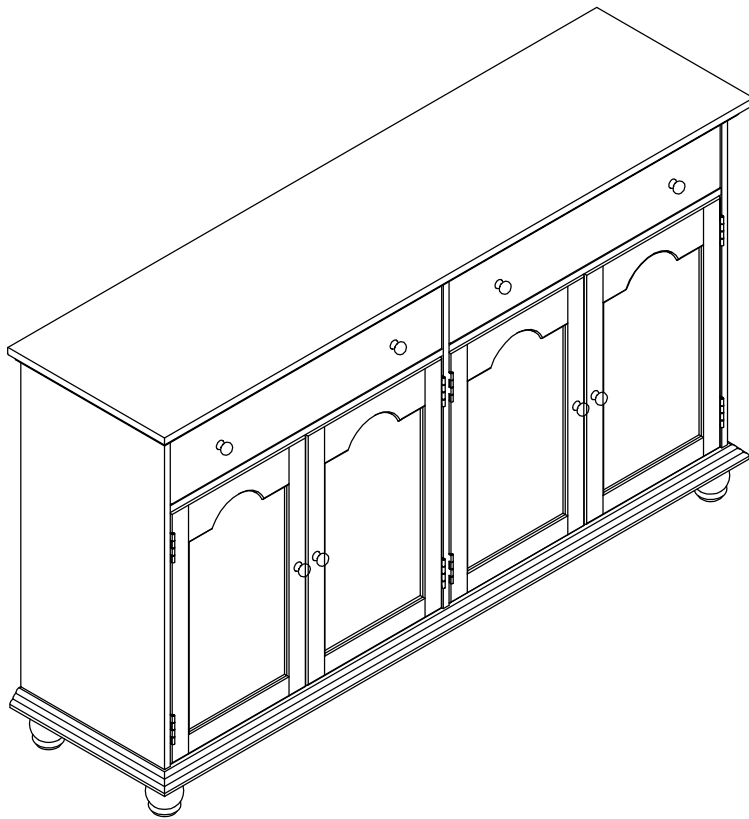

Questions, problems, missing parts?

Before returning to the store, call Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

**1-877-527-0313**

**HOMEDEPOT.COM**

---

THANK YOU

*We appreciate the trust and confidence you have placed in StyleWell through the purchase of this Dowden Buffet. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.*

*Thank you for choosing StyleWell !*

# Table of Contents

Table of Contents.....	2	Pre-assembly (continued).....	4
Safety Information.....	2	Package Contents.....	4
Warranty.....	2	Notification.....	5
Pre-assembly.....	3	Assembly.....	6-12
Planning Assembly.....	3	Maintenance.....	13
Tools Required.....	3	Care and Cleaning.....	13
Hardware Included .....	3	Troubleshooting.....	13

# Safety Information



## DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



## WARNING

- Read these instructions carefully and keep in a safe place.
- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.
- Do not stand, step or climb on unit.



## CAUTION

- Do not use power tools to assemble your item. Power tools may strip or damage parts/product.
- Do not over tighten connectors (screws, bolts, etc.) Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.
- Assembly requires 2 people; assembly alone may cause injury.

# Warranty

## 1 YEAR WARRANTY

### WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

### WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

# Pre-assembly

## PLANNING ASSEMBLY

Keep children and pets away from build area. Make sure your area is large enough to unpack, sort and assemble the unit.

## TOOLS REQUIRED



Small head  
Phillips  
screwdriver  
(Not Included)



Large head  
Phillips  
screwdriver  
(Not Included)

## HARDWARE INCLUDED



**NOTE:** Hardware not shown to actual size.



AA



BB



CC



DD



EE



FF



GG



HH



II



JJ



KK



LL



MM



NN



(1)X4



 
(2)X2



(3)X2



(4)X2



(5)X2


00

Part	Description	Quantity
AA	Big cam lock	24+2
BB	Big cam lock bolt	24+2
CC	Wood dowel	26+2
DD	Small cam lock	10
EE	Small cam lock bolt	10
FF	Long flat head screw(Ø3*30mm)	12+2
GG	Magnetic clamp	4
HH	Short flat head screw(Ø3*16mm)	8

Part	Description	Quantity
II	Round head screw	34+2
JJ	Round head bolt(Ø4*20mm)	4
KK	Round head bolt(Ø4*25mm)	4
LL	Handle	8
MM	Metal shelf support	8
NN	Short flat head screw(Ø3*12mm)	24+2
00	Anti-tipping hardware package	1

## Pre-assembly (continued)
 
### PACKAGE CONTENTS


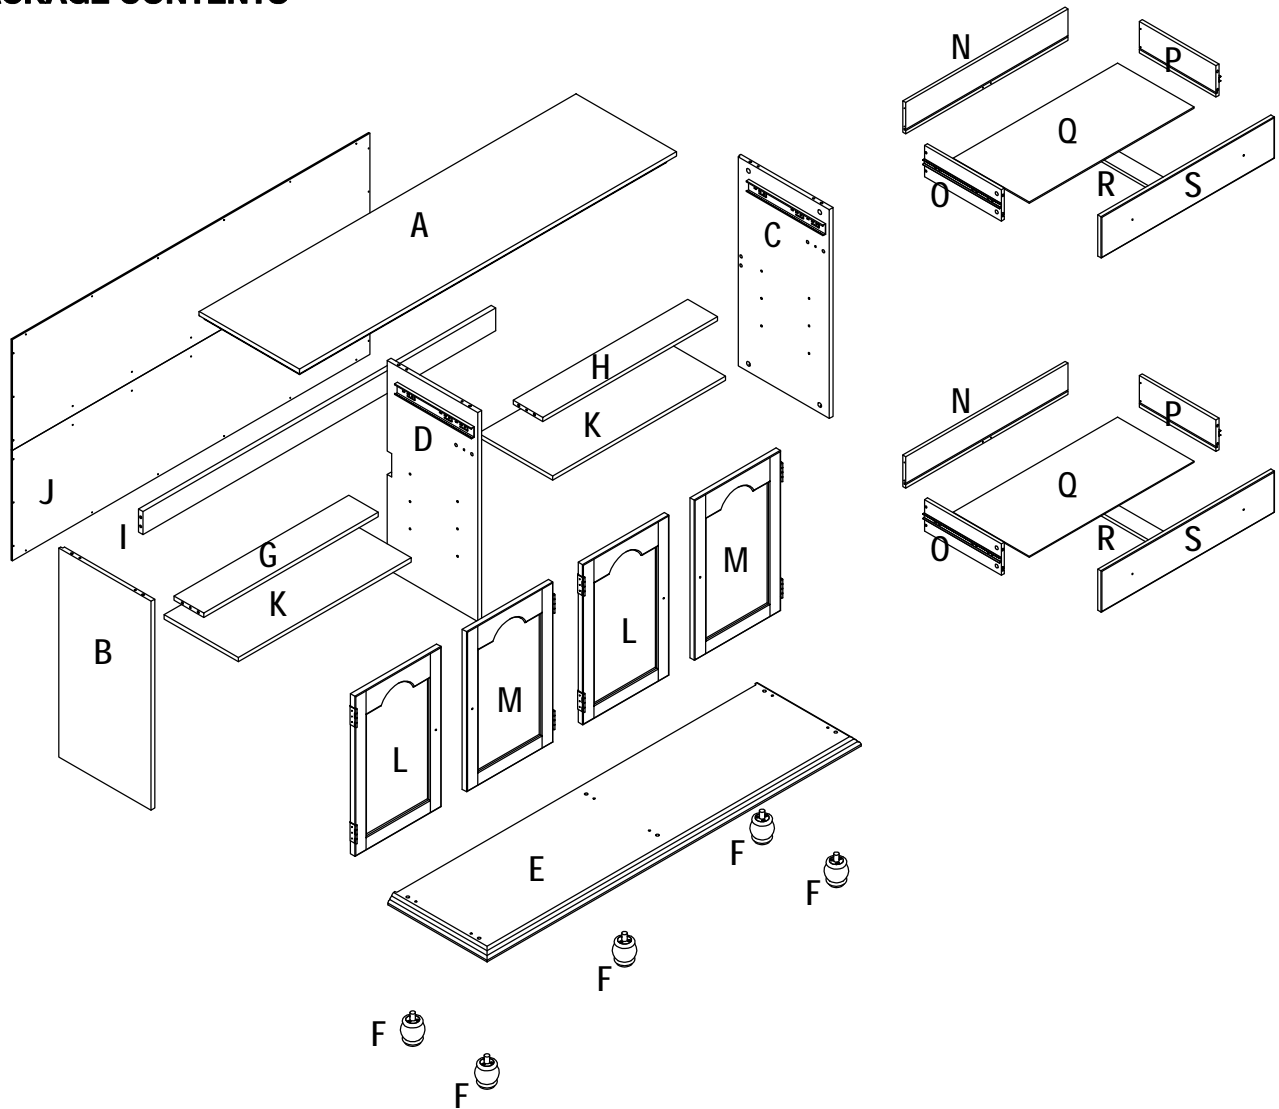


Part	Description	Quantity
A	Top panel	1
B	Left side panel	1
C	Right side panel	1
D	Middle vertical panel	1
E	Bottom panel	1
F	Foot	5
G	Horizontal support panel	1
H	Horizontal support panel	1
I	Back connecting panel	1
J	Back panel	1

Part	Description	Quantity
K	Shelf	2
L	Left door panel	2
M	Right door panel	2
N	Drawer back panel	2
O	Drawer left side panel	2
P	Drawer right side panel	2
Q	Drawer bottom panel	2
R	Strengthened panel	2
S	Drawer front panel	2




## Notification

  **NOTE: UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.**

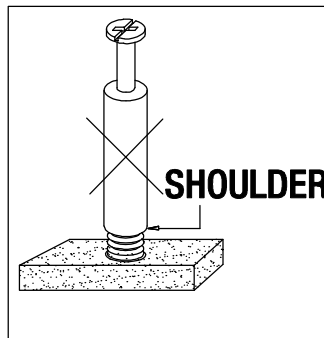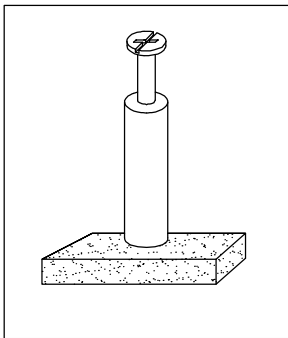

**NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.**
   
## HOW TO USE THE CAM TOOL

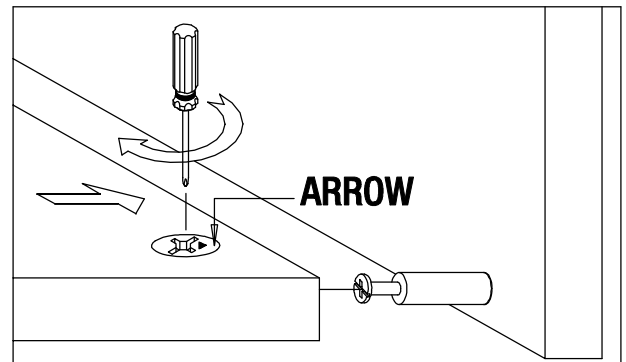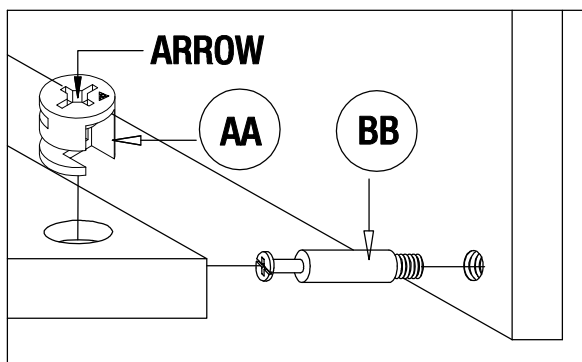


● **NOTE: THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.**


# Assembly
 
## 1 Assemble upper two drawers


- a) Insert wood dowels(CC) into panel(N), then assemble panels(N/O/P) by rotating the flat head screws(FF) as shown.

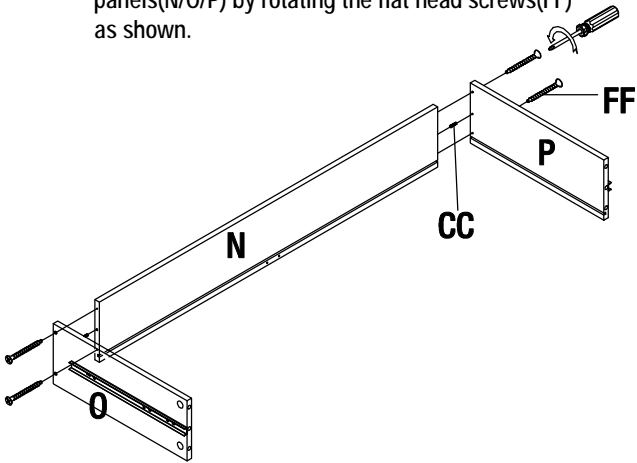

 
- b) Insert the panel (Q) into the slot correctly.

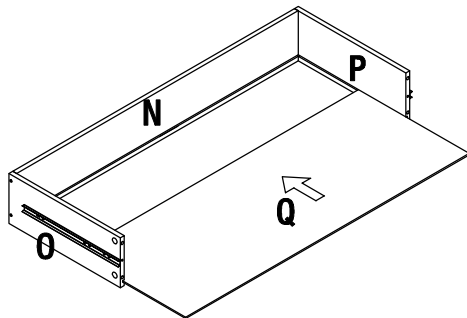

 
- c) Assemble panel (N) and panel (R) by rotating the flat head screws (FF).

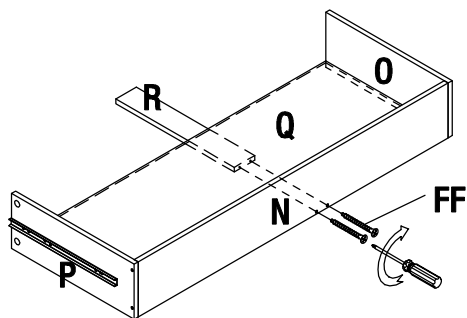

 
- d) Insert bolts (EE) into panel (S).

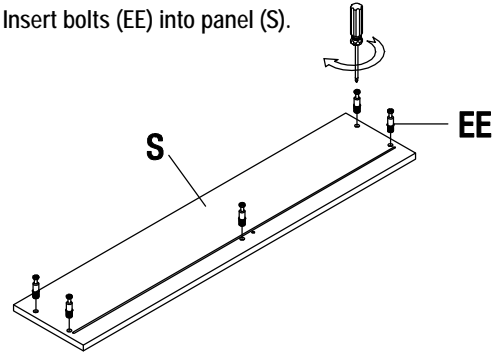

 - e) Insert wood dowel(CC) into panels(O/P/R), then rotate the cam locks(DD) tightly to assemble the drawer.

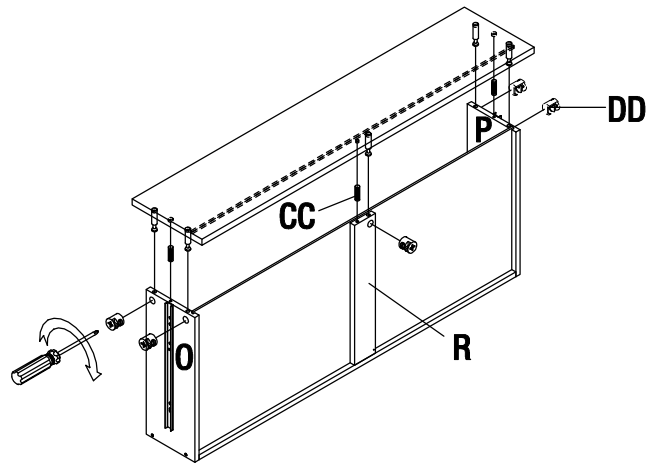

 - f) Assemble the handles (LL) by rotating round head bolts (JJ).

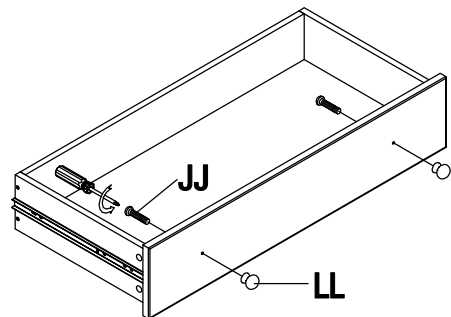

Wood dowel  
(CC)X10



Small cam lock  
(DD)X10



Small cam  
lock bolt  
(EE)X10



Flat  
head screw  
(FF)X12



 
Round  
head bolt  
(JJ)X4




Handle  
(LL)X4



Small head




Large head

 


# Assembly

## 2 Assemble side panels

 
- a) Install magnetic clamps (GG) with screws (HH) on panels (G/H) as shown, then screw bolts (BB) onto panels (B/C/D).

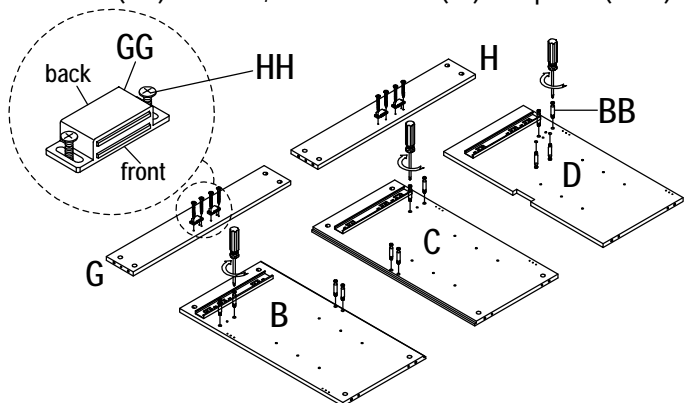

 
- b) Insert wood dowels (CC) into panel (G), then connect panels (G/I) with panels (B/D) as shown.

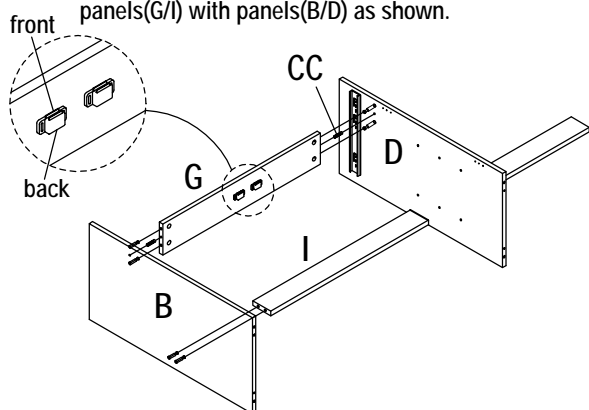

 
- c) Tighten panels (B/D/G) by rotating the cam locks (AA) as shown.

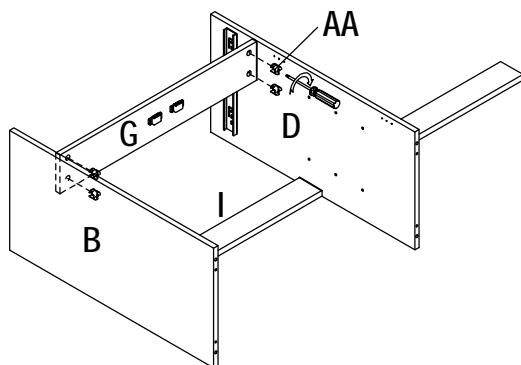

 
- d) Insert wood dowels (CC) into panel (H), then connect panels (H/I) with panels (C/D) as shown.

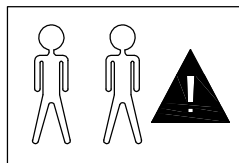

 
It takes 2 adults to safely assemble this step

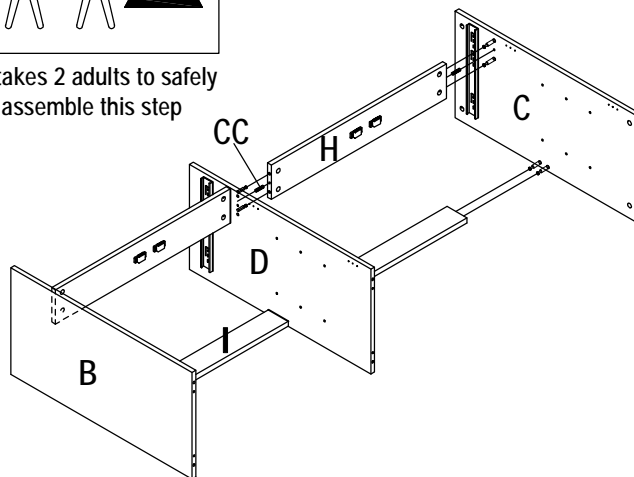

 - e) Tighten panels (C/D/H) by rotating the cam locks (AA) as shown.

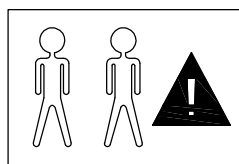

 It takes 2 adults to safely assemble this step

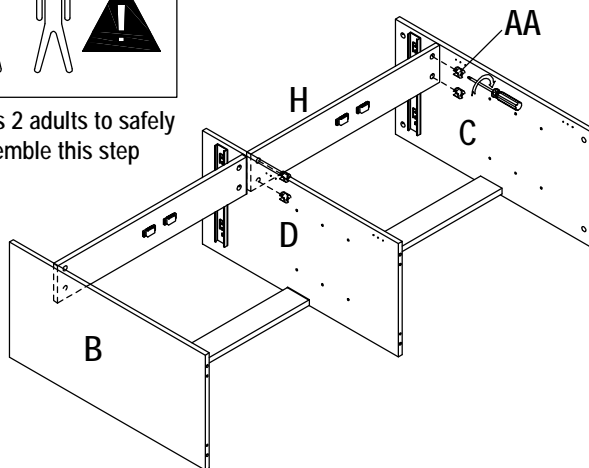

Big cam lock

(AA)x8



Big cam lock bolt

(BB)x12



Wood dowel

(CC)x4



Magnetic clamp

(GG)x4

 


Flat head screw


(HH)x8



Small head




Large head

 


# Assembly

## 3 Assemble bottom panel

 
- a) Install feet (F) to panel (E), then screw bolts (BB) to panel (E).

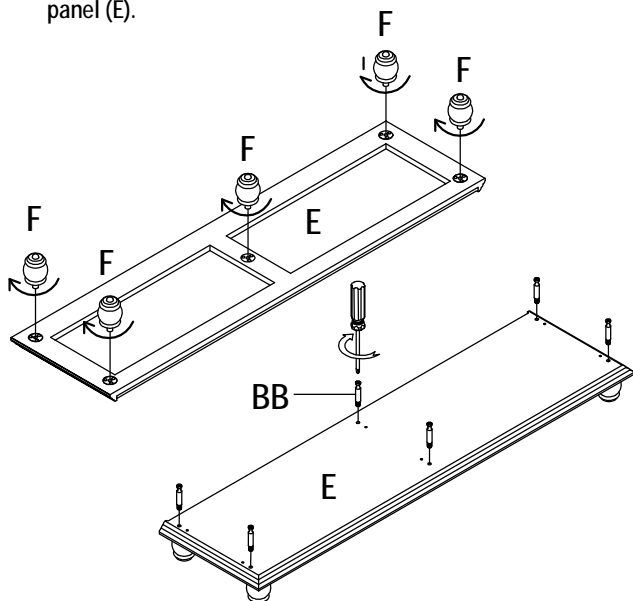

 
- b) Insert wood dowels (CC) into panel (E), then connect panel (E) with below parts as shown.

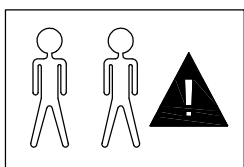

 
It takes 2 adults to safely assemble this step

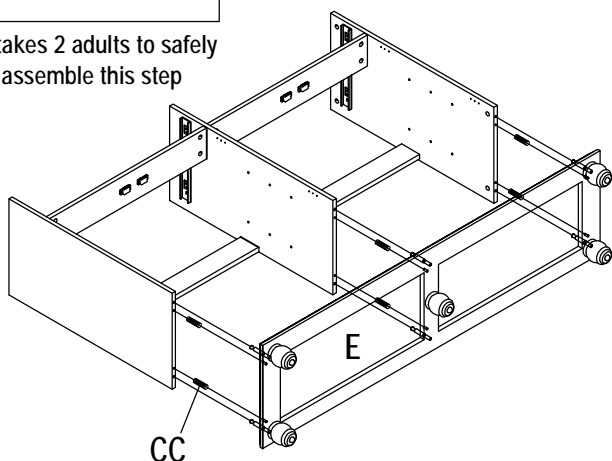

 
- c) Tighten cam locks (AA) to panel (E).

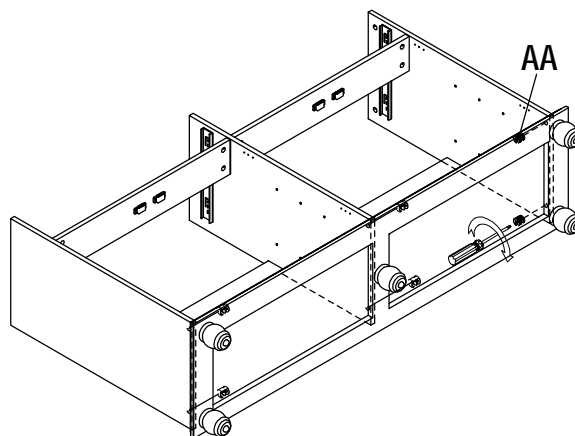

 - d) Tighten cam locks (AA) to panel (I).

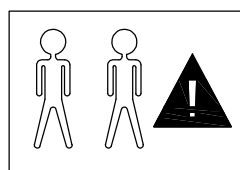

 It takes 2 adults to safely assemble this step

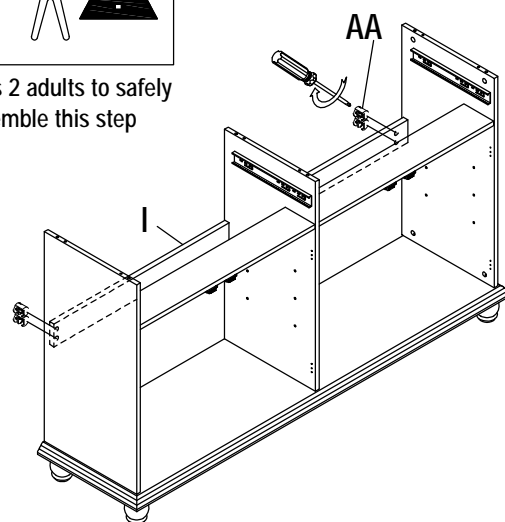

Big cam lock

(AA)X10



Big cam lock bolt

(BB)X6

 


Wood dowel


(CC)x6



Small head




Large head

 


# Assembly

## 4 Assemble top & back panels

 
- a) Screw bolts (BB) to panel (A).

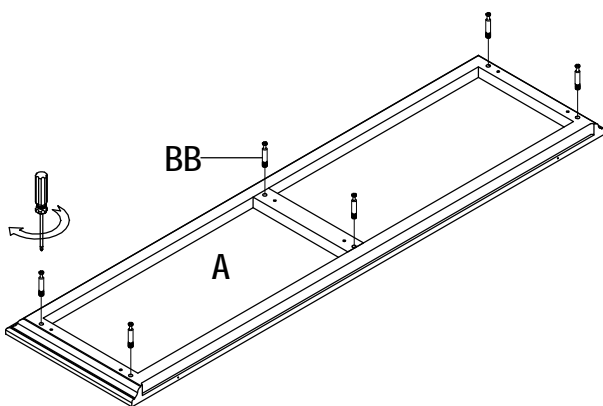

 
- b) Insert wood dowels (CC) into panels (B/C/D), then assemble panel (A) in alignment with the holes as shown.

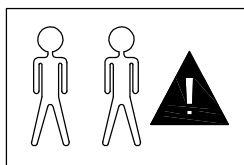


 
It takes 2 adults to safely assemble this step

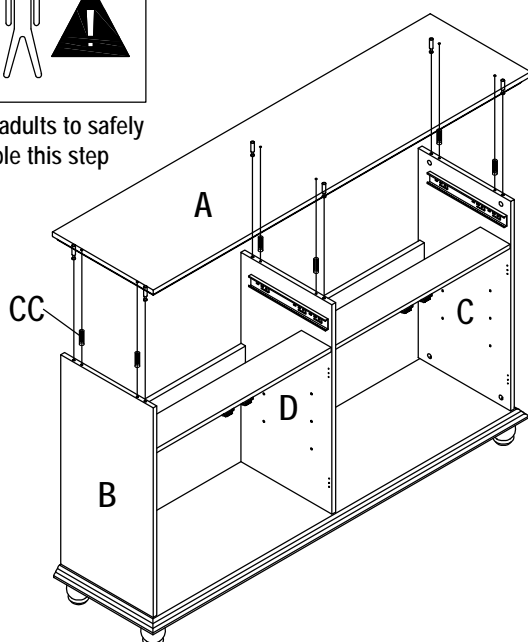

 
- c) Fix panel(A) with cam locks(AA) as shown.

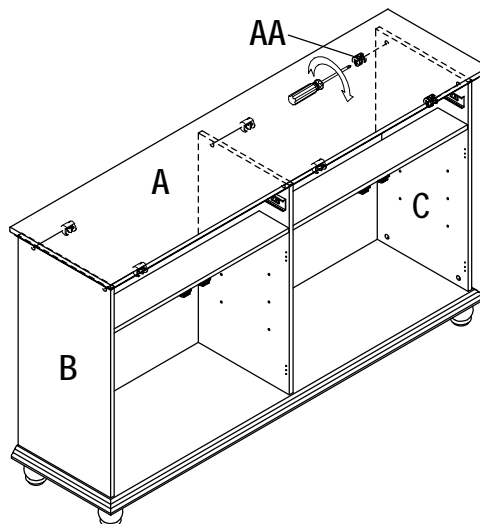

  - d) Open panel (J) first, then lock panel (J) through holes with screws (II).

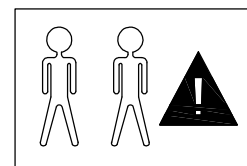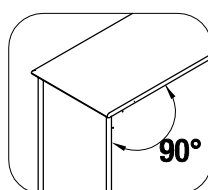

 It takes 2 adults to safely assemble this step

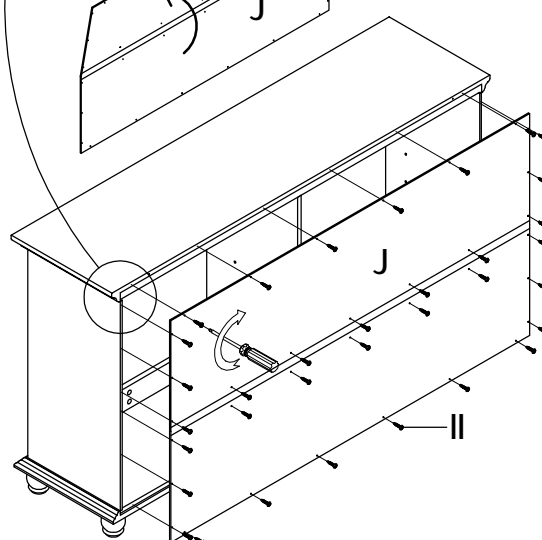


Big cam lock	Big cam lock bolt	Wood dowel	Round head screw	Small head	Large head
(AA)x6	(BB)x6	(CC)x6	(II)x34		


# Assembly
 
## 5 Insert the drawers


- Insert the drawer into the assembled body as shown.

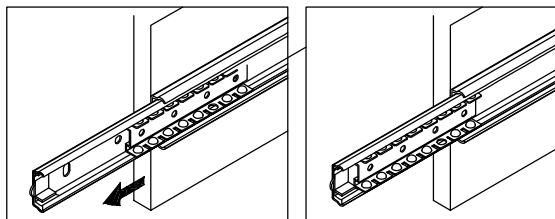

 
1. Pull out slide. Slide bearings forward.

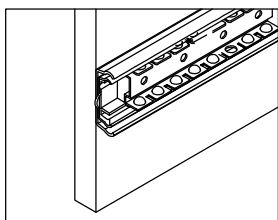

 
2. Pull slide back inside.  
Repeat for every slide!

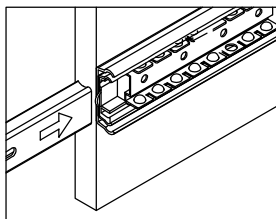

 
3. Insert into slide slot correctly,  
push the drawer into the  
body with even force.

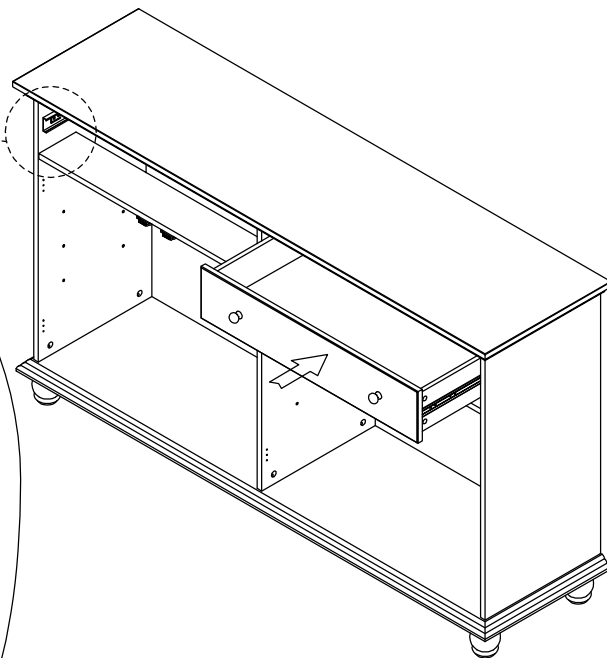

 **NOTE:** Make sure the slide piece is at the front end of the glide when installing the drawer into the body.

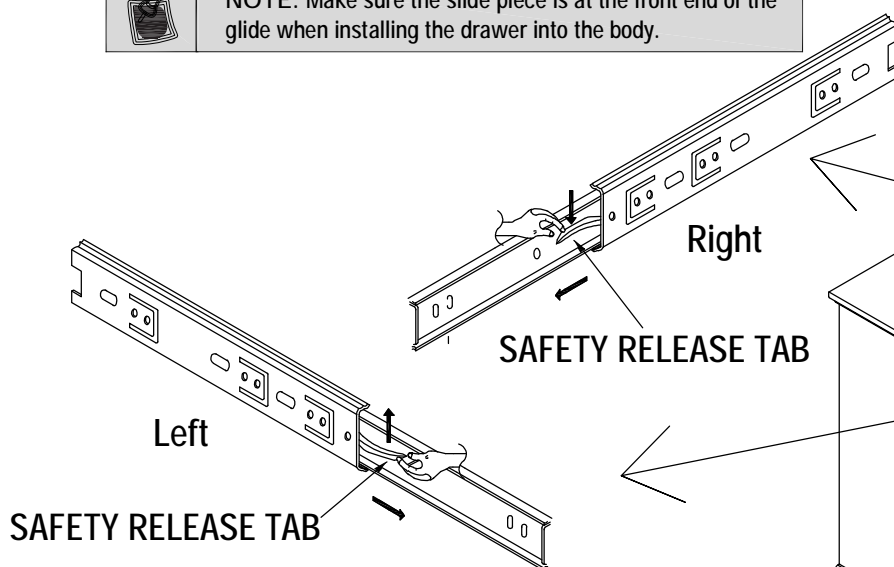

 
**NOTE:** When removing the drawer, tip up and press down the safety release tab to remove the drawer from the body.

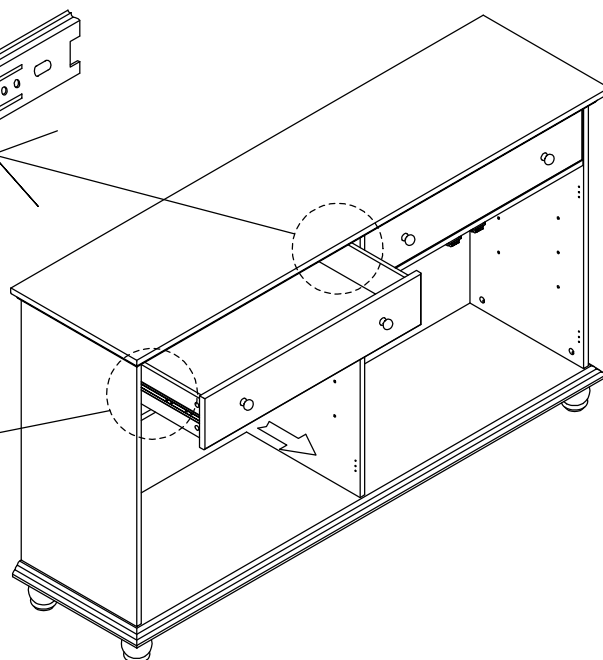


# Assembly

## 6 Assemble door & shelf panels

 
- a) Lock the door panels (L/M) to the panels as shown, then assemble the handles (LL) to the panels (L/M).

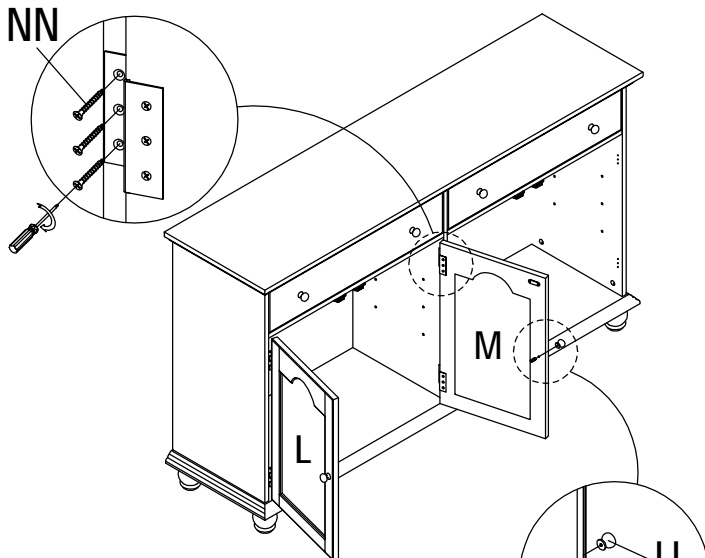

 
- b) Lock the door panels (L/M) to the panels as shown, then assemble the handles (LL) to the panels (L/M).

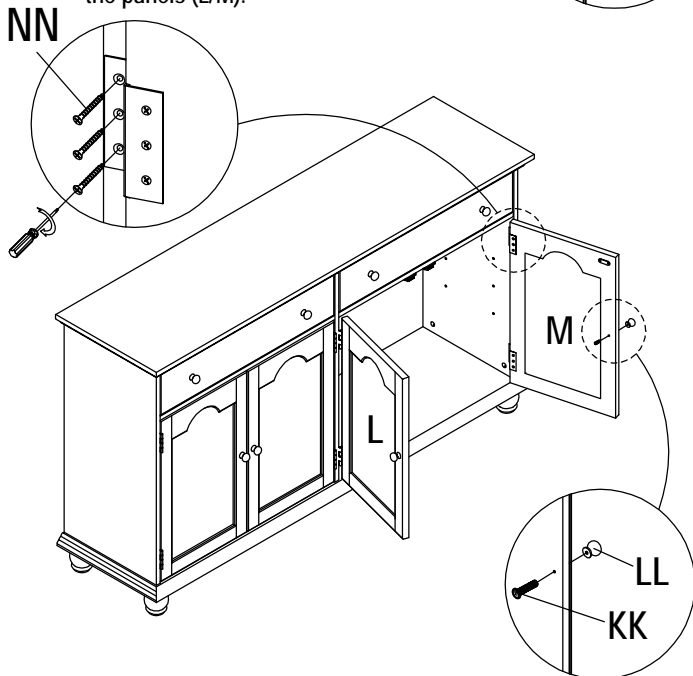

 - c) Place the right shelf (K) onto the shelf supports (MM).

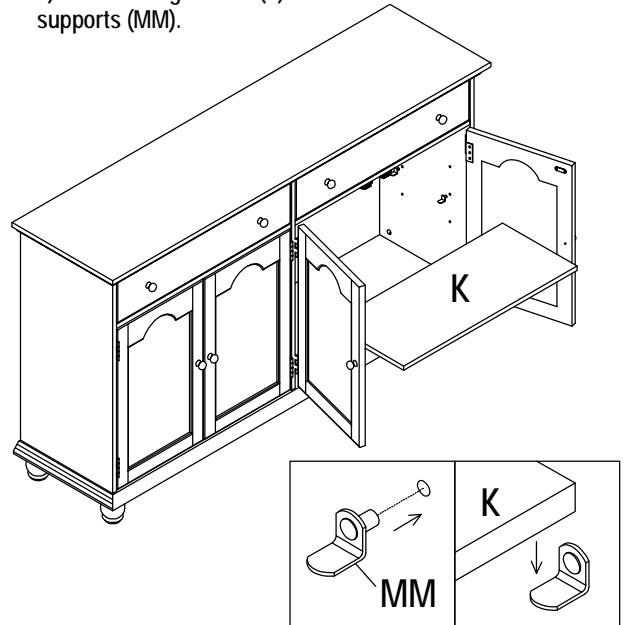

 - d) Place the left shelf (K) onto the shelf supports (MM).

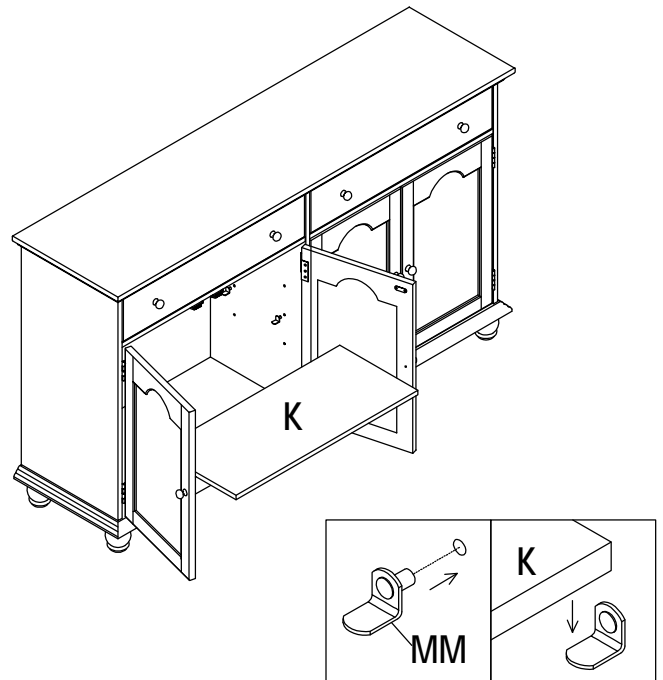

Round  
head bolt  
(KK)X4



Handle  
(LL)X4



 
Metal shelf support  
(MM)X8




Flat head screw  
(NN)X24



Small head




Large head

 

# Assembly


## 7 Adjust magnetic clamp or foot leveler and assemble Anti-tipping hardware package

 - a) Adjust magnetic clamp (GG) and foot leveler to the appropriate position.

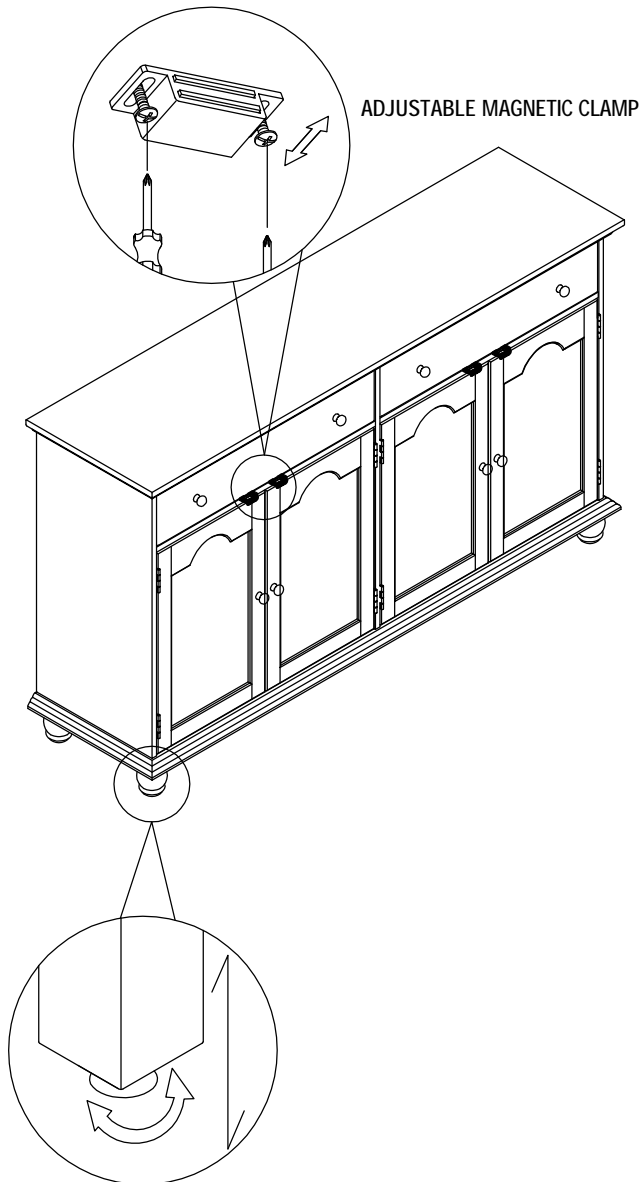

IF THE GROUND IS NOT EVEN ,THE SIDEBOARD WILL BE UNSTABLE OR THE DOORS UNSYMMETRICAL, YOU CAN ADJUST THE FOOT LEVELER UNDER THE LEG.TURN LEFT TO TIGHTEN,TURN RIGHT TO LOOSEN.

 - b) Lock the two hardware on the product and the other two hardware lock on the wall,then lock the product with a plastic strip.

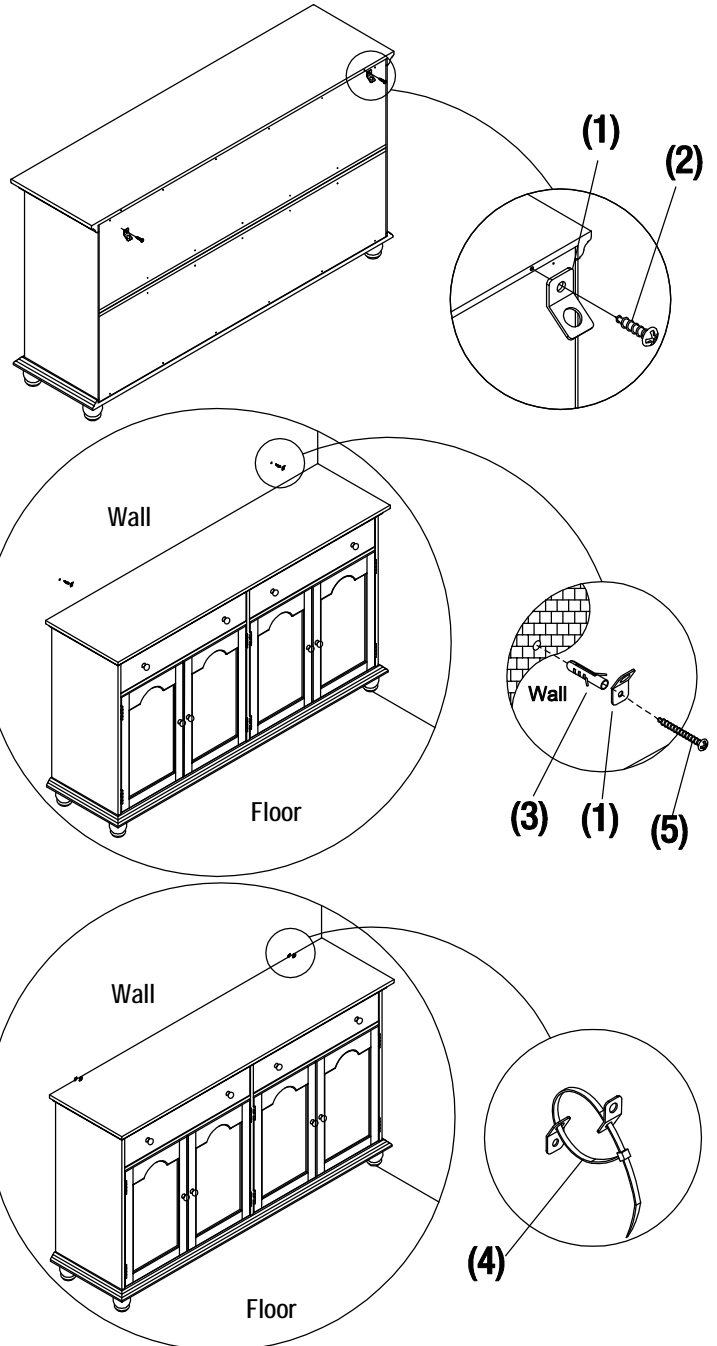

L shaped connector

(1)X4



0.63 in.Round head screw

(2)X2



Plastic anchor

(3)X2



Plastic strip

(4)X2



 
1.97 in.Round head screw

(5)X2



00

Small head



## Maintenance

- If your furniture is stained or otherwise damaged during use, contact a professional for repairs.

## Care and Cleaning

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes is not necessary. Should you choose to use polishes, test the polish in an inconspicuous area before using over the entire surface of the product.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently, avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Use care as stains or marks from crayons or ink markers will be difficult to remove.
- Be sure to immediately clean red wine or soda stains within 30 minutes or the surface will stain.

## Troubleshooting

PROBLEMS	SOLUTIONS
Not all of the product's legs touch the floor	Make sure adjustable center feet levelers are adjusted properly. The levelers are pre-assembled on the bottom of the legs.
	The product is KD construction. You may need to loosen the bolts and place the product on a flat surface. Ensure that the legs all touch the flat surface and then re-tighten the bolts.
	Loosen all the bolts and apply some weight to the product to get all the feet to touch the floor. Then re-tighten the bolts in that position.
Panel can not be assembled	Make sure panel is on right direction.
Door can not be closed or without magnetic	Adjust the magnetic clamp, make sure it is assembled on appropriate position.
Doors are not flat	Adjust hinges on the appropriate position.
Glide can not be assembled	Make sure the slide piece is at the front end of the glide when installing the drawer into the body.
Drawer can not be removed	When removing the drawer, tip up and press down the safety release tab to remove the drawer from the body.
Drawers cannot pull in or pull out smoothly	Refer assembly instruction details to assemble drawers, and pull in and pull out drawers several times gently.

# StyleWell.™

Questions, problems, missing parts?

Before returning to the store, call Customer Service.

8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.