



# INFLATABLE INSTRUCTIONS

## Safety Information

### IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed, including the following:

### READ AND FOLLOW ALL SAFETY INSTRUCTIONS.

**CAUTION:** Do not attempt to inflate this unit during unusually strong winds. If it becomes too windy for safe operation, allow the unit to deflate and wait for safer conditions.

**WARNING:** ELECTRIC PRODUCT. Keep away for children. Not recommended for children under 3 years of age. As with all electrical products, precautions should be observed during handling and use to reduce the risk of electric shock. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

- a. This is an electrical product - not a toy! To avoid risk of fire, burns, personal injury, and electric shock, it should not be played with or placed where small children can reach it.
- b. Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- c. **Adults Note:** Periodically examine this product for damage to the cord, housing or other parts that may result in the risk of fire, electric shock or injury. If the product is damaged, do not use it.
- d. **DANGER** – To prevent electric shock, do not immerse in water; wipe clean with damp cloth. Immersing this product can result in an electric shock.
- e. This product is not intended for permanent installation or use.
- f. Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- g. Do not secure product wiring with staples or nails or place on sharp hooks or nails.
- h. Do not let lamps rest on the supply cord or on any wire.
- i. Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- j. Do not use this product for other than its intended purpose.
- k. Do not hang ornaments or other objects from cord, wire, or light string.
- l. Do not close doors or windows on the product, or extension cords, as this may damage the wire insulation.
- m. Do not cover the product with a cloth, paper, or any material not part of the product when in use.
- n. Do not place the product against carpeting, furniture, or any other fabric when in use.
- o. Read and follow all instructions that are on the product or provided with the product.

### SAVE THESE INSTRUCTIONS USE AND CARE INSTRUCTIONS

1. When the product is placed on a live tree, the tree should be well maintained and fresh. Do not place on live trees in which the needles are brown or break off easily. Keep the tree holder filled with water.
2. If the product is placed on a tree, the tree should be well secured and stable.
3. Before using and reusing, inspect the product carefully. Discard any products that have cut, damaged or frayed wire insulation cords, cracks, lamp holders or enclosures, loose connections, or exposed copper wire.
4. When storing the product, carefully remove the product from wherever it is placed, including trees, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.

5. When not in use, store neatly in a cool, dry location protected from sunlight.

### To reduce the risk of fire and electric shock:

1. Do not install on trees having needles, leaves or branch coverings of metal or materials which look like metal, and.
2. Do not mount or support wires in a manner that can cut or damage wire insulation.

### WARNING

Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.

For indoor and outdoor use.

This item is not a toy.

For decorative purposes only.

## Installation

### Preparing for Installation

- Step 1. Remove contents from packaging.
- Step 2. Remove all plastic fasteners and tags. These are part of the packaging and should be discarded.
- Step 3. Connect adapter into connection of fan

## Pre-Operation

**This power unit is intended to be correctly orientated in a vertical or floor mount position.**

When using electrical products, basic precautions should always be practiced including the following:

- a. **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- b. Read and follow all instructions that are on the product or provided with the product.
- c. For a cord-connected or direct plug-in power unit, do not use an extension cord.
- d. Reference the National Electrical Code, ANSI/NFPA 70, specifically for the installation of wiring and clearances from power and lighting conductors.
- e. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- f. Do not install or use within 10 feet of a pool.
- g. Do not use in a bathroom

**WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with completely closing the receptacle cover.

**WARNING: Risk of Fire.** Installation involves special wiring methods to run wiring through a building structure. Consult a qualified electrician.

If the connector of this driver does not properly fit into the connector of the lighting string, do not modify the product and discard product if the connector is damaged.

**WARNING:** Not for use with receptacles that are weatherproof only when the receptacle is covered (attachment plug cap not inserted and receptacle cover closed).

### SAVE THESE INSTRUCTIONS

- This manual contains important safety and operating instructions for power units.

## Package Contents

Part	Description	Quantity
A	Airblown® Inflatable	1
B	Tethers	2
C	Stakes	4
D	UL - listed Power supply	1


### POWER SUPPLY:

Input: 120-150VAC ~50/60Hz 0.4A


Output: DC 12V = 1.0A




## Operation

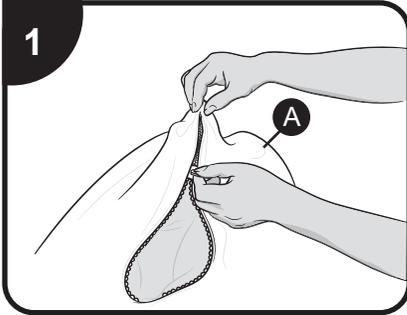


Ensure that the air intake on the inflatable (A) unit is clear of fabric and other obstructions and that the zipper is fully closed. Some inflatables have more than one zipper.

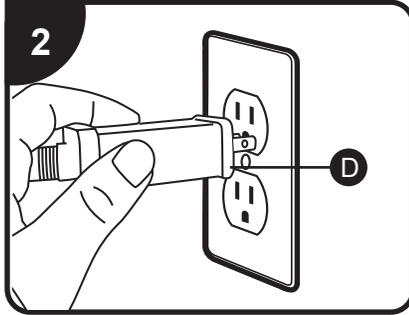


Connect UL- Listed power supply (D) into connection of fan, plug power supply into standard wall outlet .

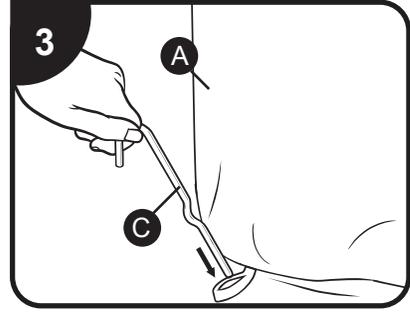


Using the loops attached at the bottom of the Inflatable unit (A), insert stakes (C) into the ground. Adjust weight-bag at the base to position your Inflatable as desired.

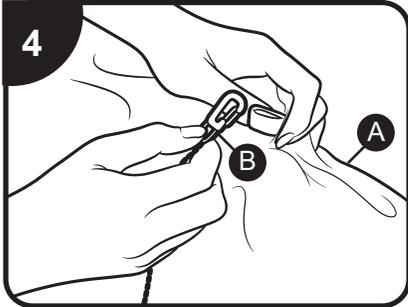


Once fully inflated, clip the nylon tethers (B) to each of the attached nylon loops on the side of the inflatable (A).

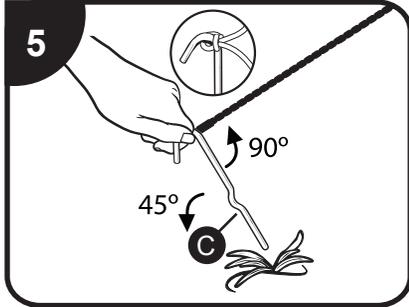

Drive the stakes (C) into ground at a 45-degree angle.

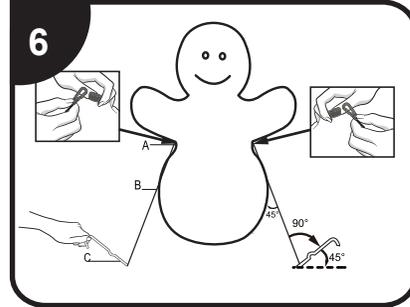

For maximum stability, bring tether down to a 45-degree angle from the inflatable as shown in the illustration. In order to achieve this you may need to wrap the excess tether around the top of the stake.

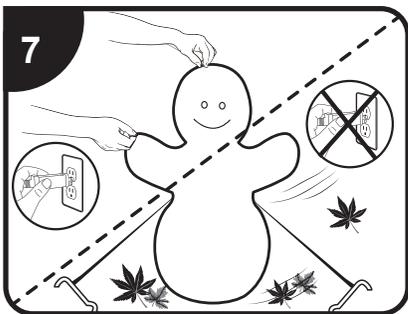

### Do's and Don'ts

1. Do check your Airblown daily and adjust to stand up straight.
2. Do not attempt to operate your Airblown in unusually strong winds.(see caution)
3. Do not unplug by pulling on cord. For faster deflation, unzip zipper after unplugging power supply.

## Operation (continued)

**NOTE:** To deflate, unplug the unit. For faster deflation, unzip the zipper on the unit after you unplug it. For indoor and outdoor use.

**WARNING:** This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CAUTION:

1. For temporary (90 days max) installation and use only.
2. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify wiring or product.
3. Do not place near standing areas of water, such as ponds and pools.
4. To reduce the likelihood of excessive heat and possible damage, use only decorative lamp accessories packaged with this product or marked for use with this product.
5. To reduce the risk of fire and electric shock, use only the power supply Model MTR-17130 manufactured by (QY) that was provided with this product

## Care and Cleaning

- a. Wipe the unit with a damp cloth and allow the unit to dry before storing. If necessary, you can use a mild detergent.
- b. Store the product neatly in a cool, dry location protected from sunlight.
- c. Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product conductors, connections, and wires.

## Troubleshooting

**Problem: The unit is not inflating.**

- a. Ensure that the zipper on the unit is completely closed.
- b. The power source is disabled or the cord may be unplugged.
- c. Something may be blocking the fan's air intake.

**Problem: The unit is torn.**

- a. You can hand sew tears with any type of thread or use clear packing tape to cover the tear.

**Problem: There is a delay after plugging in the adapter.**

- a. This is a protective feature built in to these adapters to protect your electrical circuit and the product. A 2-3 seconds start-up delay is normal.

**NOTE:** ONCE FAN IS UNPLUGGED AND STOPS BLOWING, YOUR Airblown® Inflatable WILL DEFLATE.

The lights within Airblown® are powered by LED lights which are designed to operate longer than traditional bulbs, These LED lights are not replaceable.

**Model #:** 227142 227169

MADE IN CHINA  
PRINTED IN CHINA

DISTRIBUTED BY:  
HOME DEPOT  
2455 PACES FERRY RD., N.W.  
ATLANTA, GA 30339  
FOR ASSISTANCE, CALL:  
1-877-527-0313  
HOMEACCENTSHOLIDAY.COM