 
 
 

 
 

 
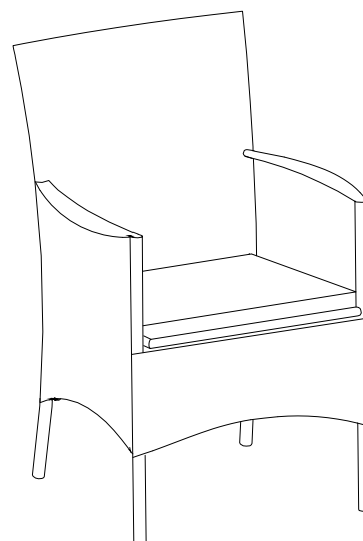 


F10L741

 
 
Chair (DO THIS FOUR TIMES) Carton 2/3 3/3

Item No.	Reference Image	Description	Qty.
A		Right Arm Rest	1
B		Left Arm Rest	1
C		Seat Back	1
D		Front Legs	1
E		Seat Base	1
F		Seat Cushion	1
G	 M6*35	M6 x 35 Socket Head Cap Screw w/ Washer	6
H		4-mm Allen Key	1

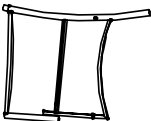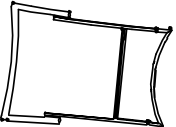

1

Put the seat back(C) on the floor and connect it with the right & left armrest (A & B), then connect front legs (D) with the armrest (A & B). Please refer to the drawing details below:

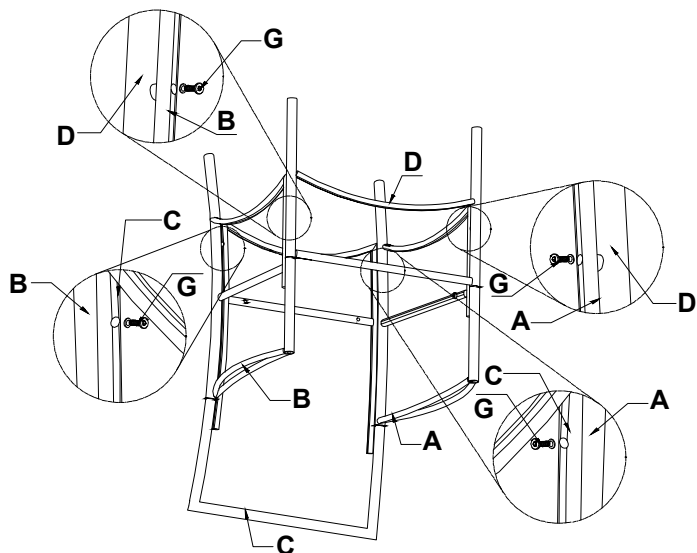 
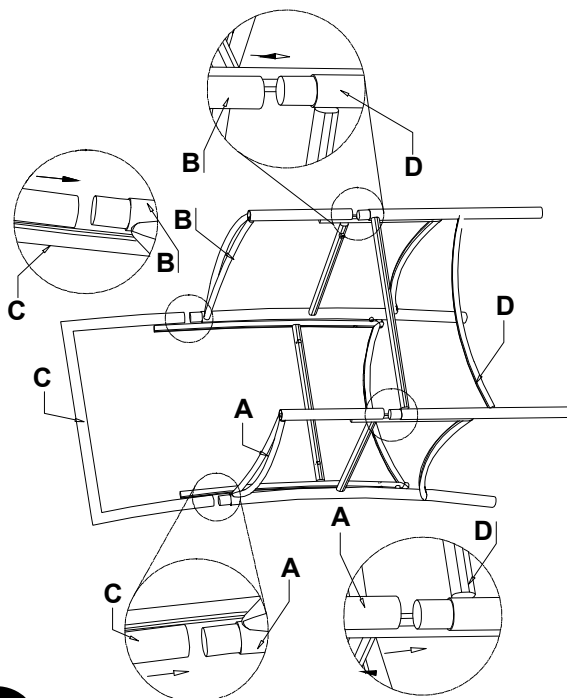 


2

Put the chair upside down, then secure the assembly using M6 x 35 socket head cap screws with washers (G). Do this in four places.

F10L741**Chair (DO THIS FOUR TIMES) Carton 2/3 3/3****3**

 
 


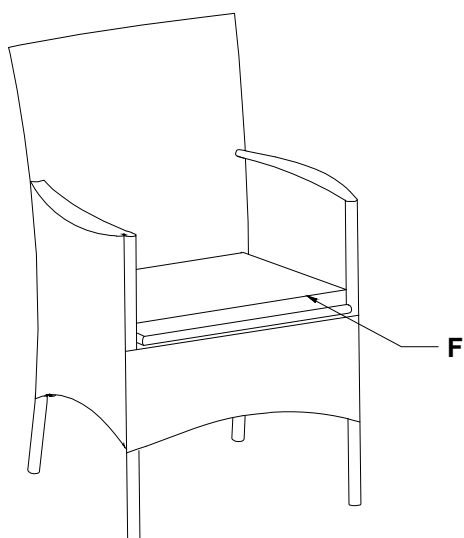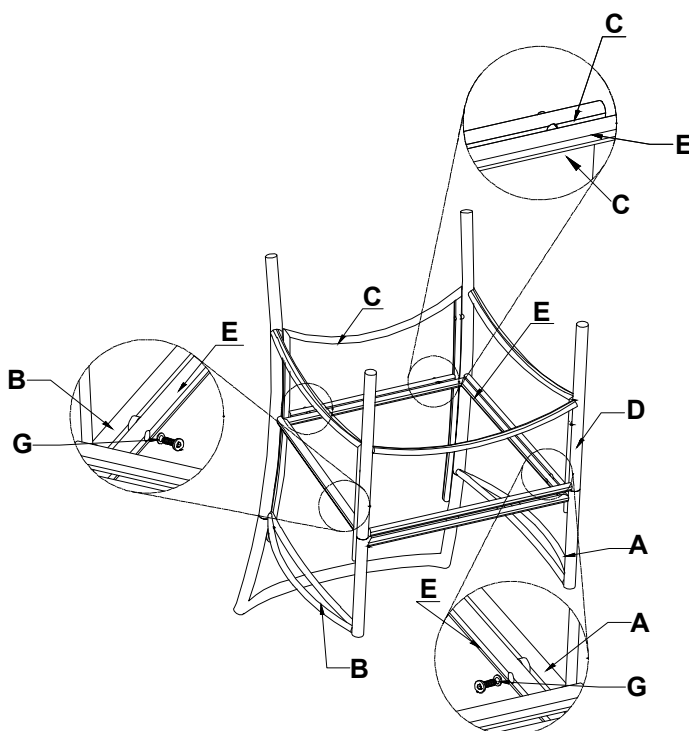

With the chair still upside down, slide the seat base (E) into the two holes of the seat back (C). Secure the front of the seat base (E) using M6 x 35 socket head cap screws with washers (H). Do this in two places.

 
**4**

Flip the chair back to normal and then place the seat cushion (F) on it.

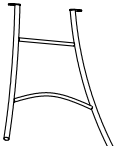 
Tips: Do not tighten all screws fully before the chair is well assembled.

F10L741**Dining table****CARTON 1/3**

 
Item no.	Reference Image	Description	Qty.
A		Table Base	1
B		Legs	2
C		Legs Support	2
D		Glass Top	1
E		M6 x 15 Socket Head Cap Screw w/ Washer	12
F		4-mm Allen Key	1

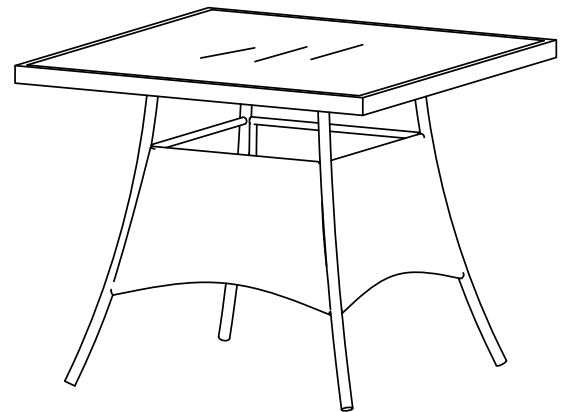**1**

Put the table base (A) upside down. Fix the legs (B) on to the table base (A) by using M6 x 28 socket head cap screws and washers (E). Do this in four places.

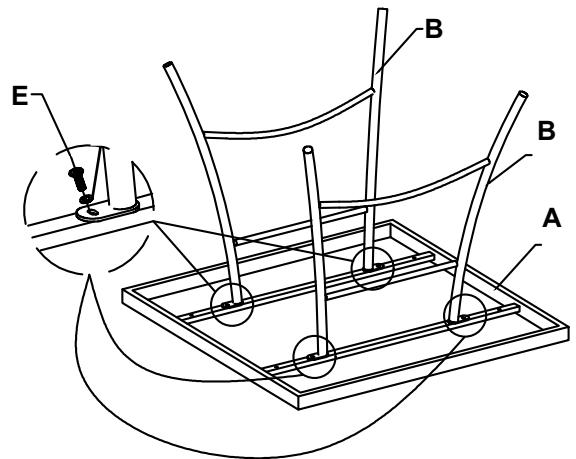**2**

Fix the legs supports (C) to the legs (B) by using M6 x 15 socket head cap screws and washers (E). Do this in eight places.

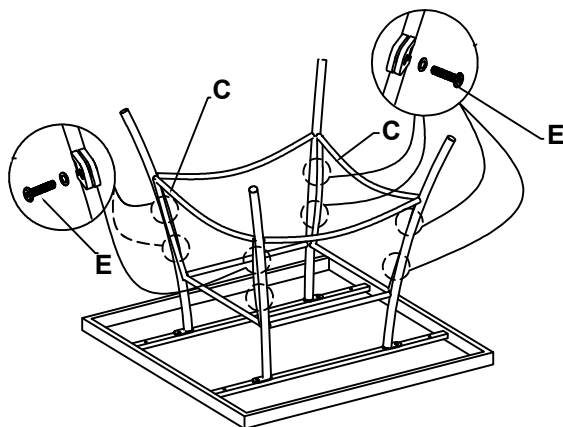**3**

Flip the assembly back to normal and then place the glass top (D) on it.

