

# QuickStart Guide for Projector HSC720



## For USB & DVD

1. Remove Projector & contents from box
  2. Plug power cord into the back of the projector.
  3. Insert (2) AAA batteries into the remote control (not included)
  4. **If using DVD:** Connect your DVD player to projector using an Audio-Visual cable. (not included) Plug cable into video output jack (AV) on the back of the projector.
  5. Plug Projector into wall outlet & a **Red Light** will appear on the back of the projector
  6. Press **Power Button**  on the remote. A **Green Light** will appear on the back of projector.
  7. The Home screen will appear, use the Focus Ring on top of the projector to focus the image, using the remote, toggle over to the "AV" icon and press "OK" button on remote.
  8. Now use the controls on your DVD player to play the video.
1. **If using a USB stick:** Insert USB stick into the appropriate port on the back of the projector.
  2. Select "MOVIE" from the home screen menu and press "OK" button on the remote.
  3. Next screen: Select the "C" drive icon and press "OK" button on the remote.
  4. On the following screen select which video you want to play and press the "OK" button on the remote.
  5. After the selected video plays, the next video will start playing automatically.
  6. If you want to have all the videos to constantly repeat, while video is playing press the "OK" button and select "Repeat" and press "OK" twice. Then press the down arrow button to remove the menu.
  7. You can use the "-" "+" button on the remote to raise or lower the sound volume on the projector.