

# REPAIR KITS

KIT	KIT NUMBER	PART NUMBER	PART DESCRIPTION	QTY
CC-4222LS FRAME KIT	6004133	6003989	CENTER HOPPER FRAME	2
		6000285	BOTTOM HOPPER FRAME	2
		6000284	TOP HOPPER FRAME	2
PINION BEARING KIT	6000828	307022	BEARING ASSEMBLY	2
		6000731	RIGHT PINON ASSEMBLY	1
		6000730	LEFT PINION ASSEMBLY	1
BAG ASSEMBLY HARDWARE	307133	3000820	CLEVIS PIN, 1/4" X 1-1/4"	2
		307083	HAIRPIN COTTER	6
		3000818	CLEVIS PIN, 1/4" X 1/2"	2
		3000720	3/8" USS FLAT WASHER	2
		3000823	QUICK RELEASE PIN	2
		307082	HITCH PIN	1
		CONNECTING TUBE KIT	6004135	307034
1" SNAP BUTTON KIT	6004136	6000222	1" SNAP BUTTON	4
3/4" SNAP BUTTON KIT	6004137	6000208	3/4" SNAP BUTTON	4
DUST COVER KIT	6004138	6000539	DUST COVER	2
42" BRUSH KIT	6004139	307321	42" SWEEPER BRUSH	2
WHEEL BUSHING KIT	6004141	6000540	WHEEL BUSHING	4
TENSION TUBE KIT	6004001	6004001	TENSION TUBE ASSEMBLY	
CC-4222LS HOOD KIT	6004143	6003945-Y	SWEEPER HOUSING	1
		6003948	WHEEL ASSEMBLY	1
		4075502	LOCKING BRACKET	2
		307321	42" SWEEPER BRUSH	2

## Customer Service 1-800-652-2321

1. A description of the issue you are having
2. Photos of the issue that include an overall view and detailed view from multiple angles
3. If applicable, a short video showing the issue

**If you believe this is a warranty related issue please see the warranty page in this manual**

### Replacement Parts:

**If you are ordering replacement part(s) for your product, please note that some parts are only available as a repair kit. You can reach our Customer Service Department at 1-800-652-2321**

1. First locate the part on the Exploded View page (page 11 & 12)
2. Take note of the part number
3. If the part number is on the Repair Kits page, use the kit number to order your replacement parts
4. If the part number is not on the Repair Kits page, use the part number to order your replacement part