


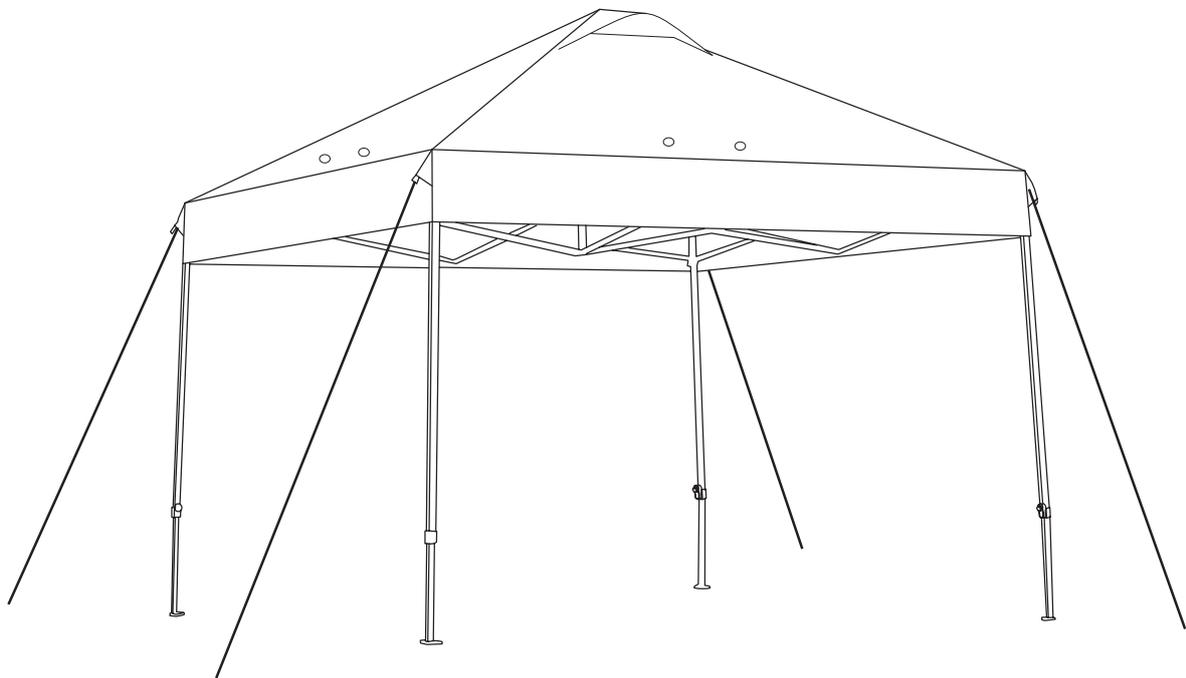

Clia 100 10 ft. x 10 ft. Canopy



ATTENTION!

IMPORTANT: READ THIS INFORMATION BEFORE PROCEEDING!
To avoid damage to your frame, please read the enclosed instruction carefully before setting up your canopy.



Use and Care Guide

Model #NS CLIA 100-G
NS CLIA 100-R
NS CLIA 100-B

10 ft. x 10 ft. Clia Canopy

 
EVERBILT



PACKAGE CONTENTS



A - Large canopy x1



B - Canopy frame x1



C - Stake x8



D - Allen key
(for maintenance only) x1




E - Wheeled storage bag
x1

Setting Up the Canopy


1 OPENING THE CANOPY FRAME

- With two persons on the diagonal ends, lift and partially pull the canopy frame apart.

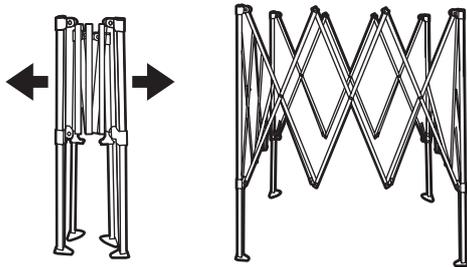


2 ATTACHING THE LARGE CANOPY

- Unfold the canopy and place on top of the canopy frame.
- Secure the canopy top to the corners of the canopy frame using the Velcro connections.

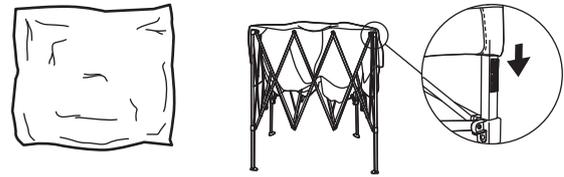

3 LOCKING THE FRAME

- Under the canopy, place one hand on the upper frame and use the other hand to push the central hub straight up until it clicks into the central pole.
- Finish attaching the canopy top inside the canopy frame using the Velcro loops.

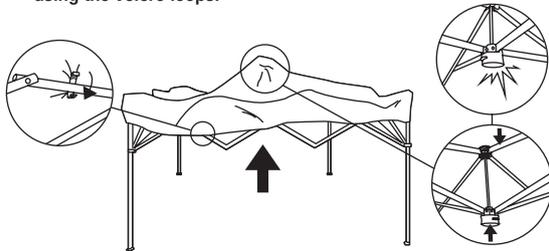


4 ADJUSTING THE CANOPY HEIGHT

- Press the red button on each leg and raise or lower to adjust the canopy height.



5 SECURING THE CANOPY IN PLACE


- Insert a stake into the foot of each canopy leg.
- Measure out each leg to a proper distance and secure four stakes to the ground. Attach the ropes to the canopy top and tie the attached ropes to the stakes in the ground. Ensure the ropes have the proper tension by adjusting the plastic adjusters on the ropes.

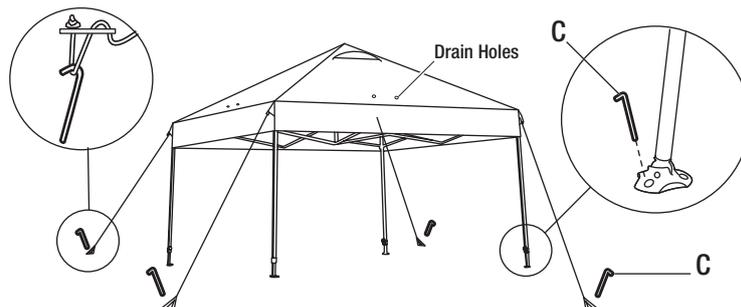

Taking Down the Canopy


1 REMOVING THE STAKES AND RETRACTING THE LEGS

- Pull up all stakes from the ground.
- Press the push button on each leg and retract the legs to their original height.

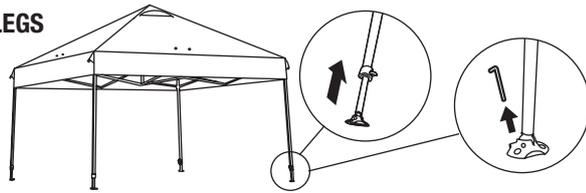


2 UNLOCKING THE CANOPY

- Go under the canopy, press the red lock button. Pull down the central hub until it is separated from the central pole.

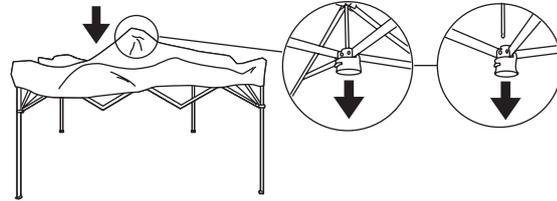


3 FOLDING THE FRAME

- Lift one leg of the frame until the two neighbouring legs are raised off the ground. Push inward until the frame is fully closed.

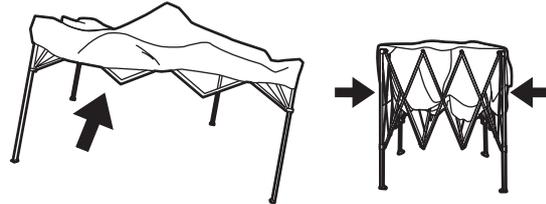

4 PACKING THE CANOPY IN THE STORAGE BAG

- With the canopy feet facing the rollers, slide the wheeled storage bag over the closed canopy frame.
- Close the zipper on the wheeled storage bag.

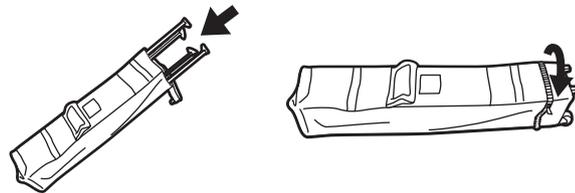

Safety Information

Please read and save these instructions before attempting to set up this tent.



WARNING: KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.

This tent meets the flammability requirements of CPAI-84. The fabric may burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.



CAUTION: Take care not to pinch your fingers in the frame during set up and take down.



CAUTION: Never set up or continue to use in any rain, wind, or storm conditions, especially lightning storms. Damage can occur to the tent and put you and others in potential danger.



CAUTION: Avoid setting up the tent on steep inclines.



CAUTION: Do not use this tent for permanent shelter. It is designed for temporary use only.



CAUTION: Never leave the tent unattended.

Care and Maintenance

- Hand wash the canopy using only mild soap and water. Never use harsh detergents, abrasives, or bleach.
- Do not machine wash.
- Never fold or store the canopy when it is wet or damp. Allow it to dry completely to avoid mildew.

Warranty

The manufacturer warrants for a period of 1 year from the original date of purchase, this product against any defects in materials or workmanship. At its discretion, the manufacturer may provide replacement parts to the original purchaser. Original receipt or proof of purchase as well as proof of defect is required. The manufacturer will not be responsible for shipping costs incurred outside the continental USA. Warranty is valid for the original purchaser 1 year from the date of purchase and is not transferable. This warranty does not cover any product purchased through non-authorized dealers and/or online auction websites.



WHAT IS NOT COVERED

This 1 Year Limited Warranty does not cover normal wear and tear, abuse or misuse of this product including damage from inclement weather conditions, such as wind, rain, or hail. In case of inclement weather, remove all valuables and persons and seek appropriate shelter. Under no circumstances will the manufacturer be liable or responsible for any incidental or consequential damages. This product is designed and intended for recreational use only. Prolonged exposure to UV rays will cause any fabric to fade and deteriorate and is NOT covered by this 1 Year Limited Warranty. All replacement products or parts will assume the remaining warranty of the original product. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

Contact the Customer Service Team at 1-800-305-1726 or visit HOMEDEPOT.com.

Spare Parts

To inquire about replacement parts, please call toll free 1-888-502-9589, Monday - Friday, 9:00 AM - 4:00 PM PST; or email to Care@OutdoorDesignz.com

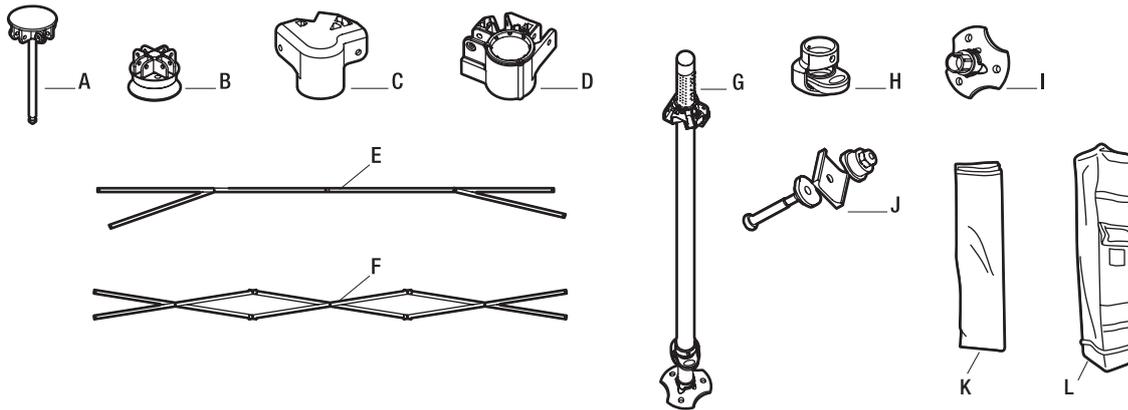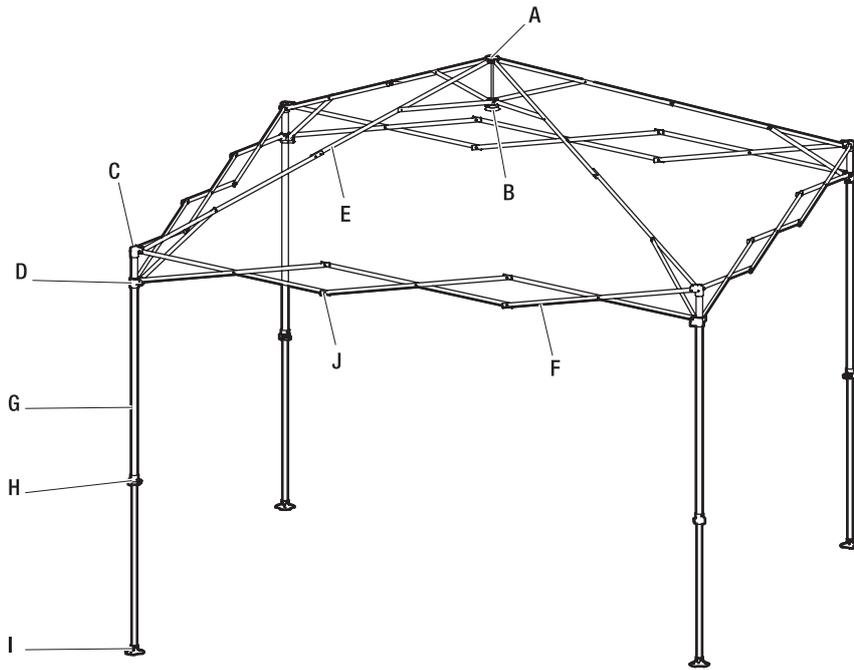

Part	Description	Reference Number
A	Central Pole	SP025
B	Central Bottom Hub	SP026
C	Top Cap	SP027
D	Slider	SP028
E	Ceiling Assembly	SP029
F	Eave Assembly	SP030
G	Leg Assembly	SP280
H	Leg Extend	SP032
I	Plastic Foot	SP277
J	Bolt Kit	SP034
K	Canopy Top	Red: SP159 True Blue: SP160 Grey: SP161
L	Wheeled Storage Bag	SP041