

Popcorn Machine Use and Care Manual

1. Important Safety Information

Read All Instructions: Before using your popcorn machine, read all instructions and follow them carefully.

Electrical Safety: Ensure the machine is plugged into a grounded electrical outlet that matches the power requirements.

Hot Surfaces: The popcorn machine gets very hot during use. Avoid touching hot surfaces, especially the heating elements or popping chamber.

Child Safety: Keep the machine out of reach of children. Never allow children to operate the popcorn machine without supervision.

Unplug After Use: Always unplug the machine when not in use, before cleaning, or when assembling/removing parts.

2. Instructions

Unboxing the Machine:

Carefully remove the popcorn machine from the box.

Check all parts to ensure nothing is damaged or missing.

Place the machine on a stable, heat-resistant surface in a well-ventilated area.

Parts and Features:

Heating Element: The main heat source for popping kernels.

Popping Chamber: Where the kernels pop and are collected.

Oil Drip Tray: Collects excess oil.

Popcorn Container: Holds the popped popcorn.

Power Switch: Turns the machine on/off.

Measuring Spoon/Cup: Helps add the correct amount of oil and kernels.

3. Cleaning and Maintenance

Daily Cleaning

Turn Off and Unplug: Always turn off the popcorn machine and unplug it before cleaning.

Wipe Down the Exterior: Use a soft, damp cloth to wipe the outside of the machine. Avoid using abrasive cleaners.

Clean the Popping Chamber: After the machine cools down, wipe the popping chamber with a dry cloth to remove any residual oil or kernels.

Clean Removable Parts: Wash the popcorn container, oil drip tray, and measuring spoon with warm, soapy water. Dry thoroughly before reassembling.

Periodic Maintenance

Check for Oil Residue: Every few uses, check the heating elements and the popping chamber for any excess oil or residue buildup. Clean as needed to ensure efficient popping.

Inspect Power Cord and Plug: Regularly check the power cord for wear and tear. If you notice any damage, do not use the machine and contact customer support for a replacement.

4. Popcorn Not Popping Completely

Cause: Overcrowding of kernels, old or damp kernels, or incorrect oil levels.

Solution: Use fresh kernels and ensure you're using the right oil-to-kernel ratio. Avoid overloading the machine.

Strange Noises

Cause: Obstructions in the popping chamber or the motor.

Solution: Unplug the machine, allow it to cool, and inspect the chamber for any debris. Clean if necessary.

5. Storage Instructions

Cool Down: Allow the machine to cool down completely before storing it.

Empty the Oil and Kernels: Ensure there are no leftover kernels or oil in the machine. Dispose of any remaining oil properly.

Store in a Dry Place: Keep the machine in a dry, cool location when not in use. Avoid storing it in high humidity areas.

Cover the Machine: If possible, store the machine in a protective cover to prevent dust buildup.

6. Warranty Information:

This popcorn machine comes with a 90 Days limited warranty against manufacturing defects.

Customer Support:

If you have any issues with your popcorn machine, please contact our customer service team:

Email: kathrinschomin@outlook.com

Thank you for choosing our Popcorn Machine!

Enjoy freshly popped popcorn with every use!