

USE AND CARE GUIDE

MULTI-LINKABLE SOLAR BLUETOOTH

ROCK SPEAKER



Questions, problems, missing parts? Before returning to the store,
call Customer Service

8 a.m. - 6 p.m., EST, Monday-Friday

1-830-249-1200

CustomerService@Creative-prc.us

Retain this manual for future use

Safety Information



WARNING: Your solar speaker may not function in temperatures below -4°F (-20°C) or above 140°F (60°C).



WARNING: Do not submerge the solar speaker in liquids or use the product in the vicinity of standing water.

Warranty

ONE YEAR LIMITED WARRANTY

WHAT IS COVERED

The manufacturer warrants this product to be free of defects in material and workmanship for a period of one (1) year from the date of purchase. This warranty only applies to the original consumer purchaser and only to products used in normal use and service. The manufacturer's only obligation and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modification, alternation, neglect, or mishandling. Proof of purchase and evidence of manufacturer's date coding must accompany all warranty claims. Manufacturer's date coding is printed and adhered to each product.

WHAT IS NOT COVERED

This warranty does not apply to products that are found to have been improperly installed, set-up, or used in any way not in accordance with the instructions supplied with the product. This warranty does not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, or faulty installation. Batteries supplied with this product are not included in this warranty. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. This warranty does not cover consequential or incidental loss or damage, including but not limited to any labor/expense costs involved in the replacement or repair of the product.

Contact the Customer Service Team at 1-830-249-1200 or CustomerService@Creative-prc.us.

Package Contents

- Solar Bluetooth Rock Speaker (1PC)
- USB Charging Cable (1PC)
- Remote Controller (1PC)

Battery Charging

Charging the Speaker with USB Cable

- Plug the small end of the provided Micro USB Charging Cable into the Micro USB port at the back of the speaker.
- Connect the larger end of the Micro USB Charging Cable into your computer or other USB charging device. Recommended charge time with USB cable is about 5-6 hours. When the Speaker is charging, the charging LED indicator on the right of the control box will light up RED, after the rechargeable battery is fully charged, the RED LED indicator light will turn to GREEN.
- Remove the Micro USB Charging Cable from the speaker after the charging is completed.

Charging the Speaker with Solar Panel

- Allow the solar speaker to receive four full days of sunlight to fully charge the battery prior to first use.
- Locate the solar speaker in an area that will receive the maximum amount of sunlight during the daylight hours. Position the solar panel of the speaker to receive at least 3-4 hours of direct sunlight daily



NOTE: The solar panel should be cleaned periodically with a damp cloth to help maintain optimum performance. Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Operation

1 Setting Up and Operating One Speaker

- Every speaker is preset to “OFF” position. To Turn on the speaker, toggle the S-OFF-M (Satellite-OFF-Main) switch built on the control box at the back of the speaker to “M” position.
- It makes an ascending “Do-Re-Mi” sound, and the Bluetooth LED indicator light on the control box will flash BLUE and GREEN in alternation. The speaker is now in discovery mode and is discoverable by your personal Bluetooth-enabled music device.
- Follow the instructions on your personal music device to set it to discovery mode, connect it to the Bluetooth name “creative”. When the speaker is successfully paired with your personal music device, a “Di” tone will be heard and the Bluetooth LED indicator light will flash BLUE and WHITE in alternation.
- Open your media player and press PLAY. Once playback begins, you can control the music and volume from either your connected device or the provided remote controller. NOTE: Every speaker includes a matching remote controller, this remote controller had been already paired with your speaker packed in the same box.
- The speaker will automatically turn off after 30 minutes if there is no Bluetooth signal detected and connected. You can also press the “OFF” button of the remote controller to turn off the speaker.
- To Listen to music again, press the “ON” button of the remote controller to automatically enter pairing mode, and reconnect to your Bluetooth-enabled device. Or toggle the “S-OFF-M” switch from “M” to “OFF” position and then toggle back to “M” position, to automatically enter pairing mode, and reconnect to your Bluetooth-enabled device.




NOTE: If you would like to pair the speaker to another device, you must unpair the speaker from the currently paired device first. On your device's Bluetooth settings, select “creative”, then select unpair. When the speaker has been unpaired, it automatically goes into pairing mode again



NOTE: The Bluetooth pairing distance is about 30 ft., so keep the speaker within 30 ft. clear distance of your personal Bluetooth-enabled music device.



NOTE: The speaker is built with timer control, press “1H” or “2H” or “4H” button on the provided remote controller during music PLAYBACK mode, the speaker will automatically turn off in 1 hours or 2 hours or 4 hours respectively. If without pressing the timer buttons, the speaker will automatically turn off in 6 hours.

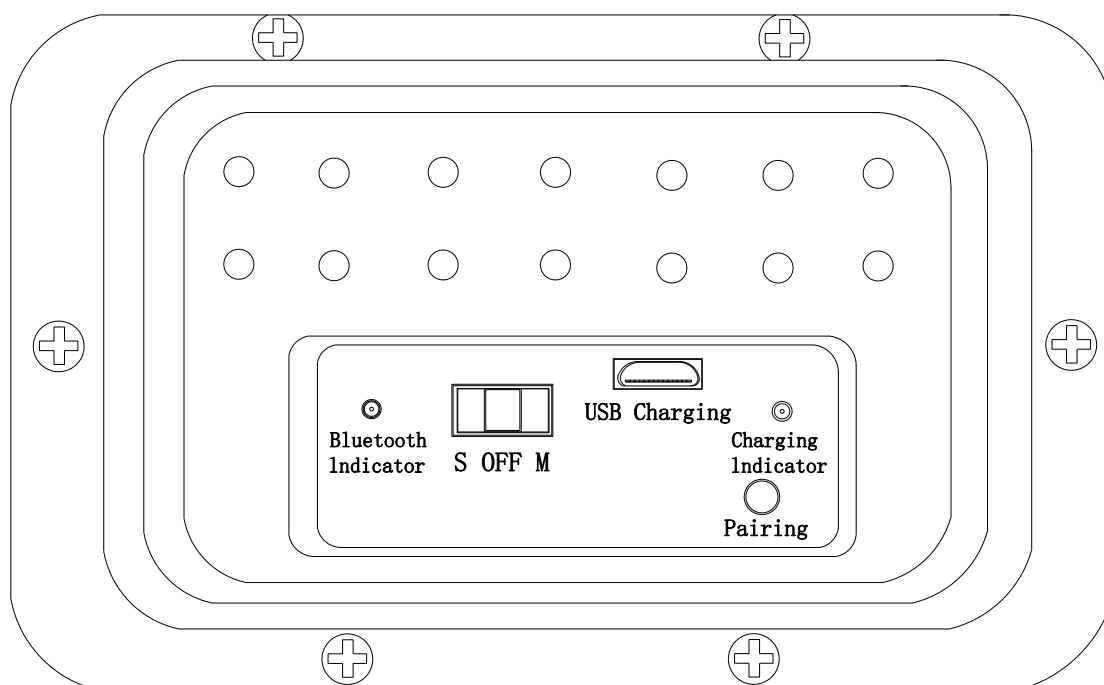


Control Box

2 Setting Up and Operating Multiple Speakers

Pairing one remote controller with multiple speakers:

- Every speaker includes a matching remote controller, use one of the remote controllers to pair with multiple speakers, disregard the rest remote controllers included with the other speakers.
- Remove the isolated tag from the remote controller. Toggle the S-OFF-M switch of the speaker to either “S” or “M” position to turn on the speaker, and then immediately press the “ON” button of the remote controller for times within 2-3 seconds.
- To verify whether the remote controller is successfully paired with the speaker or not, press the “OFF” button of the remote controller to test if it can turn off the speaker, if yes, it is successfully paired, if not, repeat the above step.
- Use the SAME one remote controller to pair with the other speakers, repeat the above steps one by one.

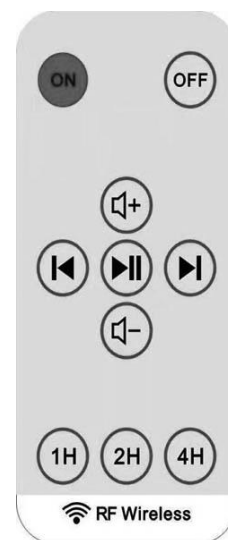

Remote Controller

What to know before set up:

- Determine which speaker will be the Main Speaker and which speakers will be the Satellite Speakers.
- Make sure all speakers are turned OFF (The S-OFF-M switch is set on “OFF” position”).
- There can only be 1 Main speaker, the rest are Satellite Speakers. There can be up to 100 Satellite Speakers.

Setting up the Main Speaker:

- Follow the directions in “Setting Up and Operating One Speaker” to set up the Main speaker and connect to your Bluetooth-enable device.
- Mark “M” on the underside of the speaker.

Setting up the Satellite Speaker(s):

- Toggle the S-OFF-M switch on the control box at the back of the speaker to “S” position, a “Di” tone will be heard and the Bluetooth LED indicator light will slow flash GREEN.
- Mark “S” on the underside of the speaker.
- Repeat the above steps if there are more than one Satellite Speakers to be connected to the Main Speaker.

Pairing the Main Speaker to the Satellite Speaker(s):

- First press and hold the PAIRING button on the control box of the Satellite Speaker for 2-3 seconds until the Satellite Speaker emits a “Di” sound and the Bluetooth indicator light will fast flash GREEN.
- Then on the Main Speaker, press and hold the PAIR button for 2-3 seconds until the Satellite Speaker emits a “Di” sound and the Bluetooth indicator light on the Satellite Speaker will turn to solid GREEN, the Bluetooth indicator light on the Main Speaker will turn to solid LIGHT BLUE. Now these 2 speakers are successfully paired.
- For more Satellite Speakers to be paired with the Main Speaker, repeat the above steps one by one.
- After all Satellite Speakers are successfully paired with the Main Speaker, place the Satellite Speakers within 50 ft. clear distance of the main speaker. The maximum distance between the Main speaker and Satellite Speaker is about 50 ft. without buildings blocking.
- The Main Speaker will automatically turn off after 30 minutes if there is no Bluetooth signal detected and connected, the Satellite Speakers will automatically turn off in about 5 minutes after the Main Speaker turned off. You can also press the “OFF” button of the paired remote controller to turn off all speakers.
- In next time use, press the “ON” button of the paired remote controller to turn on all speakers. The speakers will be automatically paired and connected to your Bluetooth-enabled device.



NOTE: To turn off the speakers, do not toggle the S-OFF-M switch to the OFF position. Allow the speakers to turn off automatically or use the remote. Toggling may unpair the speakers.

Maintenance

Replacing the battery



IMPORTANT: Dispose of the battery in accordance with local, state, and federal regulations.



IMPORTANT: When storing any solar product for an extended period of time, remove the batteries. Storing any solar product without regular recharge or removal of batteries could cause permanent damage to the rechargeable batteries.



IMPORTANT: In order to preserve battery life, we recommend bringing the speaker inside your home during the winter if you live in a climate where you will not be using the speaker during the winter. Temperatures below -4°F (-20°C) will harm the battery life.



NOTE: Use one 18650 Lithium ion, 2000mAh, 3.7V rechargeable battery. For best performance, replace with new Lithium ion rechargeable battery every 18 months.

- ☐ Unscrew the cover from the control box at the back of the speaker and remove it.
- ☐ Remove the old battery. Replace with a new 18650 Lithium ion, 2000~2500mAh, 3.7V rechargeable battery.
- ☐ Replace the cover with the six screws.

