 



Controls and Functions

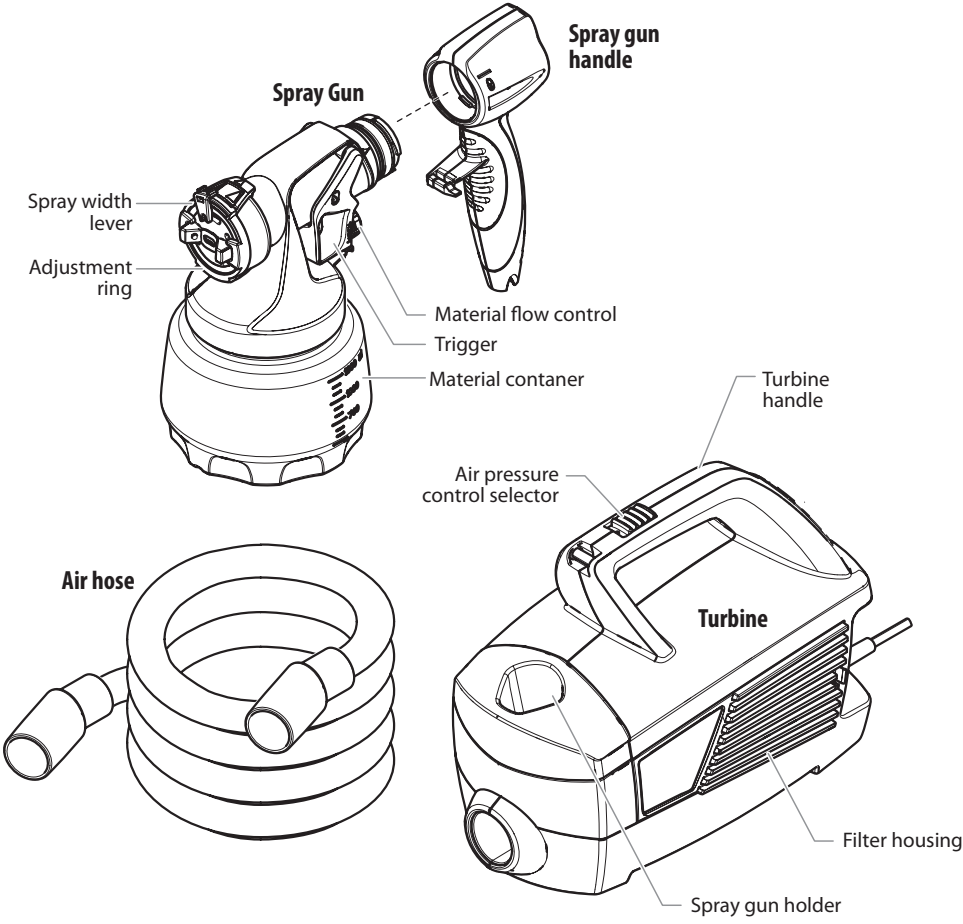

Air pressure control selector:


The air pressure control selector adjusts the level of air pressure produced by the turbine.

 - 1 = Thin materials
- 2 = Thick materials

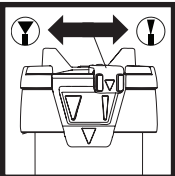

Spray Width Lever:

 The spray width lever determines the width of the spray pattern.

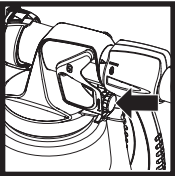

Material Flow Control:

The material flow control determines the amount of spray material that is sprayed from the spray gun.