


USE AND CARE GUIDE

WOOD 2 DOOR WITH MIDDLE X WINE STORAGE WITH 4 LEGS CABINET

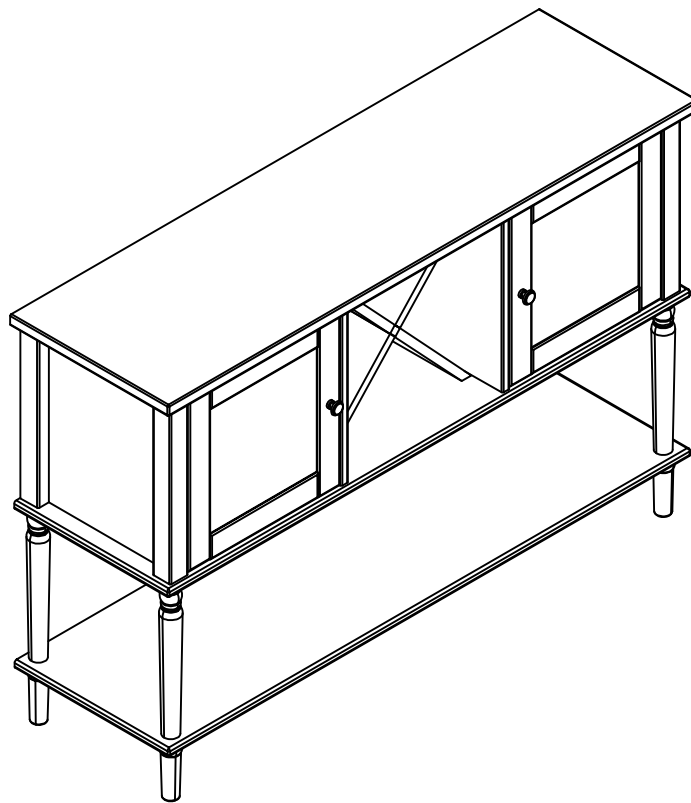

Questions, problems, missing parts?
Before returning to the store, call Customer Service.
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Style Well through the purchase of this wood 2 door with middle X wine storage with 4 legs cabinet. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Style Well!

Table of Contents

Table of Contents	2
Safety Information	2
Warranty	2
1 Year Warranty	2
What is Covered	2
What is Not Covered	2
Pre-assembly	3
Planning Assembly	3

Tools Required	3
Hardware Included	3
Pre-assembly (continued)	4
Package Contents	4
Assembly	5
Maintenance	15
Care and Cleaning	15

Safety Information



DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



WARNING

- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.



CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.). Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.
- Some assembly may involve attaching glass or mirrors.
- Be very careful handling the glass or mirrors, as severe injury may result if the glass or mirror breaks.
- Never handle large pieces of glass or mirrors by yourself.
- Assembly requires two people; assembly alone may cause injury.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly

 
PLANNING ASSEMBLY

- Remove all Packaging materials , staples and packing straps form the carton .
- Refer to Parts List and Hardware List , and ensure parts and hardware are correct before assembly .
- Contact customer service for missing parts .
- Place all wooden parts on a clean , flat , and soft surface (e.g.carpet or rug) to prevent scratch and damage to parts .

TOOLS REQUIRED



Safety goggles



Phillips screwdriver



Level

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



 
AA



BB



CC



DD



EE



FF



GG



HH



II



JJ



KK



LL



MM



NN



OO



PP



QQ



RR




SS

Part	Description	Quantity
AA	Cam bolts	20
BB	Locks	20
CC	Wooden dowels	16
DD	Hinge	4
EE	Screws Ø3.5*15MM	24
FF	Door stopper	2
GG	Screws	4
HH	Screws	2
II	Washers	2
JJ	Bolts	2
KK	Handshandles	2
LL	Shelf support	8
MM	Screws Ø3.5*30MM	2
NN	Strap	2
OO	Wall anchor	2
PP	Screws Ø3.5*15MM	2
QQ	Support	6
RR	Screws Ø3.0*20MM	6
SS	Screws Ø3.0*15MM	6

Pre-assembly (continued)


PACKAGE CONTENTS

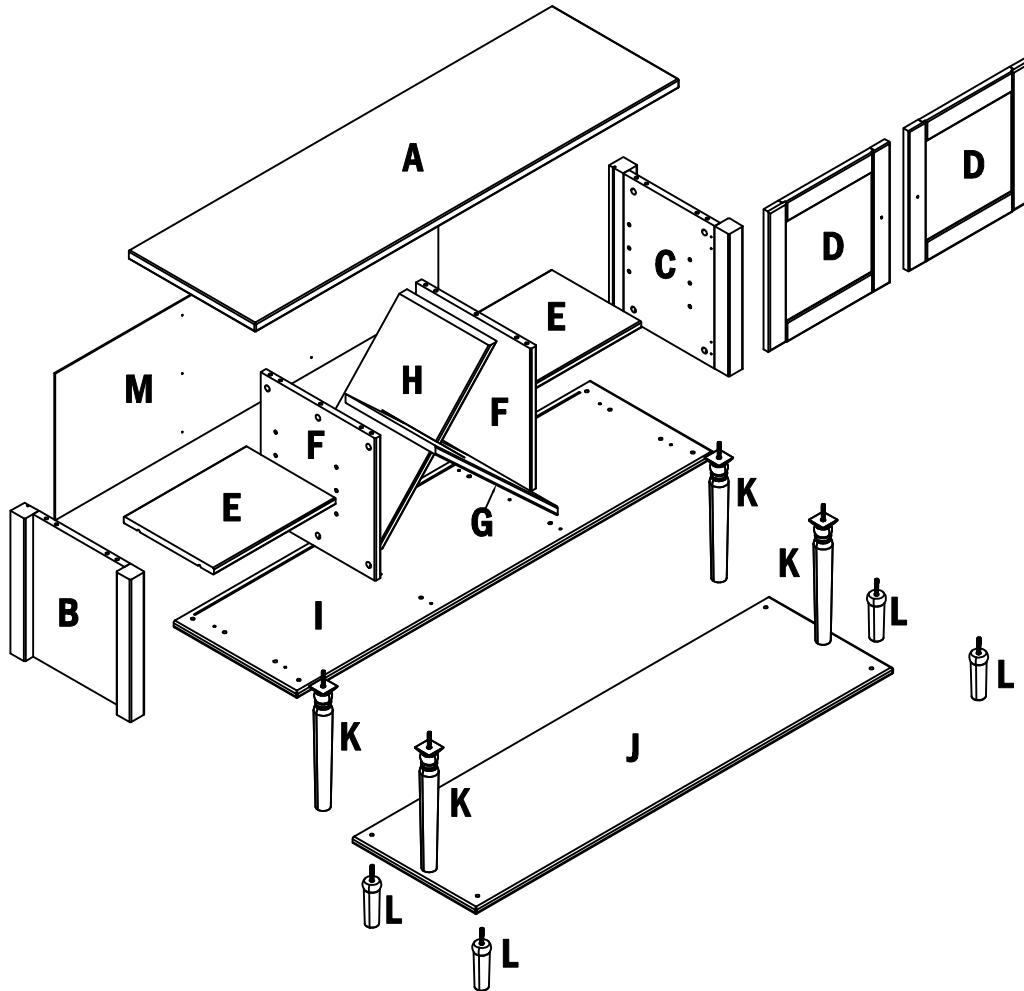


Part	Description	Quantity
A	Table Top	1
B	Left Side Panel	1
C	Right Side Panel	1
D	Front panel	2
E	layer board	2
F	Panel 1	2
G	Panel 2	1
H	Panel 3	1
I	Bottom Panel 1	1
J	Bottom Panel 2	1
K	Legs 1	4
L	Legs 2	4
M	Back Panel	1

Assembly

- 1 Tighten cam bolts (AA) to top panel(A),use screws (GG) to tighten the door stopper(FE) into the top panel (A) .

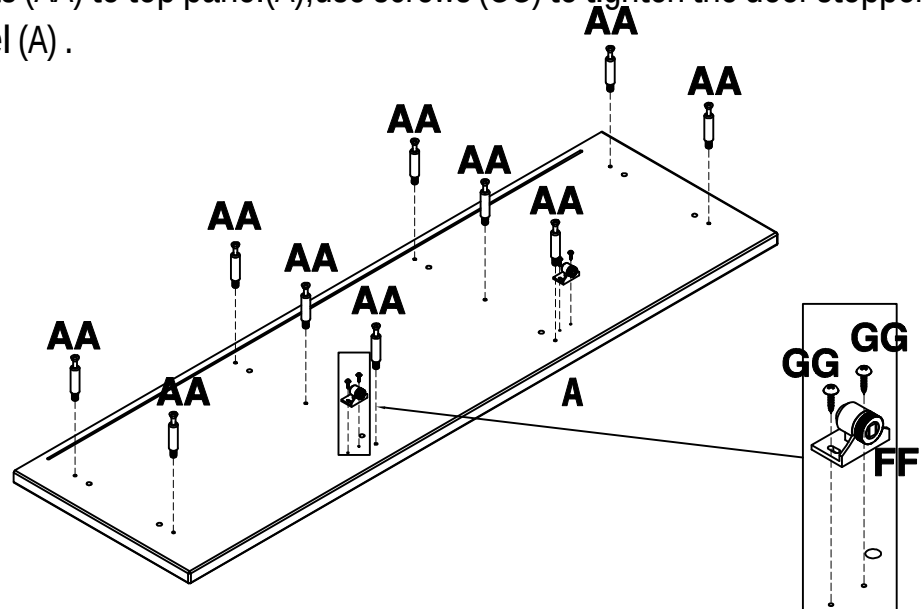


- 2 Tighten the cam bolts (AA) to the bottom panel (I)

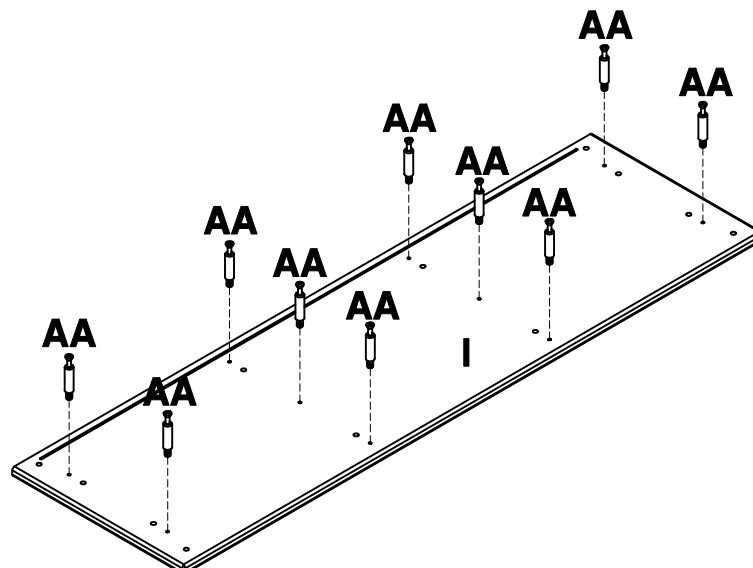


Assembly (continued)

- 3** Insert the wood dowels (CC) into the left side panel (B) and right side panel (C)


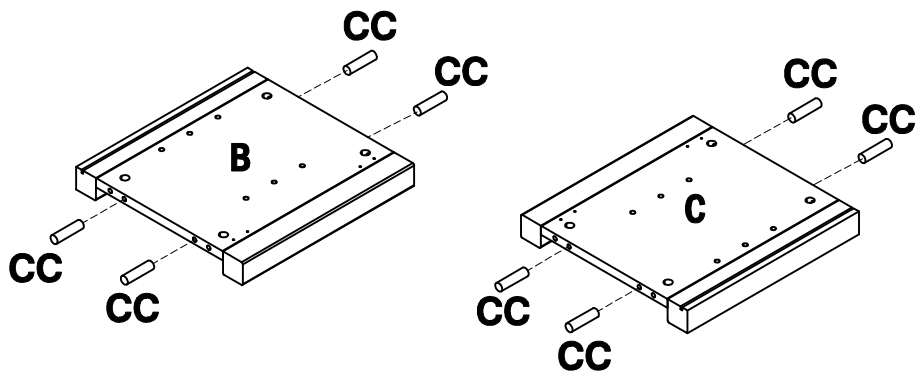


- 4** Insert the wood dowels (CC) into panel 1 (F)

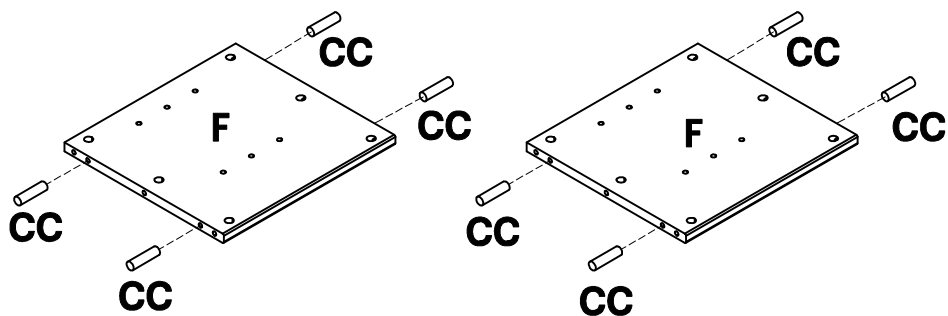


Assembly (continued)

- 5** Use screws (EE) to tighten hinge (DD) into the product front panel (D)

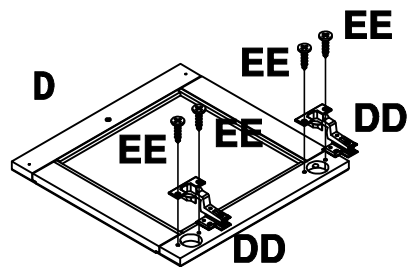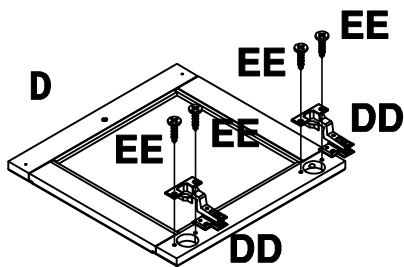


- 6** Assembled right side panel (C) into the top panel (A) with locks (BB)

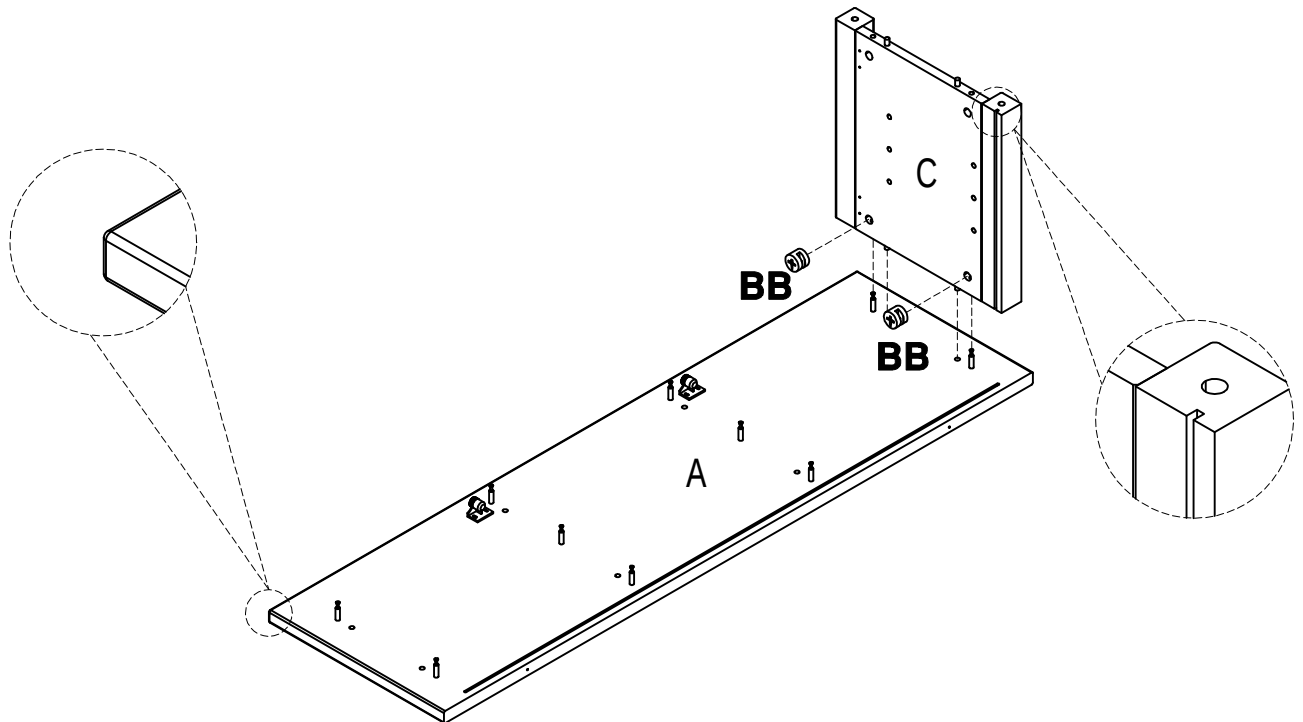


Assembly (continued)

- 7** Assembled panel 1 (F) into the top panel (A) with locks (BB) as shown

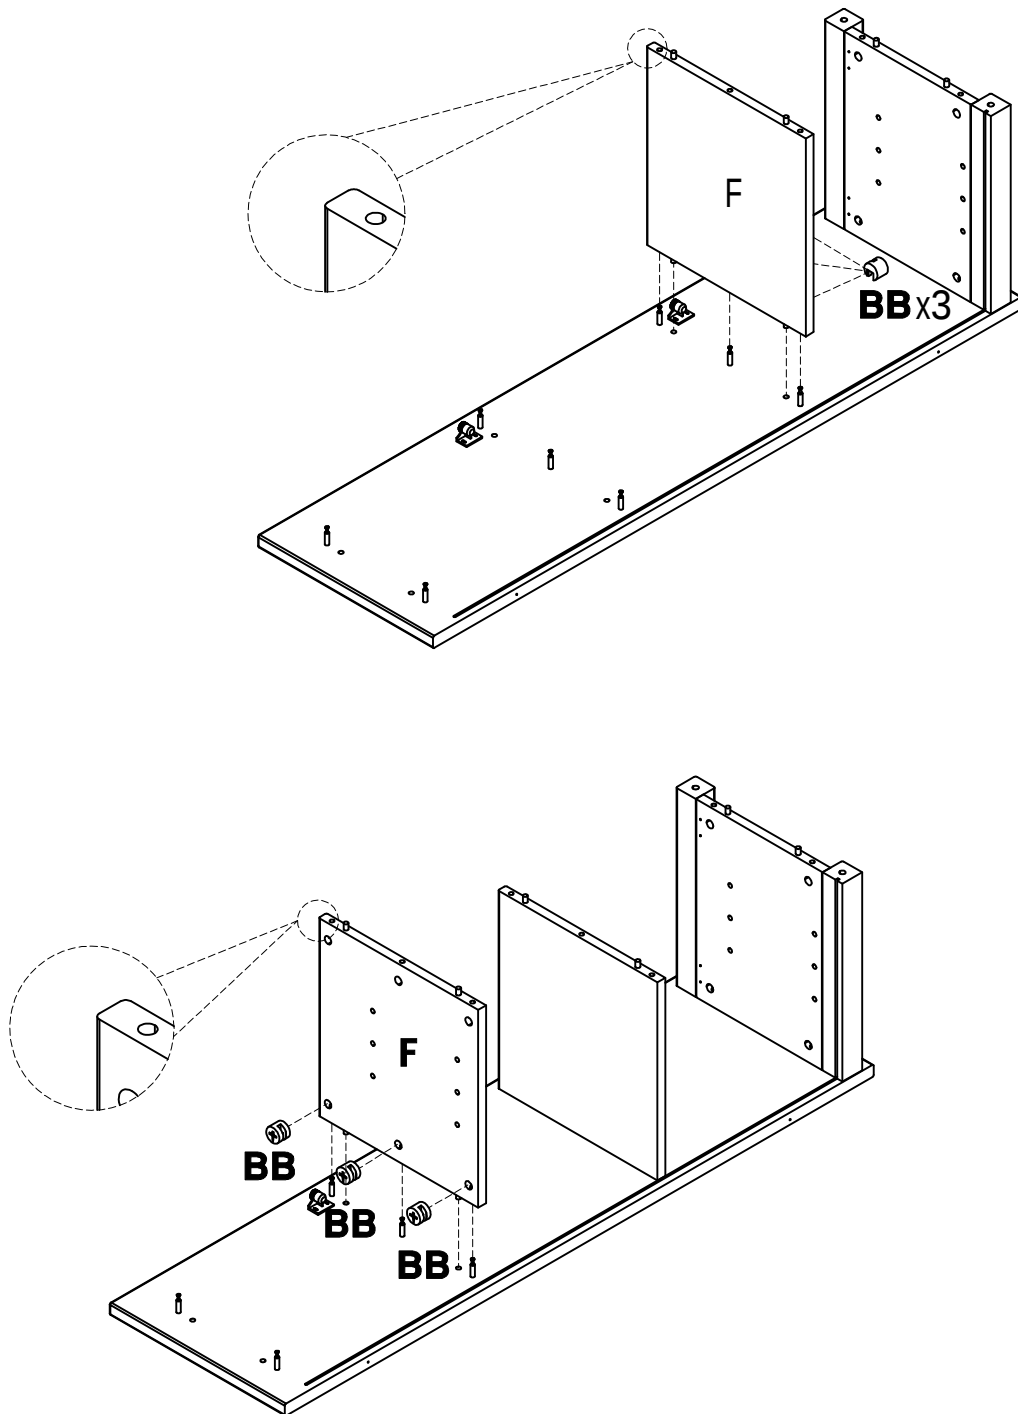


Assembly (continued)

- 8 Assembled left side panel (B) to the top panel (A) with locks (BB)

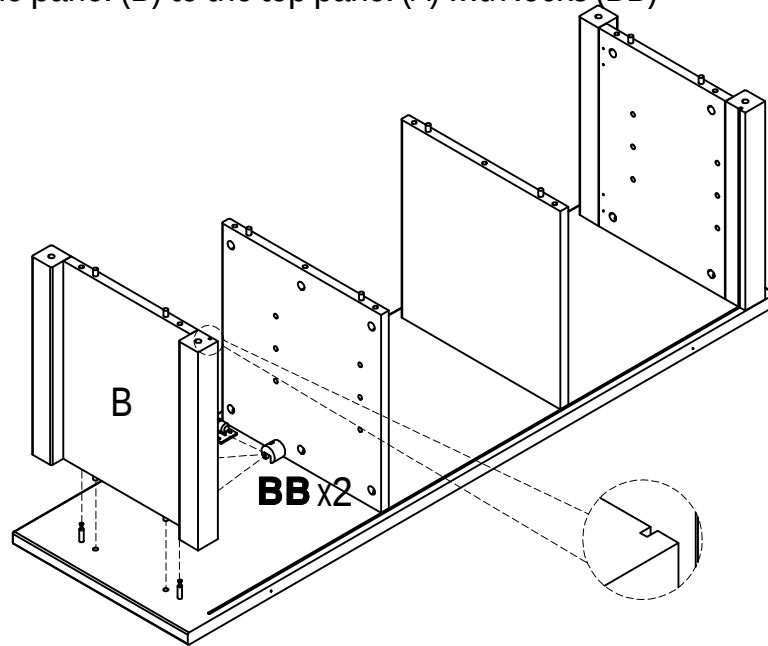


- 9 Insert the back panel (M) from step 8 as shown

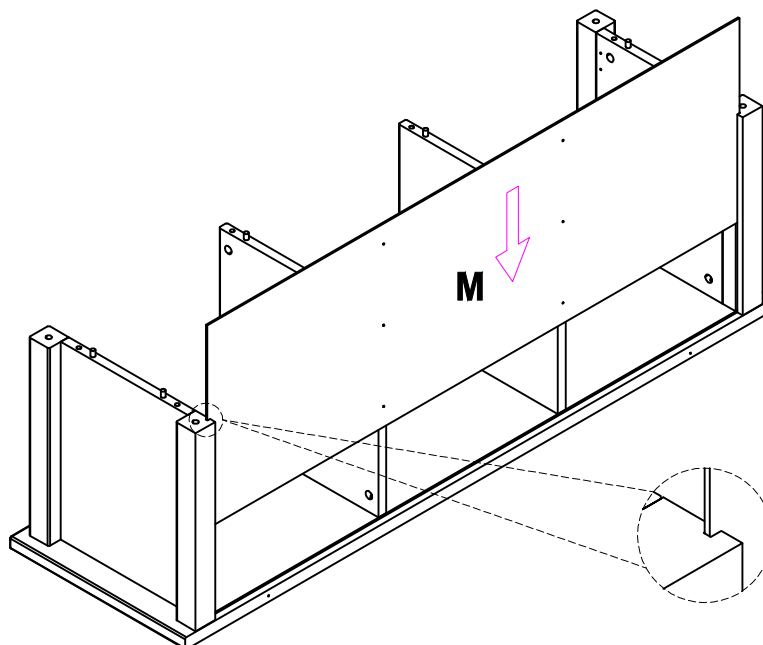


Assembly (continued)

10 Assembled the bottom panel 1 (I) with locks (BB) from step 9

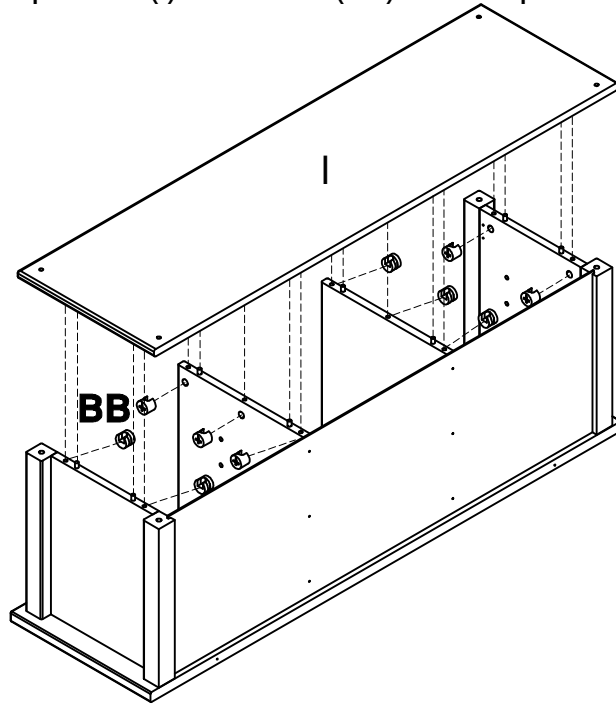


11 Tighten legs 1 (K) to the bottom panel as shown

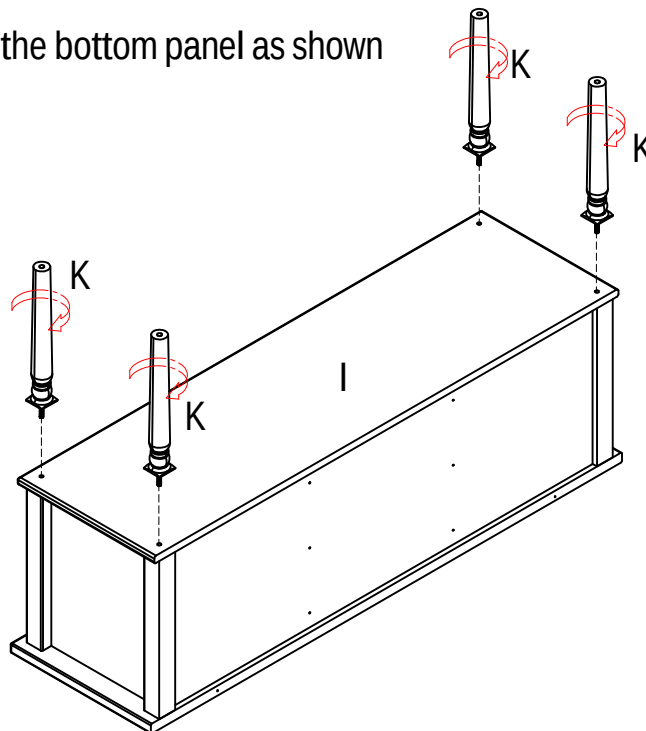


Assembly (continued)

12 Tighten legs (L) and bottom panel 2 (J) from step 11

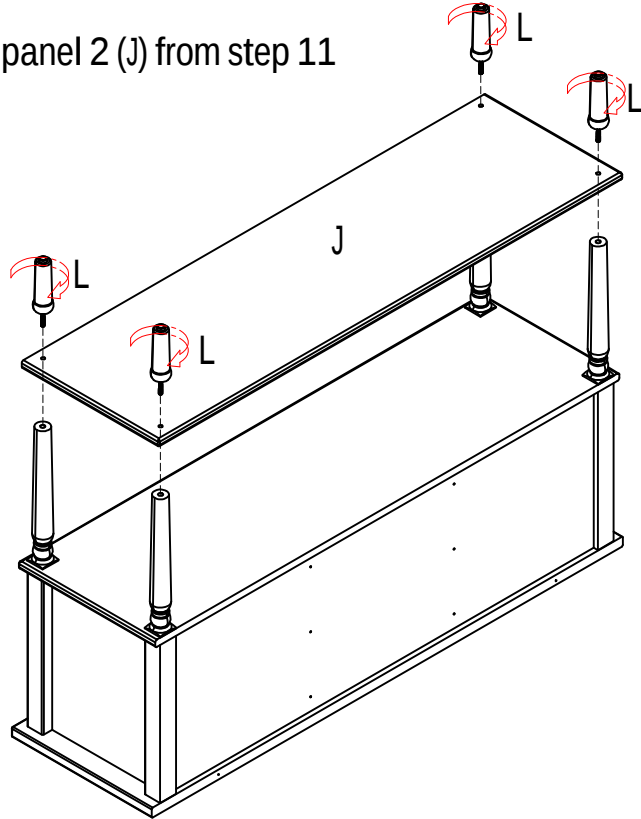


13 Attached strap (NN) with screws (PP), place support (QQ) with screws (RR) into back panel as shown

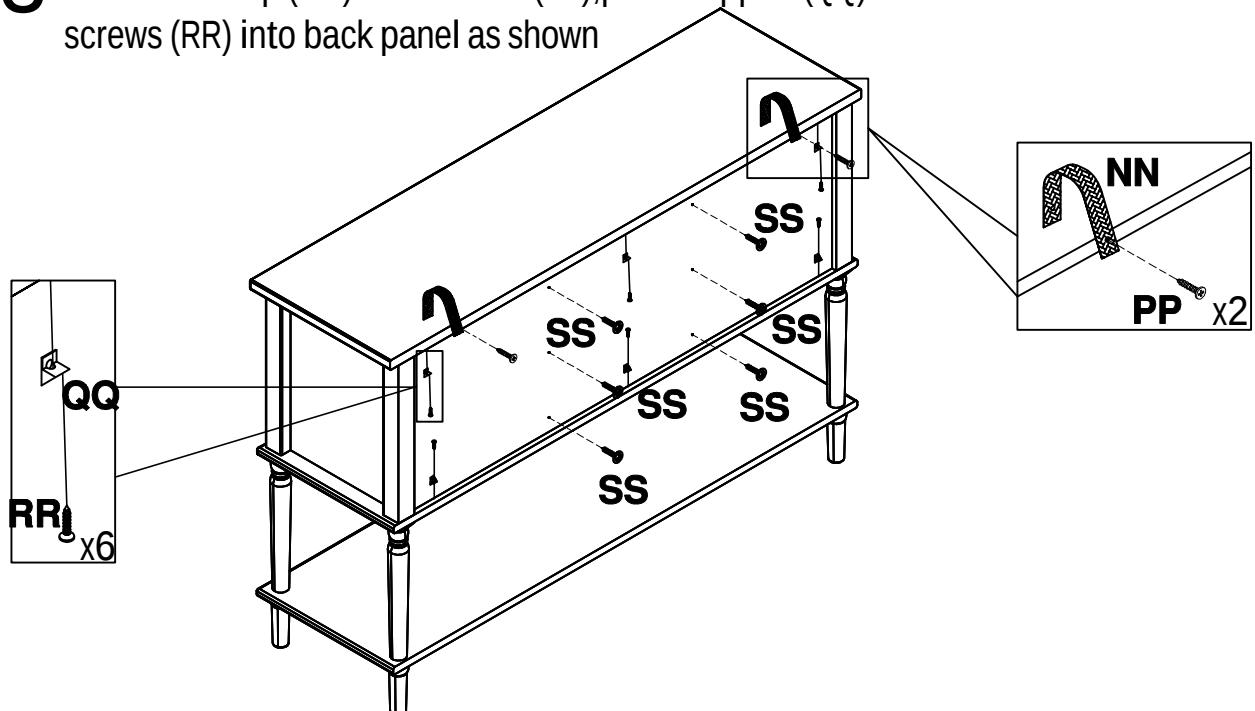


Assembly (continued)

- 14** Connect front panels (D) and hinge (DD) with screws (EE), assembled handhandles (KK) to front panels (D) as shown.

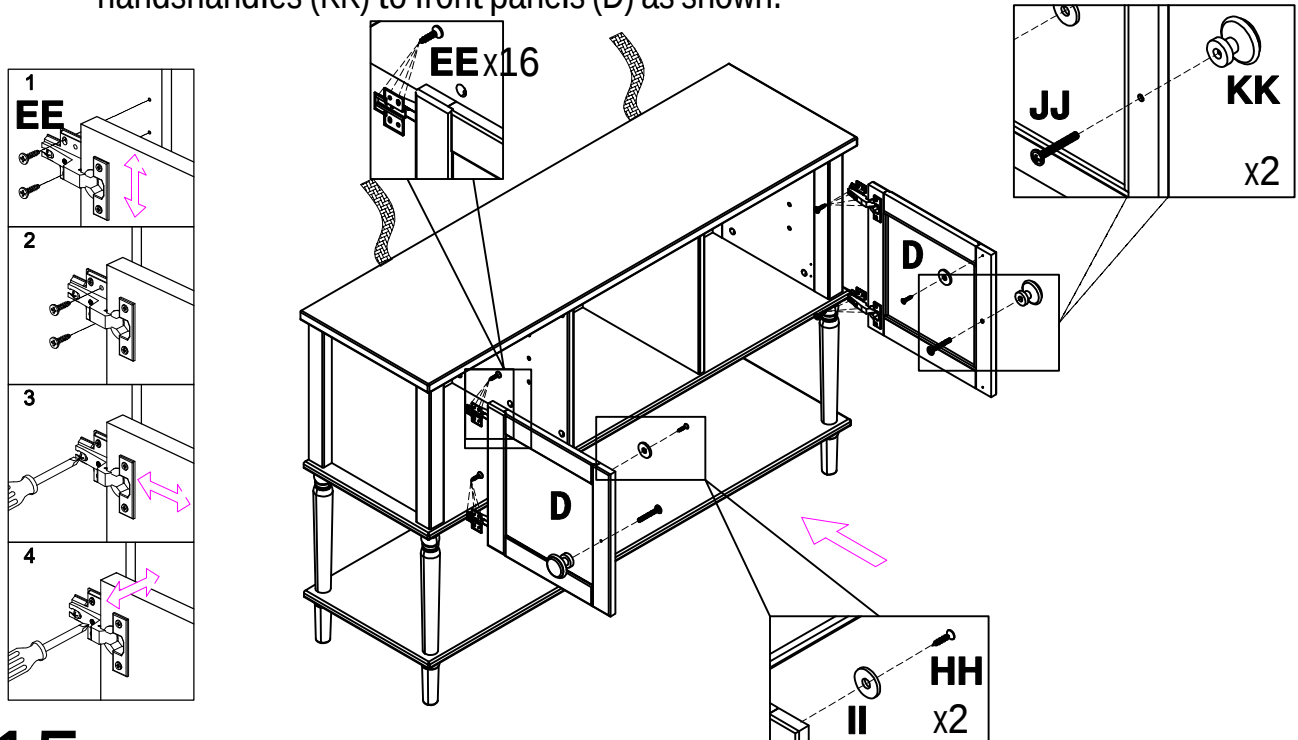


- 15** Attached 8 shelf support (LL) to side panel (B&C) and 2 panel 1(F) insert two layer panels as shown

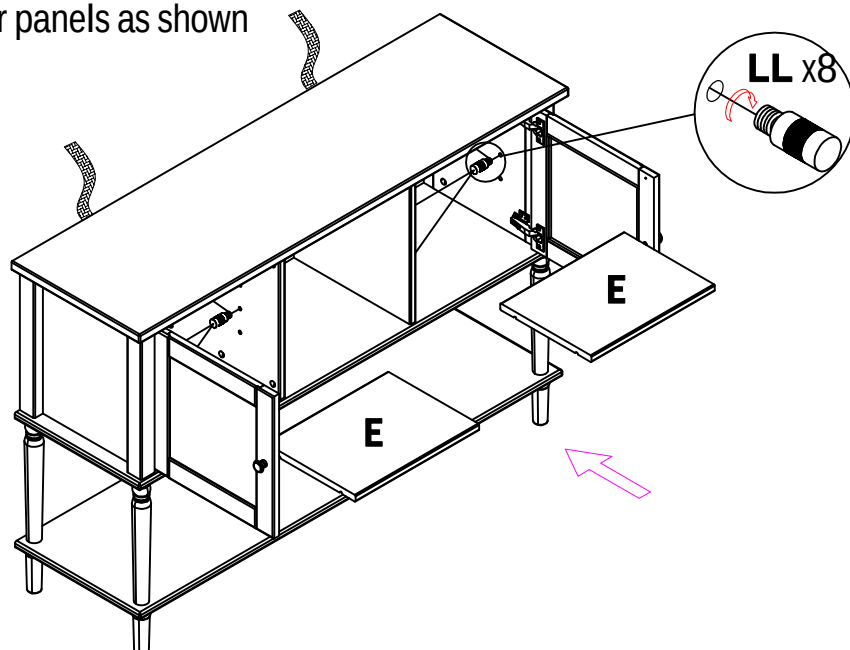


Assembly (continued)

16 Connect panel 2 (G) and panel 3 (H)

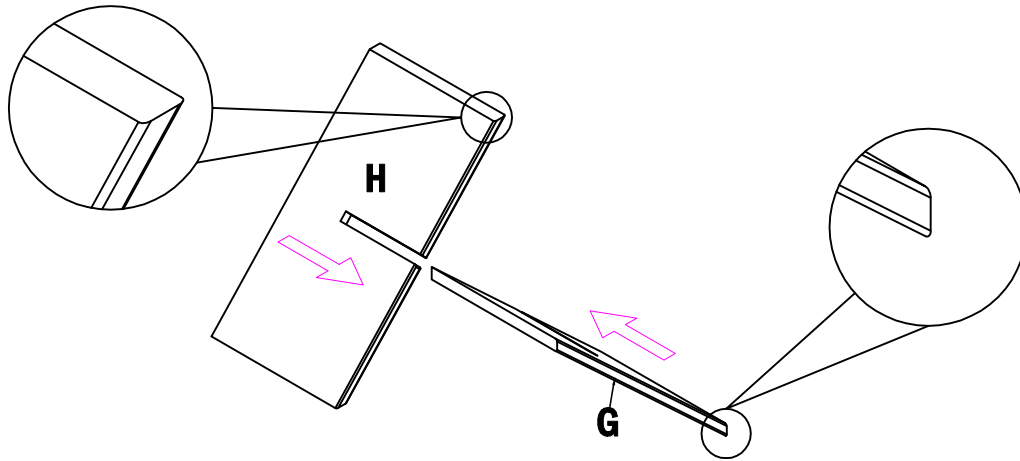


17 Insert two panel (G&H) as shown

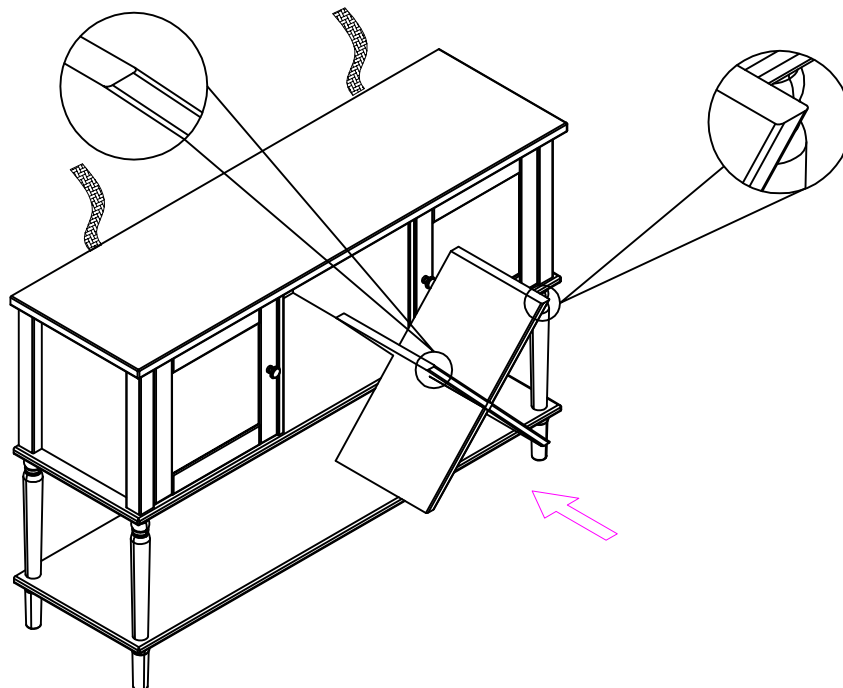

Assembly (continued)

18 Mount in the wall with wall anchor (OO) and screws (MM) as shown

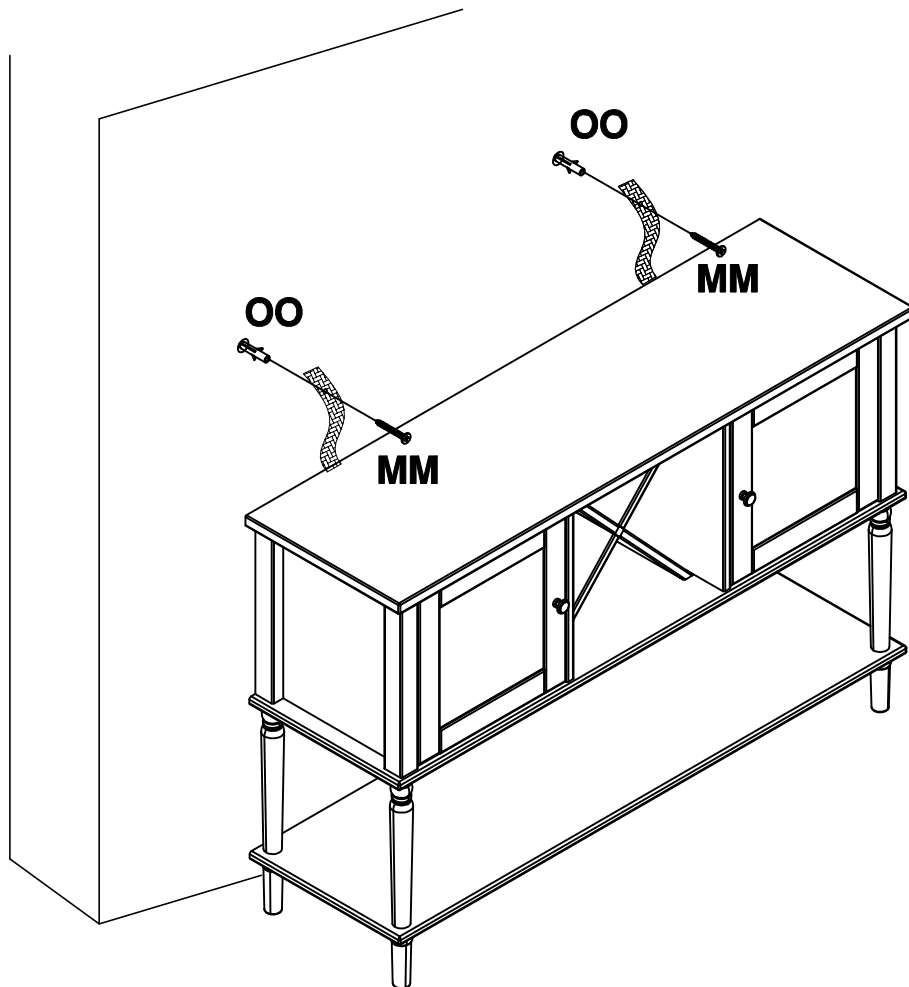

Maintenance

- ☐ Keep the product away from direct heat and sunlight .
- ☐ Prolonged exposure to heat sources may cause scorching, or even cause color to fade .
- ☐ Regular vacuuming or light brushing helps to remove dirt and prevent soil build-up, which increases the appearance of wear .
- ☐ Periodically (every 90 days) make sure that the screws are fully tightened .

Care and Cleaning

- ☐ Handle with care.
- ☐ Use a slightly damp cloth to clean the product. Do not use bleach or use abrasive cleaning material .
- ☐ Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts are damaged or broken .
- ☐ Never allow any kind of liquid to remain on your furniture .
- ☐ Absorption can make wood warp or delaminate .
- ☐ Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- ☐ Do not drag and /or pull the furniture .
- ☐ Never use harsh chemicals or solvents on your product as this may damage the metal .
- ☐ Marks and stains from pens, crayons and ink markers are difficult to remove. In the event that your products become permanently stained, we recommend that you consult a professional .

StyleWell.™

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.