

Use Instructions


Remote control LED battery box with Sconce

These instructions are for your safety, please read through them thoroughly before usage.

Use and Hanging Instructions:

The battery box is water resistant and is for use indoors and outdoors under a covered area
The battery box and sconce are meant to be hung at least 6ft above the ground.

1. Remove and dispose of all packaging before use
2. Remove the battery compartment lid on the back of the battery box by unscrewing the eight screws. There will be an arrow pointing to the upper-left screw, follow this clockwise.


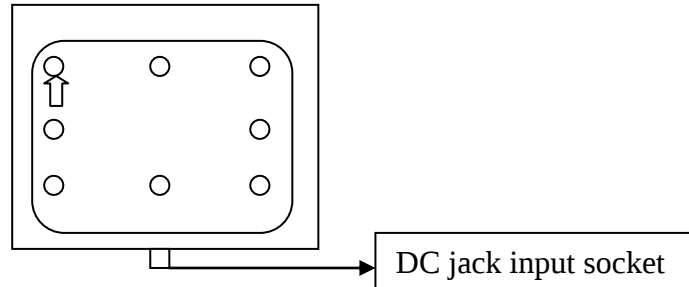


3. Insert 3 x "D" batteries following the proper orientation indicated inside the battery compartment.
4. Replace the battery compartment cover and then reinsert the 8 screws.
 Note: When reinserting the screws, be careful not to over tighten as this could strip the screw.
5. By pressing the RED button on the front of the battery box, you can now turn the LEDS "On" or "Off"
6. This item can also be powered by an adaptor (included). Connect the adaptor's device jack to the DC jack input socket on the bottom of the unit and plug the adaptor in the nearest receptacle. Then press the RED button on the unit to turn the LEDS "ON".

Note: When not using the adaptor, make sure the DC jack input socket is covered with its plastic cap.

Note: It is recommended to remove the batteries if you are planning to use the adaptor for an extended period of time.

7. The battery box comes with a metal hanging saddle. It is recommended to use included hardware. DO NOT tighten the screw fully into the wall, leave 1/8"-1/5" out of the wall so the battery box can be attached and removed without removing the screw (see Fig 2.1)
8. Attach the battery box to the wall and position the screw in the keyhole like in Fig. 2.2 to ensure maximum stability

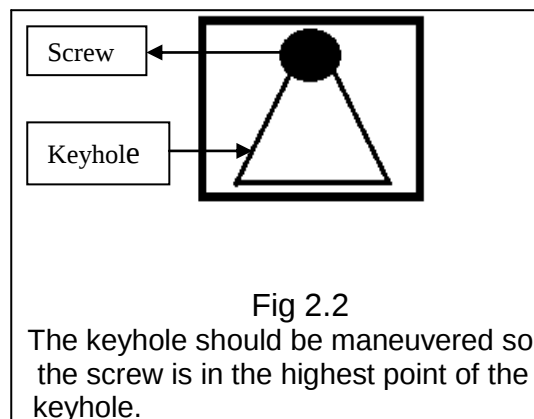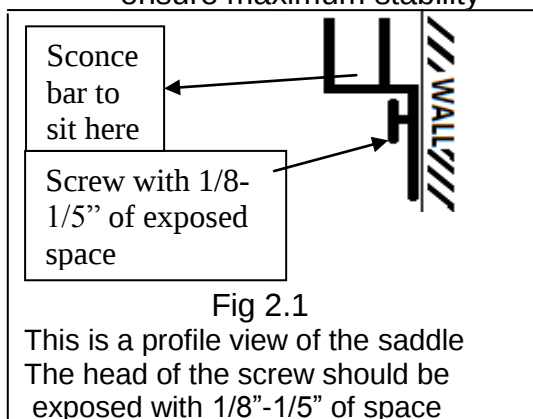

9. After the battery box is securely attached to the wall, attach the sconce by inserting the sconce's hanging bar into the saddle.

Note: Insert the sconce carefully to avoid scratching or marking the walls

10. To replace the batteries, carefully remove the sconce and battery box from the wall.

Note: It is not necessary to remove the screw from the wall, simply slide the battery box off the key hole.

The battery box is operable with a remote control (included) that has a range of approximately 15 feet. “Make sure you align the remote with the lamp”


1. To use the remote, first press the red button turning the LEDS “On”
2. Then use the remote to achieve the desired setting.

ON: Turning on the light on.

OFF: Turning the light off.

3H: 3hours timer. Unit will restart at the end of the 21-hour cycle.

6H: 6hours timer; Unit will restart at the end of the 18-hour cycle.

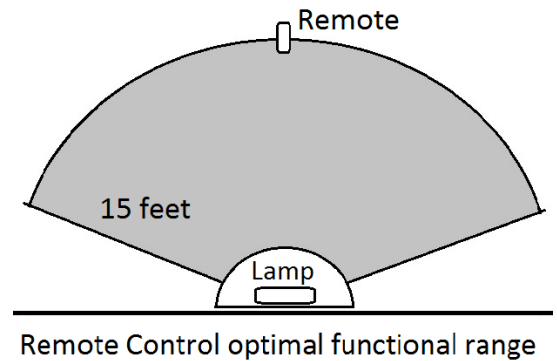

NOTE: To set the timer function, use the remote and turn the battery box “ON”. Then press the desired timer button and the LEDS will blink and work on the desired cycle. After selecting a timer option, make sure to wait for the BB to finish blinking before selecting a different function

+/-: To change brightness press the (-) button to decrease and press the (+) button to increase the brightness (100% / 75% / 50% / 25%).

Storage Instructions:

Store the battery box in a dry, cool location

Remove the batteries before storing

Make sure the battery compartment cover is fully secured before storage.

Adapter Specification:

Power adapter input: AC 120~ 0.5A Max 50/60Hz

Power adapter output: 4.5V DC 0.6A


Battery Use / Disposal:

- Only adults should handle the batteries
- Failure to properly align the battery polarity correctly can cause damage to the product
- Never attempt to recharge non-rechargeable batteries.
- Do not dispose of batteries in a fire as this constitutes an explosion hazard.
- Replace the batteries when exhausted. The battery used in the remote control is a CR2025 lithium battery.
- Dispose of batteries in accordance with local and federal regulations

Replacing the battery in the remote control:

When the operation of the remote control becomes intermittent or unsatisfactory, replace the original battery with a new 3-volt lithium battery type CR2025.

- Slide out the battery holder as shown in the diagram.
- Place the battery into the battery holder with the + face up. If the battery is placed incorrectly the remote will not work.
- Insert the battery holder into the battery compartment.

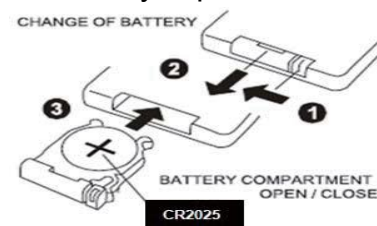

WARNING:

- Children should be supervised to ensure that they do not play with the item.
- Hang the battery box and wall scone from a wall with a MINIMUM support weight of 10 LBS
- To reset the battery box, manually turn the item “Off” by pressing the RED button. Wait 5 seconds and press the RED button to turn the battery box back “On” and the item should be reset.

MADE IN CHINA