

PARTS LIST			
1.	Power cable and plug	14.	Washer x 4 Q235 Φ 10X Φ 20X1.5
2.	I/O switch	15.	Locking nut x 2 Q235 M8
3.	Reset button	16.	Flange bolts x 4 M6x45
4.	Locking knob	17.	Socket wrench
5.	Feeding chute	18.	Combo socket/hex key wrench
6.	Body cover	19.	Left leg
7.	Discharge chute	20.	Collection box
8.	Wheel cover x 2	21.	Right leg
9.	Wheel x 2	22.	Paddle
10.	Axle	23.	Hopper
11.	Spacer x 2 Q235 Φ 14x Φ 10x32	24.	Locking buckle
12.	Axle tube	25.	Hopper ring
13.	Washer x 2 Q235 Φ 8X Φ 20X1.5		

