

WINDOW FX™



ANIMATED WINDOW DISPLAY KIT INSTRUCTION MANUAL


Please read the Instruction Manual carefully before operation.

Image System	TFT LCD	Color	24-bit RGB
Contrast Ratio	500:1	Keystone Correction	±15°
Native Resolution	1920x1080	Power Supply	12V
Lamp	30W LED	Power Consumption	35W
Lens	F=125	Media Input	USB/HDMI
Projection Distance	1M-4.8M	Sound Output	3.5mm earphone
Aspect Ratio	16:9/4:3	Menu Languages	English, Spanish, French, additional
Projection Size	25"-130"		



NO.	Definition	Purpose
1	Function Keys	Operating keys
2	HDMI Slot	Insert HDMI Source
3	Keystone Wheel	Adjust angle distortion
4	IR Receiver	Remote control signal receiver
5	USB Port	Insert USB
6	Power Input Port	Insert power supply adapter
7	3.5mm Earphone Port	Insert earphone or speaker
8	Lens Barrel	Adjust focus

Projector Components Projector Keys on Projector

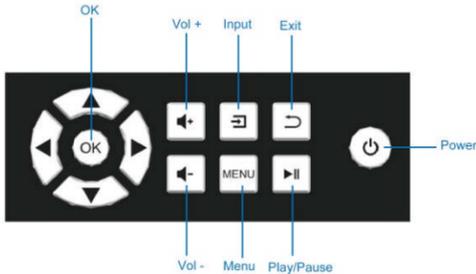

Remote Information



Note: Please remove batteries from remote for extended periods of inactivity.

Remarks

- The WindowFX kit is for indoor use only. Always operate in a dry environment.
- For proper protection, please do not look directly into the lens during set up or operation.
- During operation, please keep the lens at least 3 feet from fabrics, such as window curtains, furniture, or other flammable items.
- Always operate in a ventilated area and do not block or cover the vents in the main housing.
- Please only use the provided adapter and power cord with the projector. Failure to use these may create a fire hazard and may void any warranty.
- For additional protection, please turn off the projector and remove the power supply when not in use.
- Please use original supplied box and packing material when transporting.
- Never open the projector housing. Only authorized personnel should be allowed access to the projector electronics.
- For Adult use only. Not intended for the use by children under the age of 15.
- Use only new, button cell battery (size CR2025) for the remote control.
- To remove wrinkles in the projection material, use a low heat iron (on delicate or silk setting) and lay a cotton towel or cloth between the iron and the projection material. Do not make direct contact with the iron to the projection material. Never put the projection material in the dryer.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- If you find any operational defects, please do not attempt to repair. Unplug the projector immediately and call the Customer Service phone #: 1-888-476-7100

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Supported File Formats

Multimedia Type	File Formats Supported
Video	AVI/FLV/MOV/MP4/MKV/RMVB

Setting up the Projector

The WindowFX Projector is designed to project from the inside of your home onto windows for outside viewing or on a wall for inside viewing. Based on your viewing selection, either window or wall, arrange your setup accordingly.

For Window Projection: the projector should be placed within 4 to 8 feet from the window you will be using. Use the included projection screen material with the two-sided tape to attach to your window or window frame.

For Wall Projection: the projector should be placed within 4 to 8 feet of the wall you will be using. You may hang the included projection screen to your wall for increased image quality of the projection.

Projector Operation

- Begin by connecting the power adapter to the projector. Connect the power adapter to the AC power outlet.
- Power on the projector by pressing the power button on the projector. The projector is now ON in active mode.
- Adjust the focus of the projection by rotating the lens barrel.
- If a slight trapezoid distortion is visible, move the Keystone wheel to adjust and square the projected image.
- Select Multimedia Icon (Image 1), then press OK on your remote or projector.
- Select Preload Icon (Image 2), then press OK on your remote or projector.



Image 1

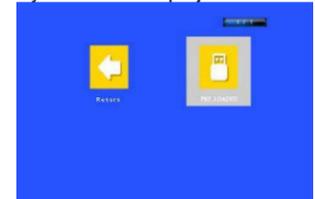


Image 2

- On the next menu, select the orientation of the video to be projected, either horizontal or vertical. Select the orientation by highlighting the folder and pressing the OK button. If the desired orientation is vertical, the projector must be turned on its side (see images below).



HORIZONTAL ORIENTATION



VERTICAL ORIENTATION

- On the next menu, select the season (Image 3) that you would like to play by highlighting the desired folder and pressing the OK button. The Pre-loaded files will appear (Image 4).
- To play all videos, press play on your remote or projector; to select specific videos, highlight the videos and press OK on your remote or projector and a small checkmark will appear. After a few seconds of non-activity, a small preview video will appear. To exit out of preview mode, simply move using the arrow keys or press play and the videos will enter full screen format.

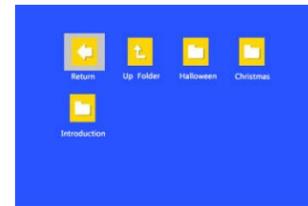


Image 3


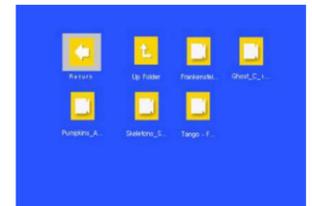


Image 4

Bluetooth Setup


Set Bluetooth pairing on the Sound sub-menu. Defaulted setting is Bluetooth off. Click "right" button, turn it ON. Then press "search" and find nearby device, max 5 devices. Select device for pairing, it will show "Connected" once paired successfully. (See Images below)

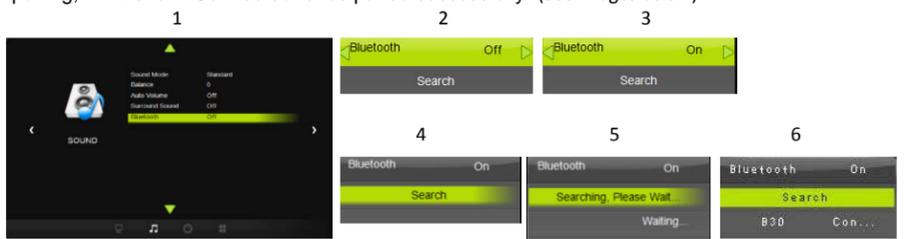

Before connecting your own speaker or headphone device to projector for Bluetooth function, please make sure these devices were clear up any hook up from other device, such as smart phone and audio equipment. Otherwise projector will not "Search" them successfully. Our Bluetooth module is suitable for connecting general speaker equipment, but no guarantee for all market unit, preferred external speaker model you may visit our website-www.totalhomefx.com.

HDMI Setup

- Press the Input/Source button on remote or projector and select HDMI. HDMI cable not included.

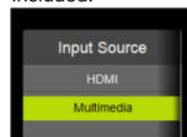

Additional Operation Options

REPEAT: To repeat a video or all videos playing, press the repeat button on the remote. There are 3 possible options for repeating: None, one video, or all videos.

REVERSE: Some videos have text which will need to be reversed when projecting onto a window to be viewed outside the window. Press the rotate button on the remote to find the desired orientation.

TIMER: After selecting the videos to be played, press the MENU button on the remote or the projector. Use the left or right arrow keys to cycle to the TIME menu. Select the number of minutes that the projector will play and then turn off. There is no Auto On function.

QUICK MENU: While the video is playing, press the OK button to access the Quick Menu. The Quick Menu includes further operational functions, such as Fast Forward, Rewind. There are also features to skip to the next video or to return to the previous video.



1-888-476-7100

610 Academy Drive

Northbrook, IL 60062

www.TotalHomeFX.com

Visit our website for more information, to purchase additional downloadable videos, and to submit a customer service request.