

Trouble shooting guide

Problem	Solution
No liquid flowing from the tank	Make sure the handle is fully extended and the collar is locked in position. This will allow the control valve to operate correctly
Handle sliding up & down	Ensure the collar at the bottom of the handle is securely tightened.
Liquid leaking at the head	Unlock the handle, slide the handle to its original position, then fully extend the handle and re-lock. You should now be able to feel a spring pressure on the trigger.
No spring action in trigger	Make sure the handle is fully extended (to engage the trigger) and the collar is locked in position. You should now feel a spring loaded action when operating the trigger



Carpet Shampooer Model 250

Care and Use Instructions

Your Guarantee

This product is covered by a 12 month guarantee. This does not cover normal wear and tear or abuse. For guarantee purposes, please retain your original receipt as proof of purchase.

For spares, service and further information please contact :
Customer Services, Ewbank Products Ltd, Ashcombe Court, Woolsack Way,
Godalming, Surrey, GU7 1LQ. Tel: 01483 663 050

“our policy is one of continuous development and as such
we reserve the right to alter the specification without notice”

Ashcombe Court, Woolsack Way, Godalming,
Surrey, GU7 1LQ, UK
Tel: 01483 663 050

Enquiries@ewbank.co.uk
www.ewbank.co.uk

Instruction Leaflet for the Carpet Shampooer

Making The Carpet Shampooer Ready for Use

- Make sure the collar at the bottom of the handle section is loose, **see fig 1A**.
- Fully extend the handle (to engage the trigger). Securely tighten the collar to lock the handle in position and operate the trigger, **see fig 1B**. You should feel a spring loaded action. This spring operates the release valve. Your shampooer is now ready for use.
- **NOTE:** If the collar is not securely tightened the handle may move causing the trigger to disengage.

Preparing the carpet

- Vacuum the carpet to remove surface debris before applying the foam shampoo.
- It is advisable to test the carpet for colour fastness prior to use. To do this, mix a little of the foam shampoo liquid to the specified dilution, apply to a clean cloth and then clean a small area of carpet, ideally one which is normally hidden from view.

Shampooing

- Mix the foam shampoo liquid to the specified dilution. Remove the filler plug, pour in the solution and then replace the filler plug, **see fig 2**.
- Pulling the trigger will release the solution onto the foam roller. Use the trigger sparingly and **DO NOT OVERWET** the carpet, **see fig 3**.
- Clean the carpet using short overlapping strokes.
- After use, leave the carpet to dry out thoroughly then vacuum or use your carpet sweeper to remove the deposits lifted by the foam shampoo.

Cleaning the Carpet Shampooer

- After use pour out any unused solution and clean by rinsing out the tank with a small amount clean water. Pull the trigger a number of times to run the clean water through the system. Clean the head by rinsing the roller and brushes under a tap. The shampooer must be thoroughly clean and dry before storing.
- If necessary you can remove the roller and brush head assembly for cleaning. Do this by inserting a screw driver between the main moulding and brush rocker arm and gently levering out, **see fig 4**
- For directions to reassemble the roller and brush head assembly, **see fig 5**.

