



PRODUCT OVERVIEW

Parts

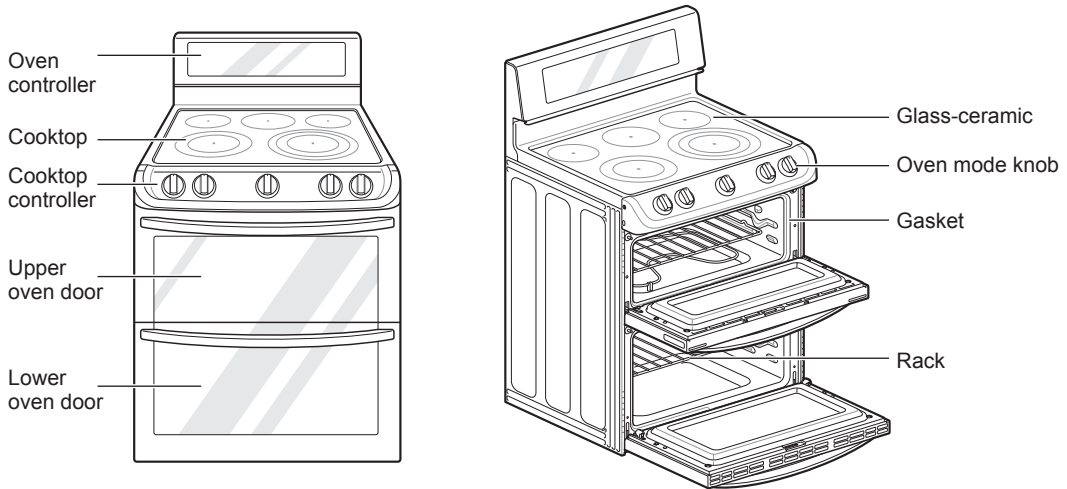


Accessories

 Included Accessories



 Standard rack
- LDE4415 (2ea)
- LDE4413 / LDE4411 (3ea)



Gliding rack (1ea)
(LDE4415 Model only)



 
Cooktop cleaner (1ea)



Cooktop cleaning pad (1ea)




Spray bottle (1ea)




Non-scratch scouring pad (1ea)

 Optional Accessories



Grid

 

Broiler pan

NOTE

- Contact LG Customer Service at 1-800-243-0000 (1-888-542-2623 in Canada) if any accessories are missing.
- For your safety and for extended product life, only use authorized components.
- The manufacturer is not responsible for product malfunction or accidents caused by the use of separately purchased, unauthorized components or parts.
- The images in this guide may be different from the actual components and accessories, which are subject to change by the manufacturer without prior notice for product improvement purposes.