


WINDGATE 40 INCH FIRE PIT

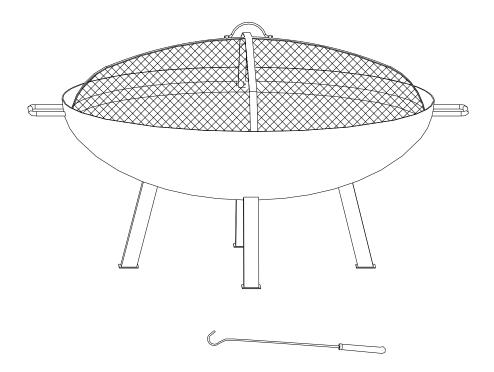

Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

WWW.HAMPTONBAY.COM

THANK YOU

Table of Contents

Table of Contents	
Safety Information	2
Warranty	
2 Year Warranty	
What is Covered	2
What is Not Covered	2

Pre-Assembly	
Planning assembly	
Hardware Included	3
Additional Hardware	
Package Contents	4
Assembly	
Care and Cleaning	

Safety Information

- Some parts may contain sharp edges. Wear protective gloves.
- When assembling and using this product, basic safety precautions should always be followed to reduce the risk of personal injury and damage to equipment. Please read all instructions before assembly and usage.



CAUTION: Do not touch the surface of the iron fire grate and the fire bowl while in use. It may cause burns.



WARNING: Fuels used in wood or charcoal burning appliances, and the products of combustion of such fuels, can expose you to chemicals including carbon black which is known to the State of California to cause cancer, and carbon monoxide, which is known to the state of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



DANGER: This unit is heavy! Do not assemble this item alone.



WARNING: The charcoal fire pit is HOT! DO NOT allow your children to play near it when fire pit is in use. Please put the charcoal less than 6lbs each time when using.

NOTICE: For outdoor use only.

Warranty

2 YEAR WARRANTY

WHAT IS COVERED

This limited warranty is extended to the original purchaser and applies to defects in materials and workmanship of your item provided the item is maintained with care and used only for personal, residential purposes. The item is warranted to be free from defects in material or workmanship for a period of 2 years.

WHAT IS NOT COVERED

We do not reimburse for transportation of delivery costs, or compensate the individual or any outside party for assembling or disassembling the product.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit www.HAMPTONBAY.com.

Production Number: 2019XXXX

Pre-Assembly

PLANNING ASSEMBLY

Before beginning assembly of this product, make sure all parts are present. Compare parts with the Hardware Included and Package Contents lists. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

HARDWARE INCLUDED



NOTE: Hardware not shown to actual size.



___A/



__BB


Part	Description	Quantity
AA	Bolt M8*20	8
BB	Wrench M8	1

ADDITIONAL HARDWARE

Part	Description	Quantity
AA	Bolt M8*20	2

Pre-Assembly (continued)

PACKAGE CONTENTS

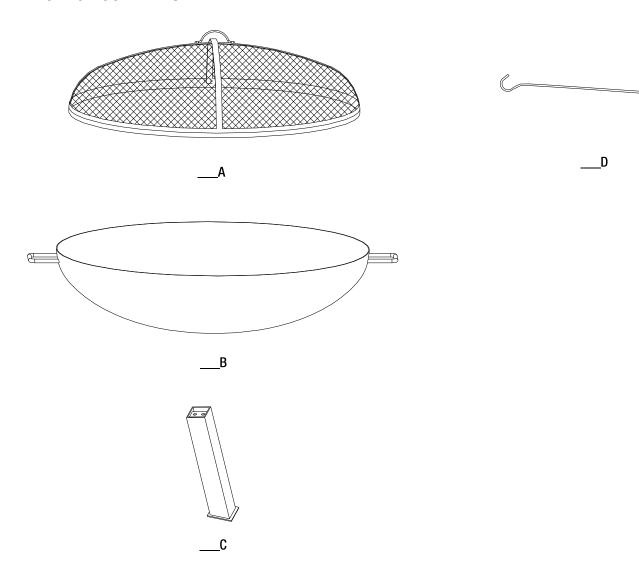

Part	Description	Quantity
Α	Screen	1
В	Fire Bowl	1
С	Leg	4
D	Poker	1


Assembly

1 Attaching the Legs

☐ Attach the Legs (C) to the Fire Bowl (B) using Bolts (AA).



NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

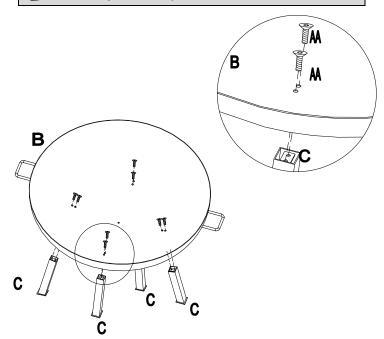


2 Completing the Assemble

Put the Screen (A) on the assembled Fire Bowl (B), put the Poker
(D) aside.



NOTE: To avoid destroying the finish, do not put the parts on the ground directly.

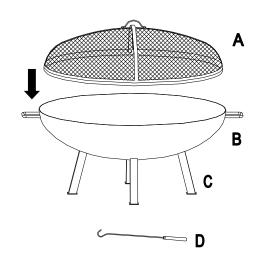

Care and Cleaning

Before using,	clean i	the fire	pit com	pletely	with a	soft dry	/ towel

□ When not in use, store in a cool, dry area.



Questions, problems, missing parts? Before returning to the store, call Hampton Bay Customer Service 8 a.m. - 7 p.m., EST, Monday- Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-HD-HAMPTON

WWW.HAMPTONBAY.COM

Retain this manual for future use.