

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate www.vevor.com/support

Hand Blender

MODEL:HB-109SDS

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

Hand Blender

MODEL:HB-109SDS



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

 CustomerService@vevor.com

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.



Warning-To reduce the risk of injury, user must read instructions manual carefully.

IMPORTANT CAUTION


Check each accessory carefully before using this unit.

- * This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- * Children should be supervised to ensure that they do not play with the appliance.
- * Before using this unit, check the mains power voltage corresponds to the voltage shown on the marking plate.
- * Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning
- * Do not allow children to use the blender without supervision
- * Do not switch the appliance on if it appears to be faulty in any way.
- * Contact your dealer or an authorized Service Center for repairs, accessories, or power cord replacement.
- * It is forbidden to immerse the base in water for cleaning and to start the unit or press the control button with wet hands.
- * The water temperature should not be over 60°C when cleaning the unit.
- * Do not run this unit long-time. Otherwise, the inner parts will be damaged.
- * When the motor is running, do not insert your finger or other objects into the machine and container.
- * If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons to avoid a hazard.
- * Only use this appliance and the provided accessories. Use the appliance for its intended purposes only. Do not use the appliance and the accessories for

other purpose than described in this user instruction manual.

- * Care shall be taken when handling the sharp cutting blades, emptying the container and during cleaning. Do not try to use the cutting blade or accessory other than the correct purpose to prevent dangers. Misuse or assemble the cutting blade or accessory will cause dangers.

NAME OF PARTS

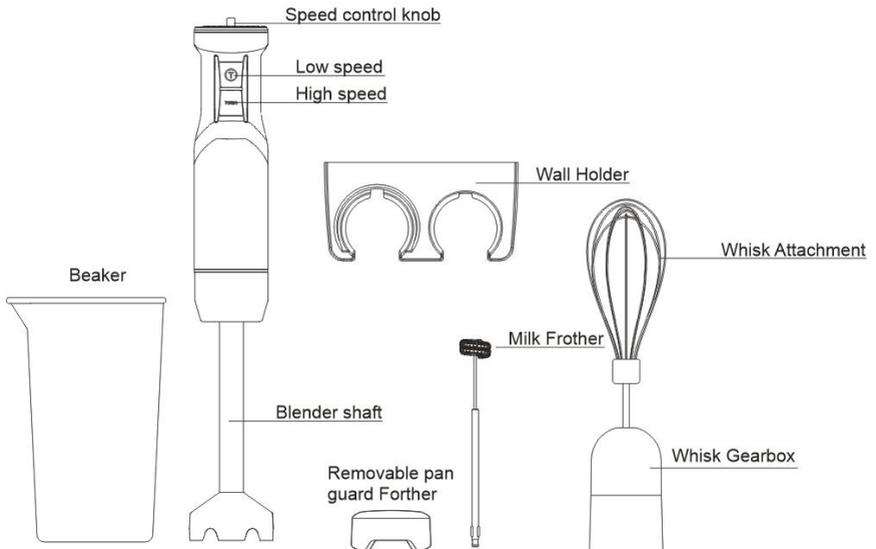

Technical parameter


Model	HB-109SDS	Rotational Speed	15000RPM ±10%
Rated Voltage	110-120V~	Rated Frequency	60Hz
Rated Power	500W	Model Depose Patent Pending	
Rated Working Time	≤1min	Rated Interval Time	≥1min

OPERATION GUIDE


Using Blender

The hand blender is perfectly suited for preparing dips, sauces, mayonnaise, and baby food as well as for mixing and milkshakes.

1. Insert the blender shaft into the motor unit, and turn it clockwise to lock it into the motor unit.

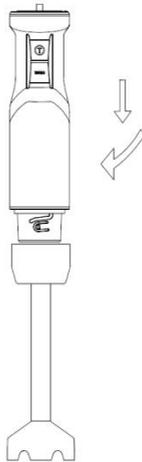


2. Insert the plug into socket. Press high-speed button or low-speed button to start the blender. When you press low-speed button, you can rotate the speed control knob to adjust the speed.
3. Put ingredients in the beaker to prevent splattering, and immerse the blade guard completely in the ingredients. (Beaker maximum capacity 600ml). You can use the hand blender in the beaker and just as well in any other vessel

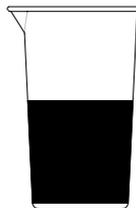

4. Switch the appliance on by pressing the low-speed or high-speed buttons.


5. Blend the ingredients by moving the appliance slowly up, down and in circles.

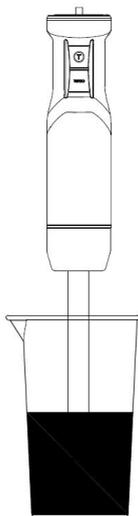


Using whisk

The whisk is intended for whipping cream, beating egg whites and mixing sponges and ready-mix desserts.

1. Insert the whisk into the Whisk coupling unit strongly.
2. Connect the coupling unit to the motor unit, installation reference "using blender".

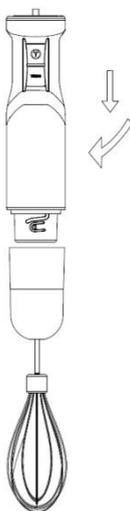


3. Press the switch to activate the handle blender, and press the high-speed button after 30 seconds to prevent ingredients from splashing.

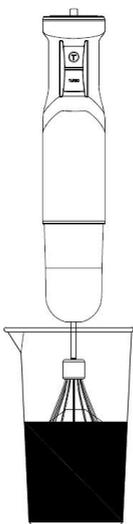

Using milk frother


The whisk is intended for whipping cream and froth milk. Froth all types of milk, create a vast array of professional-quality hot and cold foam and drinks such as cappuccino, latte, hot chocolate, milkshake, cocktails (and many more).

4. Insert the frother into the Whisk coupling unit strongly.
5. Connect the coupling unit to the motor unit, installation reference "using blender".

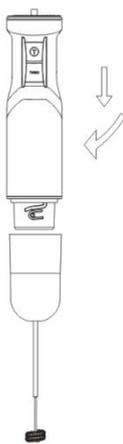

Using removable pan guard


Removable pan guard to help protect your cookware when blending.

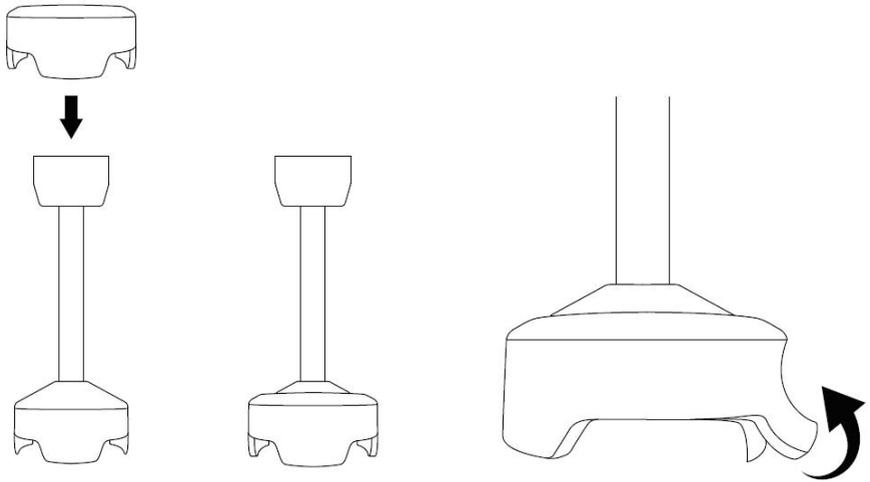

Using wall holder

The wall holder is intended for hanging hand blender and egg whisk or beaters.

1. Fixed the wall holder with traceless glue. It need 24 hours.
2. After 24 hours, then put the hand blender and egg whisk or beaters on the wall holder

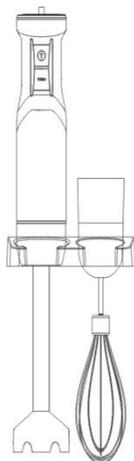

CLEANING AND MAINTENANCE

1. Before cleaning, unplug the appliance and detach the accessories.
2. Wipe the motor and whisk coupling units; do not immerse them in water. Other accessories can put the dishwasher or the water clean.
3. If food is not easily rinsed off the blade or whisk, place a drop of dish detergent in the mixing container with water. Plug the cord into the outlet. Immerse the blade end portion or whisk and operate the unit for about 10 seconds. Unplug, rinse under running water, and then dry.
4. When it will not be used for a long time, keep this appliance well-ventilated at the aridity of place to prevent damping the appliance's motor.

CAUTION:

The cutting edges of the blades are very sharp, it must be careful when cleaning.

Address:No.351 Yangmei Road, Cixi city, Zhejiang Province

Manufacturer:Cixi Lotek Electrical Appliance Co.,Ltd

Made In China

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

www.vevor.com/support