

# Installation

## Installation Steps

### **Step 1: Unbox and Inspect**

Remove the watering wand and all components from the packaging. Check for any visible damage or missing parts (wand, rubber seal gasket, etc.).

### **Step 2: Attach the Rubber Seal Gasket**

Locate the rubber seal gasket included in the package. Insert the gasket into the threaded connector at the base of the watering wand. Ensure it is seated properly to prevent leaks.

### **Step 3: Connect to Garden Hose**

Align the 3/4-inch Garden Hose Thread (GHT) on the watering wand with your garden hose connector. Screw the watering wand onto the hose by turning it clockwise. Tighten firmly by hand to ensure a secure, leak-free connection.

### **Step 4: Test for Leaks**

Turn on the water supply to check for leaks at the connection point. If leaks occur, turn off the water and tighten the connection further or reposition the rubber gasket.

### **Step 5: Adjust the Spray Pattern**

Rotate the spray head dial to select one of the 10 watering patterns: Shower, Flat, Full, Mist, Jet, Center, Cone, Angle, Vertical, or ½ Vertical. Test each pattern to find the one best suited for your task (e.g., gentle mist for hanging baskets, high-pressure jet for cleaning windows).

### **Step 6: Use the Thumb Flow Control**

Press the thumb control lever to start the water flow. Adjust the pressure by pushing or pulling the lever: Push forward for higher pressure. Pull back for lower pressure or to stop the flow.

### **Step 7: Adjust the 180° Swivel Head**

Tilt the 180° swivel head to the desired angle for optimal reach and coverage. Lock the head in place by tightening the ratcheting mechanism (if applicable).

### **Step 8: Begin Watering or Cleaning**

Use the watering wand for tasks such as: Watering hanging baskets, shrubs, and flower beds. Cleaning windows, cars, or patios. Enjoy the ergonomic handle and non-slip grip for comfortable, fatigue-free use.

## **Maintenance Tips**

After each use, turn off the water and release pressure by pressing the thumb control. Disconnect the wand from the hose and store it in a cool, dry place. Periodically check the rubber gasket for wear and replace if necessary.