


USE AND CARE GUIDE

**Park Trail Grey Wicker 4 pk Deep
Seating Set-Light Brown - Single chair**

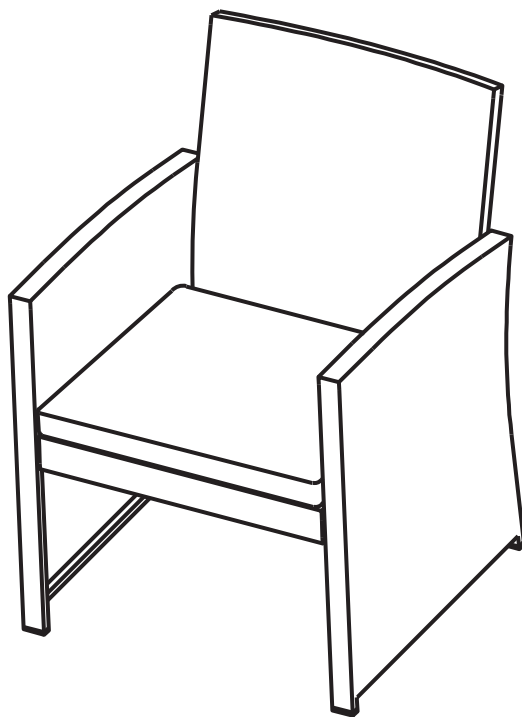

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this conversation set. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!!

Table of Contents

Table of Contents.....	2	Pre-Assembly-Single Chair	3
Important Safety Instructions.....	2	Planning Assembly	3
Save These Instructions	2	Hardware Included	3
Read All Instructions Before Use	2	Package Contents.....	4
Warranty	2	Assembly-Single Chair	5
What is Covered	2	Care and Cleaning-Single Chair.....	7
What is Not Covered	2		

Important Safety Instructions

SAVE THESE INSTRUCTIONS



WARNING: Never use this product as a support. Do not shake, lean, or climb on the product at any time.



WARNING: Do not place heavy objects on the product.

READ ALL INSTRUCTIONS BEFORE USE

When using a furnishing, basic precautions should always be followed, including the following:

To reduce the risk of injury to persons:

- a) Close supervision is necessary when this furnishing is used by, or near children, or disabled persons.
- b) Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

This single chair was made for the explicit purpose of providing outdoor functions and is not to be used as a toy. This product is not intended for inclement / severe weather in any form including, but not limited to: rain, hail, sleet, snow and / or wind. The manufacturer recommends storing and / or covering this product when formidable weather is approaching. Do not locate the product near open flames. Children under the age of 10, near the product, should be supervised by a competent adult at all times. This product is NOT intended for commercial use and will void the warranty.



CAUTION: Do not locate the product near any heat source.



CAUTION: When not in use, secure the product in a cool and covered location.

Warranty

1 YEAR LIMITED WARRANTY

WHAT IS COVERED

We warrant the single chair to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED


It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-877-527-0313 or visit www.HomeDepot.com.

Pre-Assembly - Single Chair


PLANNING ASSEMBLY

Read all instructions before assembly.
To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



NOTE: More than one person may be required to assemble this product.


HARDWARE INCLUDED - SINGLE CHAIR



NOTE: Hardware not shown to actual size.




Part	Description	Quantity
AA	Bolt M6*35	9
CC	Washer	9
DD	Hex Wrench	1

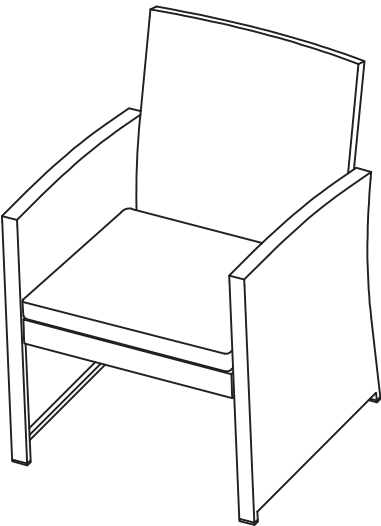

Pre-Assembly (continued)

PACKAGE CONTENTS

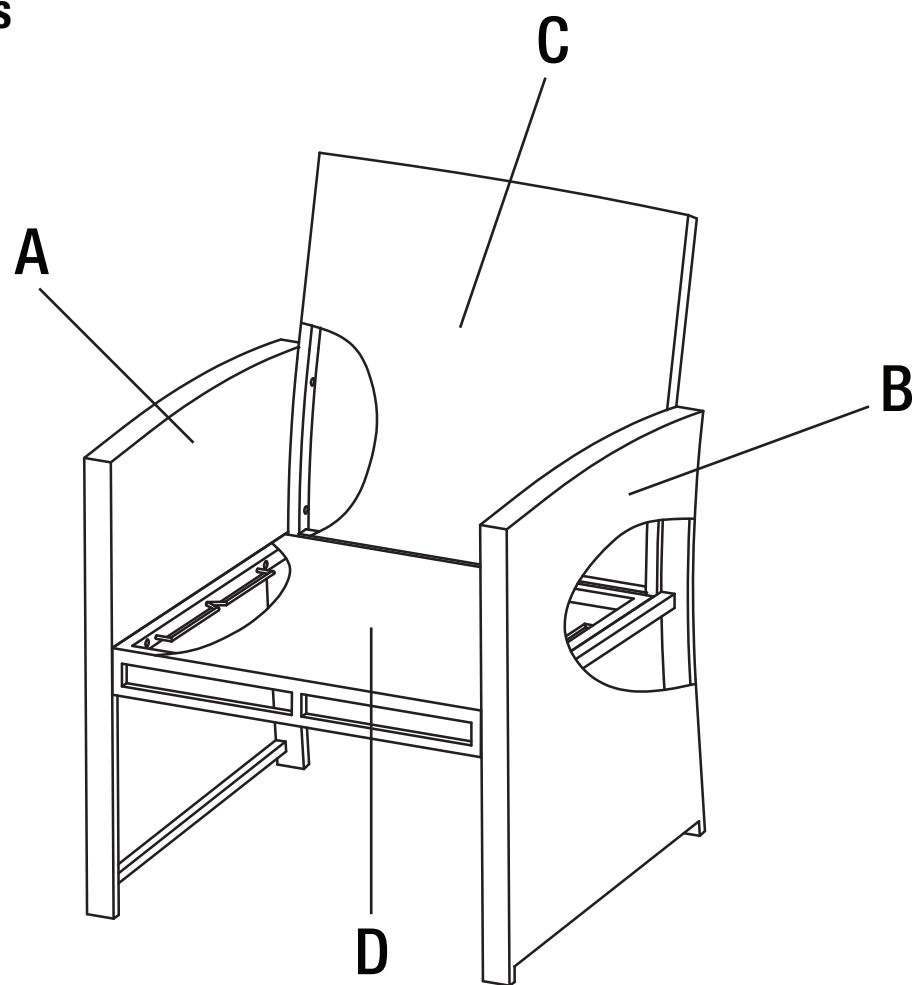


Part	Description	Quantity
A	Right Armrest	1
B	Left Armrest	1
C	Back	1
D	Seat	1

Assembly-Single Chair

1 Attaching the left armrest and seat to the back


- Attach the left armrest (B) to the back (C) using bolts (AA) and washers (CC). Loosely tighten using the hex wrench (DD). Repeat for the seat (D).

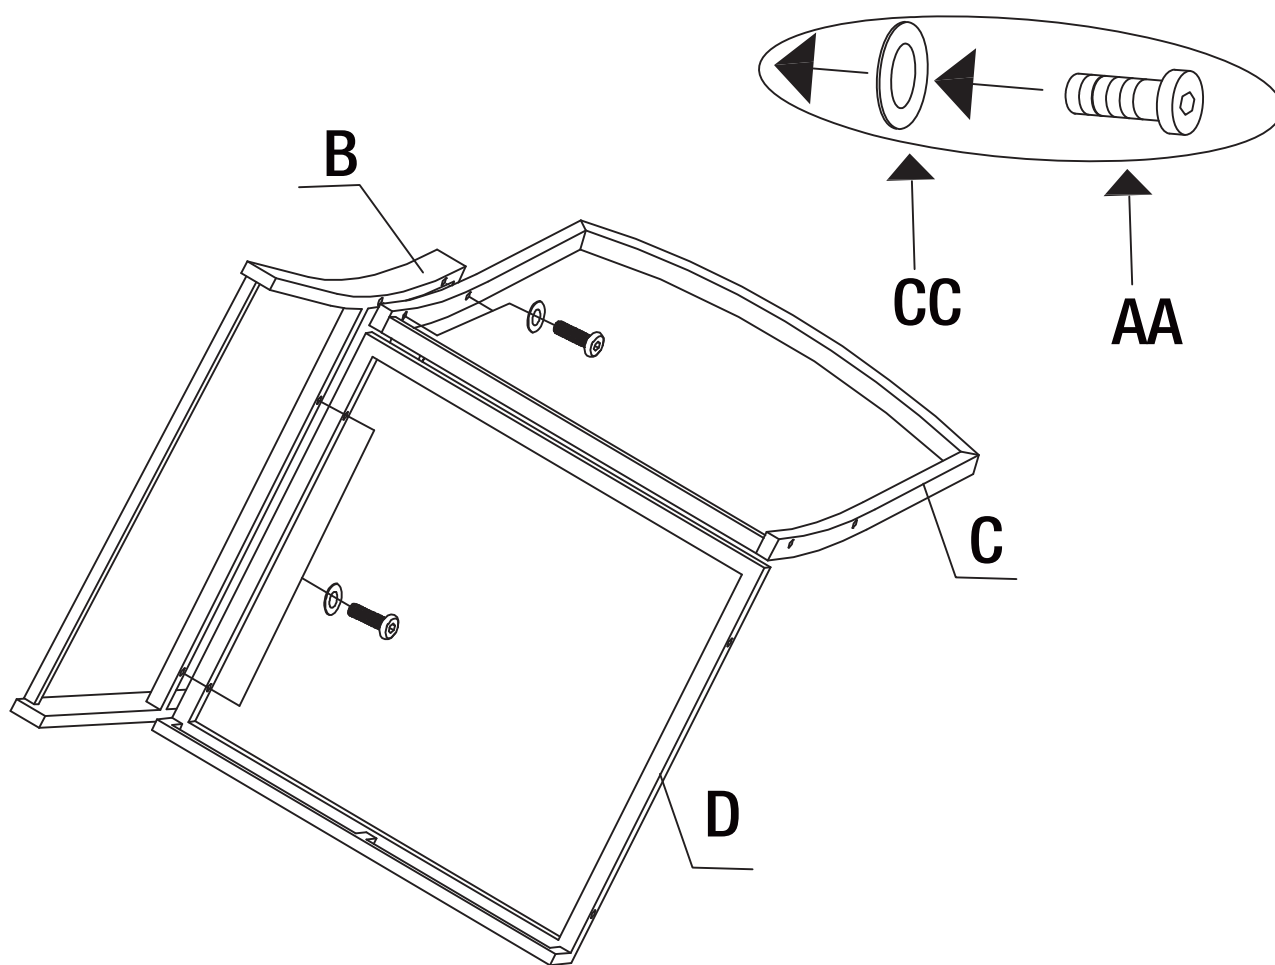

Assembly (continued)

2 Attaching the right armrest


- Attach the right armrest (A) to the back (C) and seat (D) using bolts (AA) and washers (CC). Loosely tighten using the hex wrench (DD).

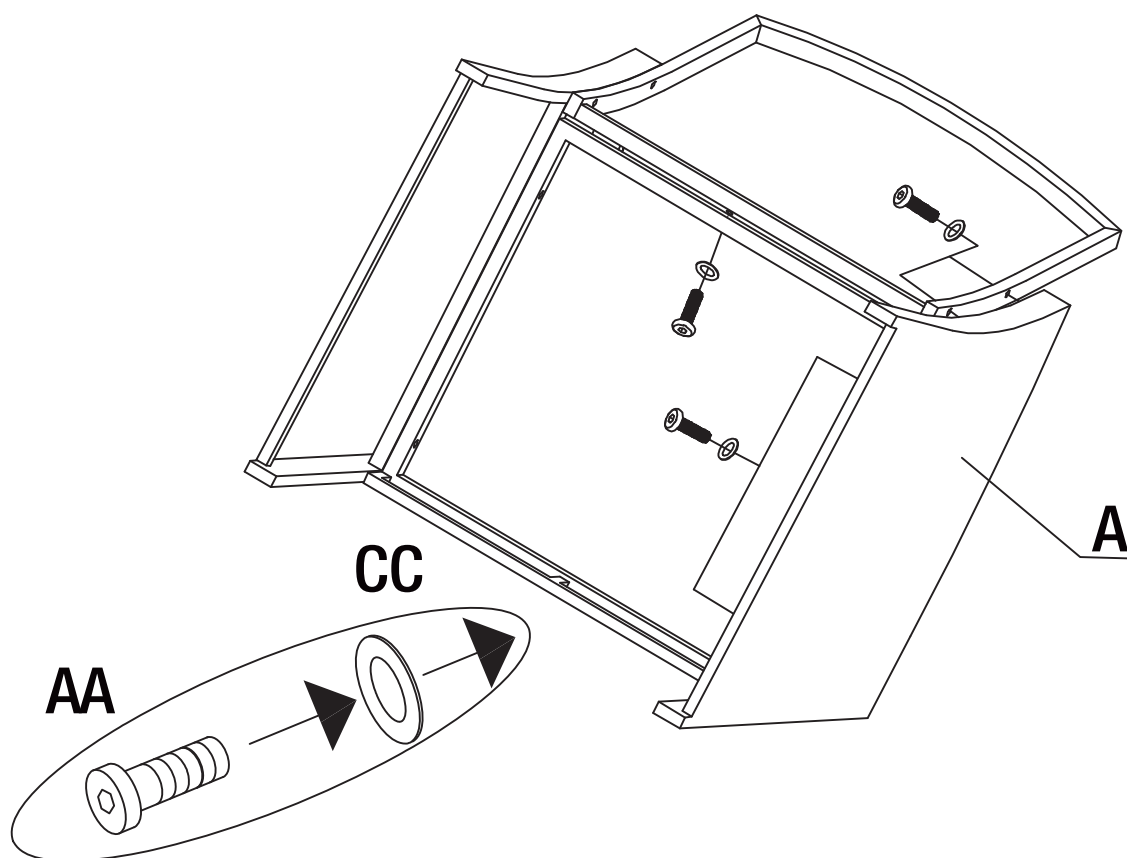

Assembly (continued)

3 Checking the single chair

- ☐ Fully tighten all bolts.
- ☐ Ensure all connections are secure before use.

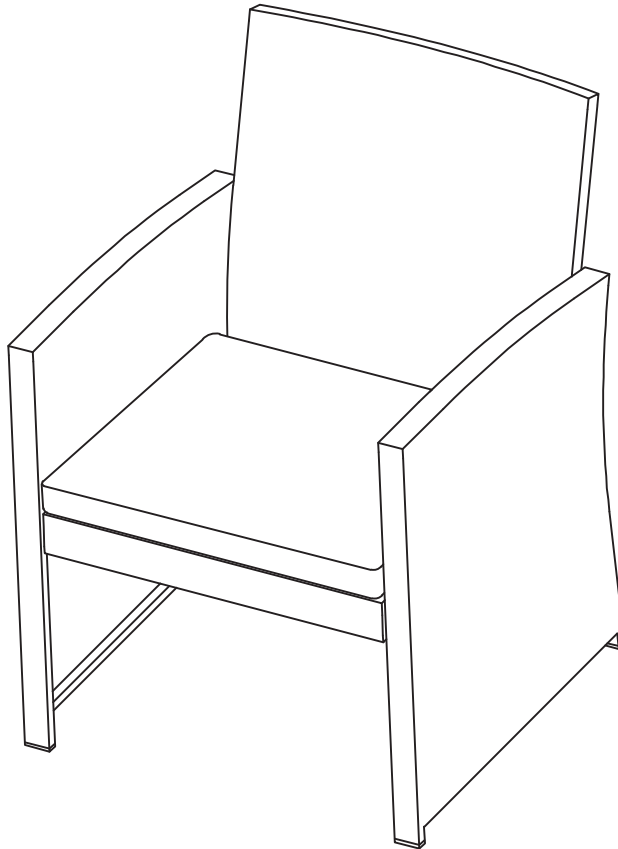

Care and Cleaning-Single Chair

- ☐ For best results, clean the chair with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- ☐ Do not clean with abrasive materials, bleach, or solvents.
- ☐ Store the chair in a dry, sheltered place when not in use.
- ☐ Keep the chair away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.

StyleWell.™

Questions, problems, missing parts? Before returning to the store,
call StyleWell Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday


1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.

USE AND CARE GUIDE

Park Trail Grey Wicker 4 pk Deep Seating Set-Light Brown - Loveseat

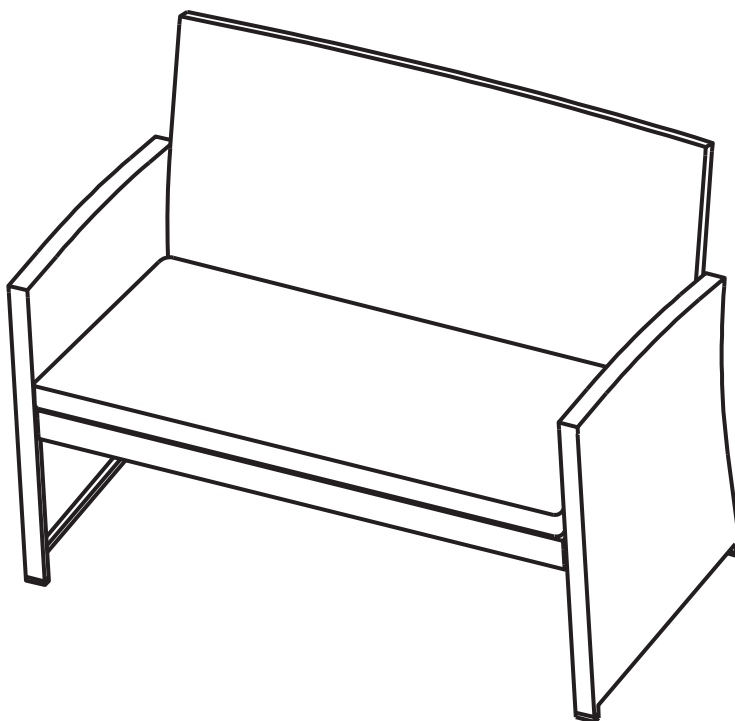

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this conversation set. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!!

Table of Contents

Table of Contents.....	2	Pre-Assembly- Love Seat	3
Important Safety Instructions.....	2	Planning Assembly	3
Save These Instructions	2	Hardware Included	3
Read All Instructions Before Use	2	Package Contents.....	4
Warranty	2	Assembly- Love Seat.....	5
What is Covered	2	Care and Cleaning-Love Seat.....	7
What is Not Covered	2		

Important Safety Instructions

SAVE THESE INSTRUCTIONS



WARNING: Never use this product as a support. Do not shake, lean, or climb on the product at any time.



WARNING: Do not place heavy objects on the product.

READ ALL INSTRUCTIONS BEFORE USE

When using a furnishing, basic precautions should always be followed, including the following:

To reduce the risk of injury to persons:

- a) Close supervision is necessary when this furnishing is used by, or near children, or disabled persons.
- b) Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

This loveseat was made for the explicit purpose of providing outdoor functions and is not to be used as a toy. This product is not intended for inclement / severe weather in any form including, but not limited to: rain, hail, sleet, snow and / or wind. The manufacturer recommends storing and / or covering this product when formidable weather is approaching. Do not locate the product near open flames. Children under the age of 10, near the product, should be supervised by a competent adult at all times. This product is NOT intended for commercial use and will void the warranty.



CAUTION: Do not locate the product near any heat source.



CAUTION: When not in use, secure the product in a cool and covered location.

Warranty

1 YEAR LIMITED WARRANTY

WHAT IS COVERED

We warrant the loveseat to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED


It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-877-527-0313 or visit www.HomeDepot.com.

Pre-Assembly - Love Seat


PLANNING ASSEMBLY

Read all instructions before assembly.
To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



NOTE: More than one person may be required to assemble this product.


HARDWARE INCLUDED - LOVE SEAT



NOTE: Hardware not shown to actual size.




Part	Description	Quantity
AA	Bolt M6*35	10
CC	Washer	10
DD	Hex Wrench	1

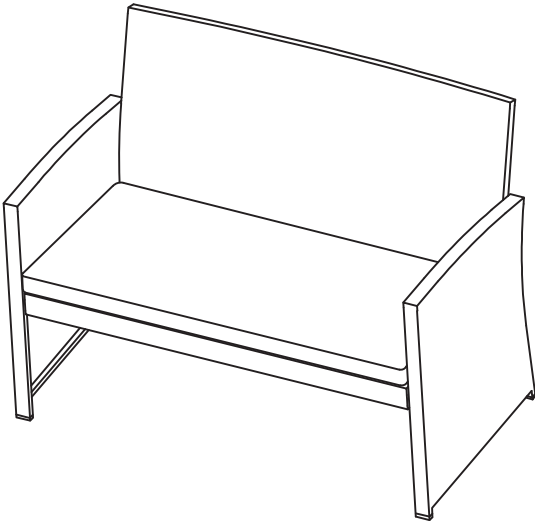

Pre-Assembly (continued)

PACKAGE CONTENTS

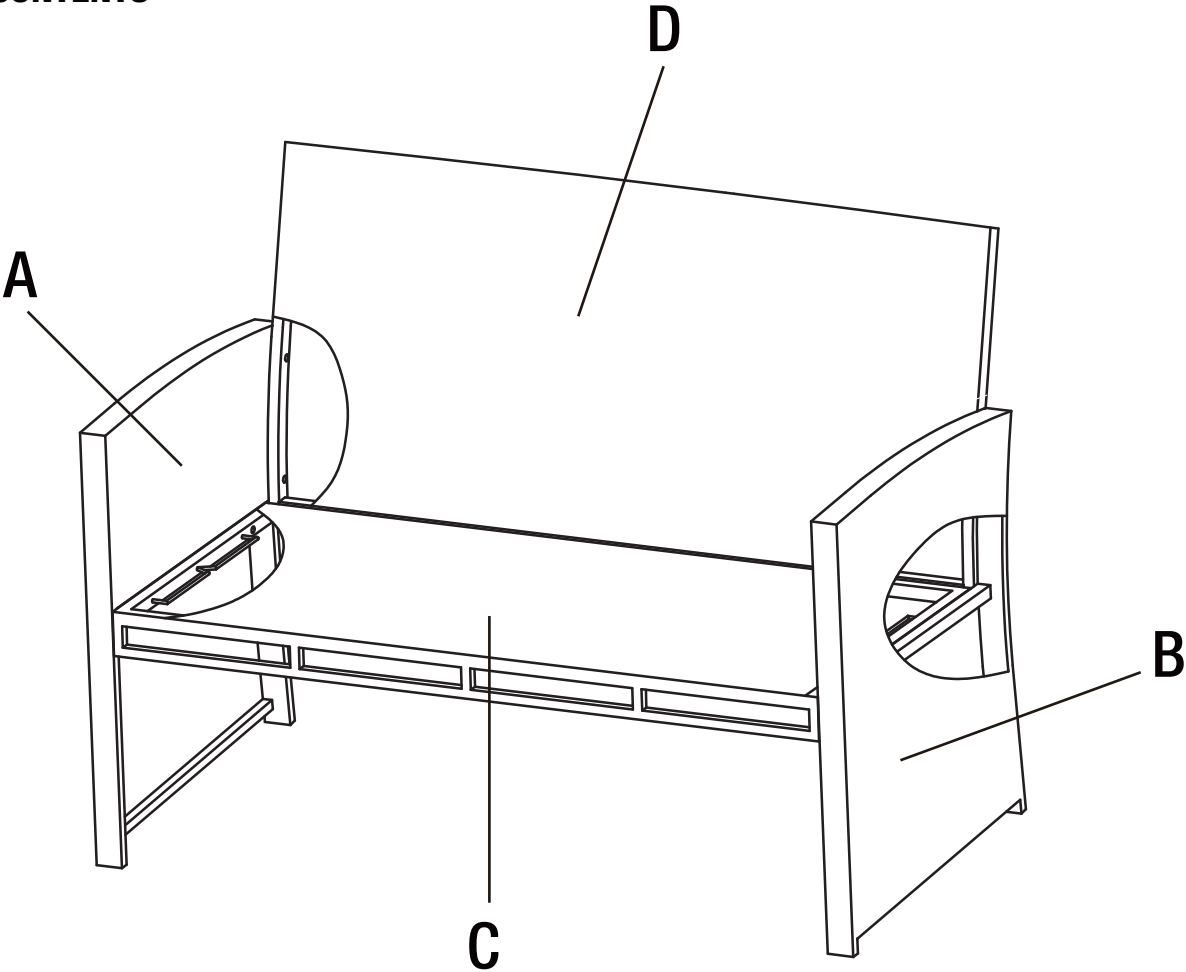


Part	Description	Quantity
A	Right Armrest	1
B	Left Armrest	1
C	Seat	1
D	Back	1

Assembly-Love Seat

1 Attaching the left armrest and seat to the back


- Attach the left armrest (B) to the back (D) using bolts (AA) and washers (CC). Loosely tighten using the hex wrench (DD). Repeat for the seat (C).

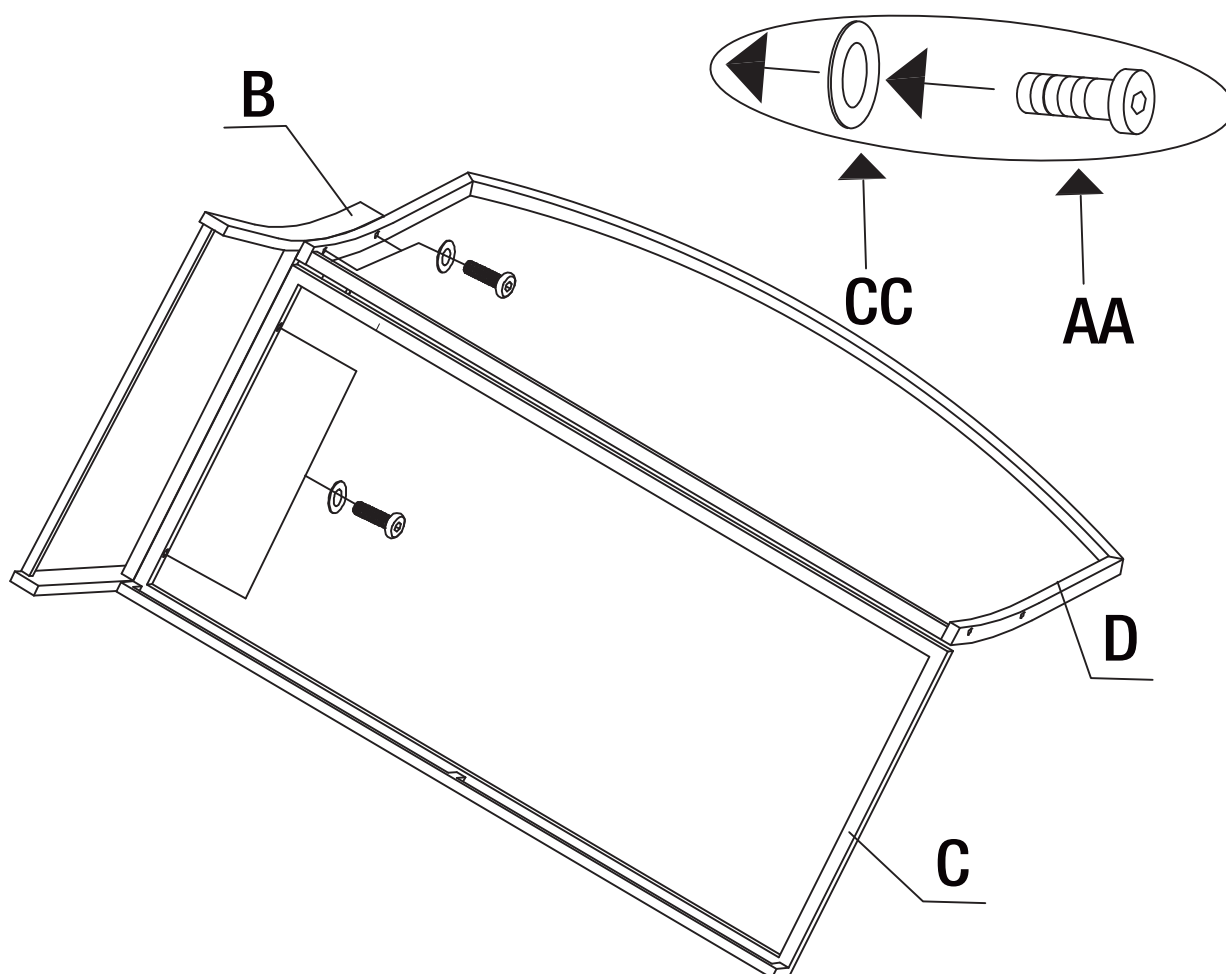

Assembly (continued)

2 Attaching the right armrest


- Attach the right armrest (A) to the back (D) and seat (C) using bolts (AA) and washers (CC). Loosely tighten using the hex wrench (DD).

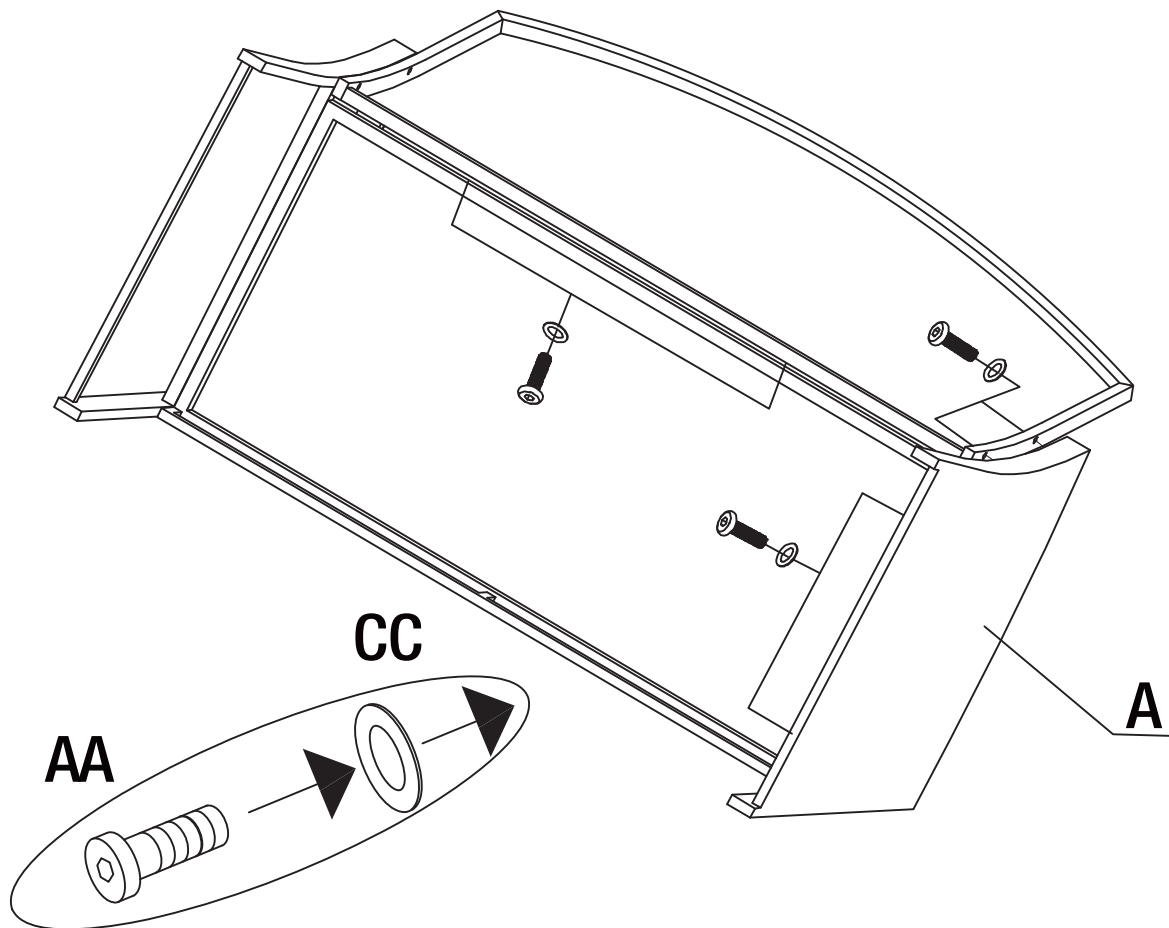

Assembly (continued)

3 Checking the love seat

- ☐ Fully tighten all bolts.
- ☐ Ensure all connections are secure before use.

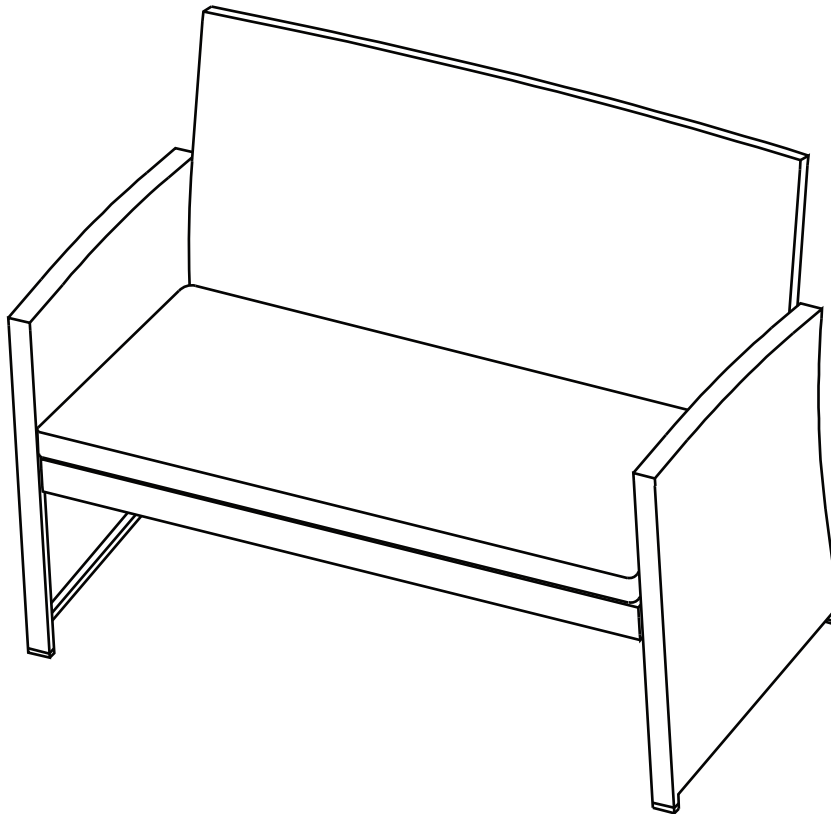

Care and Cleaning-Love Seat

- ☐ For best results, clean the love seat with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- ☐ Do not clean with abrasive materials, bleach, or solvents.
- ☐ Store the chair in a dry, sheltered place when not in use.
- ☐ Keep the chair away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.

StyleWell.™

Questions, problems, missing parts? Before returning to the store,
call StyleWell Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday


1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.

USE AND CARE GUIDE

Park Trail Grey Wicker 4 pk Deep Seating Set-Light Brown - Coffee Table

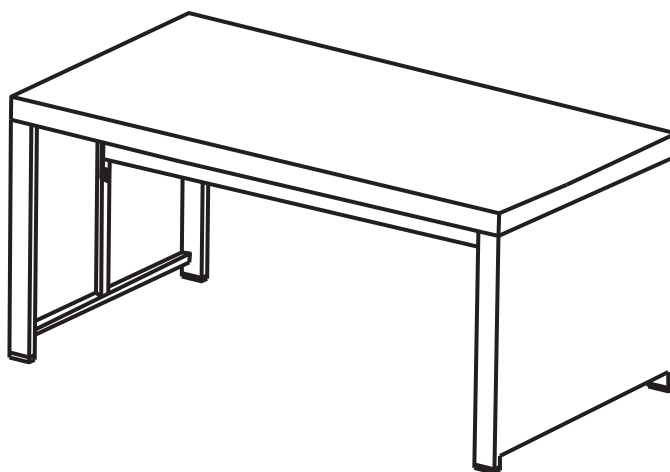

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this conversation set. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!

Table of Contents

Table of Contents.....	2	Pre-Assembly-Coffee Table	3
Important Safety Instructions.....	2	Planning Assembly	3
Save These Instructions	2	Hardware Included	3
Read All Instructions Before Use	2	Package Contents	4
Warranty	2	Assembly-Coffee Table	5
What is Covered	2	Care and Cleaning-Coffee Table.....	7
What is Not Covered	2		

Important Safety Instructions

SAVE THESE INSTRUCTIONS



WARNING: Never use this product as a support. Do not shake, lean, or climb on the product at any time.



WARNING: Do not place heavy objects on the product.

READ ALL INSTRUCTIONS BEFORE USE

When using a furnishing, basic precautions should always be followed, including the following:

To reduce the risk of injury to persons:

- Close supervision is necessary when this furnishing is used by, or near children, or disabled persons.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.

This coffee table was made for the explicit purpose of providing outdoor functions and is not to be used as a toy. This product is not intended for inclement / severe weather in any form including, but not limited to: rain, hail, sleet, snow and / or wind. The manufacturer recommends storing and / or covering this product when formidable weather is approaching. Do not locate the product near open flames. Children under the age of 10, near the product, should be supervised by a competent adult at all times. This product is NOT intended for commercial use and will void the warranty.



CAUTION: Do not locate the product near any heat source.



CAUTION: When not in use, secure the product in a cool and covered location.

Warranty

1 YEAR LIMITED WARRANTY

WHAT IS COVERED

We warrant the coffee table to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED


It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-877-527-0313 or visit www.HomeDepot.com.

Pre-Assembly - Table


PLANNING ASSEMBLY

Read all instructions before assembly.
To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



NOTE: More than one person may be required to assemble this product.


HARDWARE INCLUDED - TABLE



NOTE: Hardware not shown to actual size.




Part	Description	Quantity
AA	Bolt M6*35	4
BB	Bolt M6*15	4
CC	Washer	8
DD	Hex Wrench	1

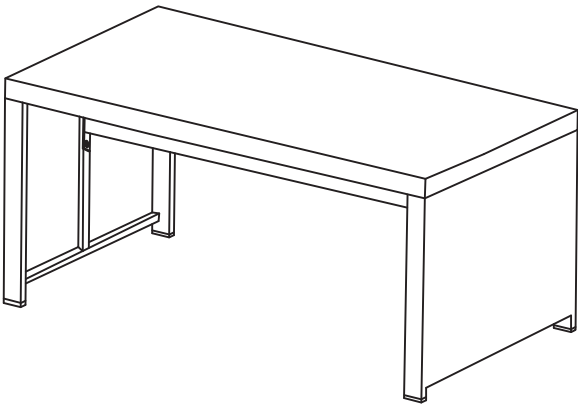

Pre-Assembly (continued)

PACKAGE CONTENTS

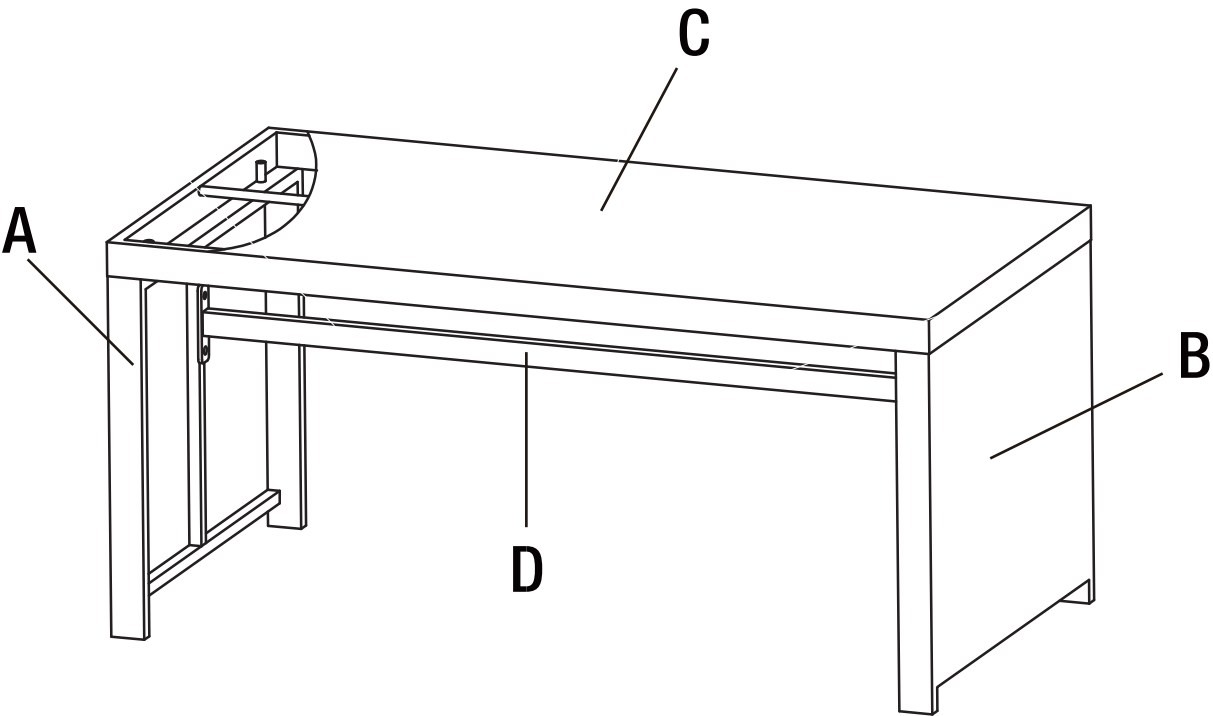


Part	Description	Quantity
A & B	Table Plate	2
C	Table Top	1
D	Support Tube	1

Assembly-Table

1 Attaching the table plates to the table top


- Attach the table plate (A) to the table top (C) using bolts (AA) and washers (CC). Loosely tighten using the hex wrench (DD). Repeat for the other table plate (B).

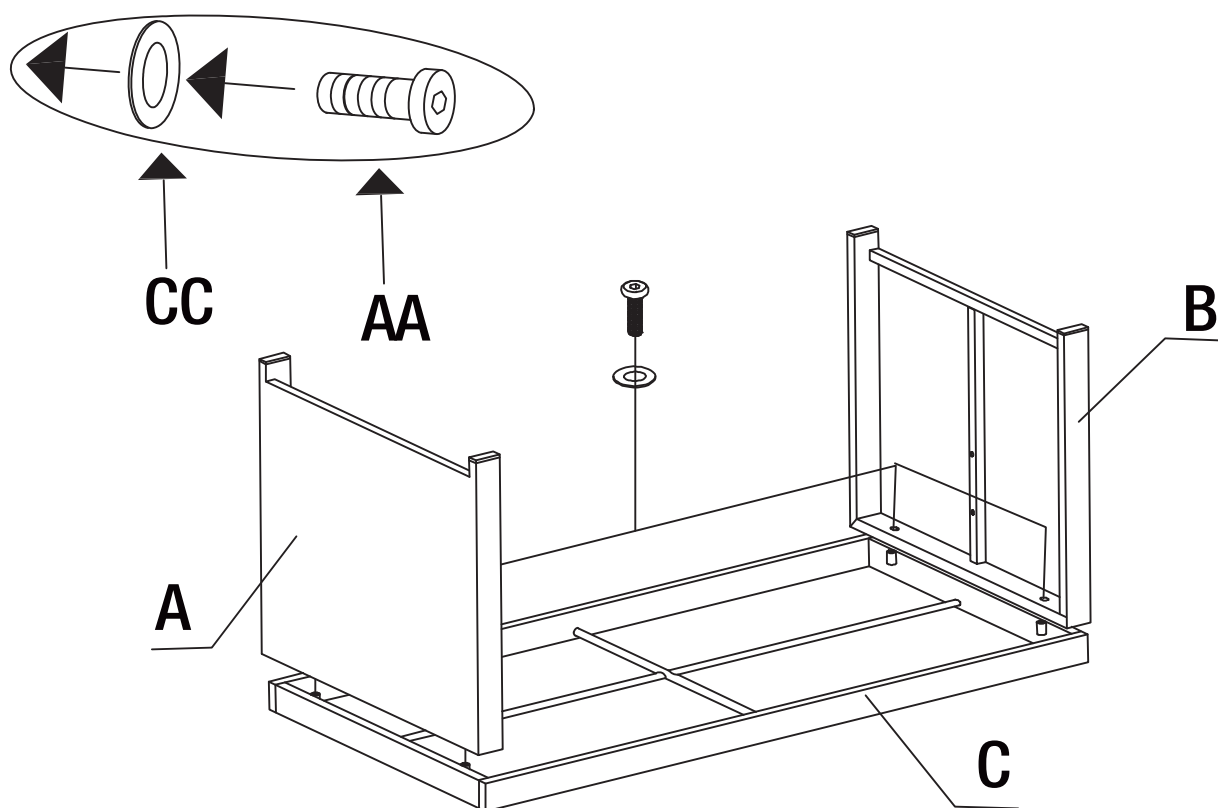

Assembly (continued)

2 Attaching the support tube


- Attach the support tube (D) to the table plates (A & B) using bolts (BB) and washers (CC). Loosely tighten using the hex wrench (DD).

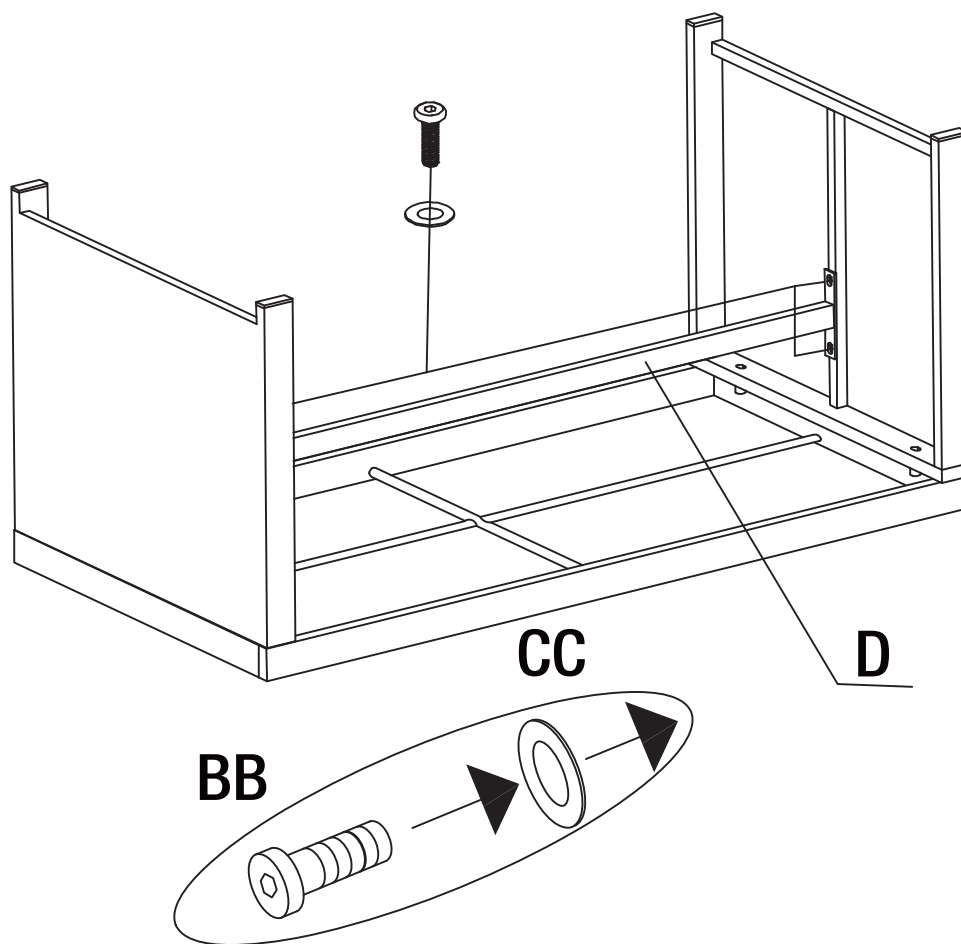

Assembly (continued)

3 Checking the table

- ☐ Fully tighten all bolts.
- ☐ Ensure all connections are secure before use.

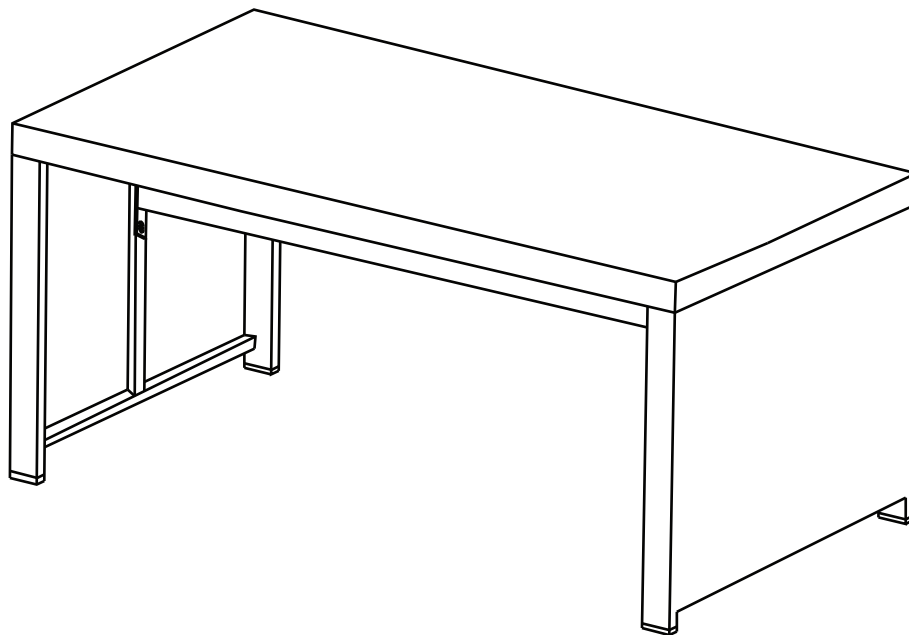

Care and Cleaning-Table

- ☐ For best results, clean the table with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- ☐ Do not clean with abrasive materials, bleach, or solvents.
- ☐ Store the table in a dry, sheltered place when not in use.
- ☐ Keep the table away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.

StyleWell.™

Questions, problems, missing parts? Before returning to the store,
call StyleWell Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.