

Installation Instructions for the Wheel to Pedal Lock (Keyed & Combination)

Wheel to Pedal Lock Installation

DO NOT INSTALL THE WHEEL TO PEDAL LOCK WHILE THE ENGINE IS RUNNING !!

Installation:

- 1) Prior to turning off the engine, be sure to have the steering turned completely in one direction and the wheel positioned in a manner so that one of the webbing arms is at the 6 o'clock position as shown in Figure 1.
- 2) Place the transmission in Park "P" (if available), set the emergency brake and turn off the engine. **DO NOT INSTALL THE WHEEL TO PEDAL LOCK WHILE THE ENGINE IS RUNNING !!**
- 3) If "tilt steering" is present, be sure to tilt the wheel completely down as far as it will go.
- 4) Unlock the Wheel to Pedal Lock and remove the keys.
- 5) Install the Wheel to Pedal Lock by first hooking the brake pedal arm(s) with the "J" shaped half as shown in Figure 2. Be sure to have the side with multiple holes facing you as shown.
- 6) While holding the "J" half in position on the brake pedal arm, slide the upper locking half (fingers down) through the steering wheel allowing them to straddle the webbing arm in the 6 o'clock position as shown in Figure 3.
- 7) Guide the upper locking half (while in the unlocked position) to receive the lower "J" half as shown in Figure 4.
- 8) Once both halves are properly in place, depress the locking button by maintaining slight pressure and adjusting the two halves, so the locking pin aligns with the appropriate hole as shown in Figure 5.
- 9) Test to see that you have a snug fit. Adjust as needed.
- 10) Secure keys in a safe place.

Removing the Wheel to Pedal Lock

DO NOT ATTEMPT TO REMOVE THE WHEEL TO PEDAL LOCK WHILE THE ENGINE IS RUNNING !!

- 1) Insert key into the lock mechanism and turn clockwise $\frac{1}{4}$ turn so the lock button pops out. You may need to adjust the two halves if pressure is on the locking pin and it cannot be released.
- 2) Slide the two halves apart and remove them from the brake pedal arm(s) and steering wheel.
- 3) Secure the Wheel to Pedal Lock in a location that will allow for safe and proper equipment operation.

Setting your combination

The lock is preset from the factory at 0000.

1. Unlock the mechanism by setting the four dials to the preset combination and press inward causing mechanism to "pop out".
2. Insert the special key in the keyhole, pressing in firmly, and turn one quarter turn in either direction. (Key will click into place.)
3. Set numerical combination of choice. Turn key to original position, with key in line with locking device.
4. Remove key and **RECORD YOUR COMBINATION.**
To lock, depress mechanism and scramble numbers.

The Equipment Lock Company

Toll Free: 1.866.Lok it up (565.4887) • Ph: 540.722.1011 • Fax: 540.722.1110

www.equipmentlock.com

info@equipmentlock.com



Figure 1



Figure 2



Figure 3



Figure 4



Figure 5

The Equipment Lock Company Warranty Information

The Equipment Lock Company (TELC) Limited Warranty hereby warrants the original purchase of any new TELC device that the device shall be free from defect in material and/or workmanship. This warranty shall last for a period of one year (365 days) from the date of purchase. Should any such defect arise within the warranty period, TELC shall replace the defective device with a new one of the same type. Under no circumstances, however, shall TELC be required to refund the purchase price of any device. The warranty does not cover any failure of or damage to the product resulting from accident, misuse or alteration of the product or failure to follow manufacturer's operating instructions. This warranty does not cover damage caused by use of any attachment not original equipment of the product. TELC will not be liable for damages or costs associated with the loss of keys or number code. TELC will not be liable for any damage, injury or loss caused by the use of the product other than indicated in the manufacturers' instructions. **TELC will not be liable for any damage, injury, death or loss caused by the use of the product.** TELC will not be liable for any damage to the interior or exterior of a machine, equipment or property caused by product and shall not be liable for loss of or damage to a vehicle, property or its contents. TELC disclaims any liability for loss of or damages resulting from delay or loss of use and service, or repair, or for loss or damaged devices, or for any incidental consequential negligence or other fault on the part of the manufacturer or others. The implied warranties on this product shall be in effect only for the duration of the expressed warranty period as set forth above and thereafter, there shall be no warranties, either express or implied, including warranties of merchantability or fitness for particular purpose on TELC products. Install and remove TELC products only after all moving parts are safely on the ground, the parking brake is on and the engine is turned off. Dispose of or store properly any unused small parts or packages with this device. Each device contains only two unique keys. TELC will not send additional keys after the purchase of a locking device unless requested in writing. TELC will not be held responsible for loss or damage to device, machine, equipment or property, if keys are lost or stolen or if combination codes are forgotten.

TELC products cannot stop all theft, but certainly can prevent theft in most cases. Additionally, TELC products may prevent vandalism, joyrides, and other trades from borrowing your machine. Contact your insurance agent to learn of a deduction you may be eligible for by using these products. Or, have your insurance agent contact TELC directly.

All of The Equipment Lock Company products are patented or patent pending.

TELC will not be liable for any damage, injury, death or loss caused by the use of the product.